

OPEL - GM DELCO E83 (Gasoline)




DRIVER: Tool Boot mode → Motorola Freescale
BAM → Freescale SPC5565 Delco E83
MICRO: Freescale SPC5565

INFO

(EN) Set the tool as shown in the photo, connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.

(IT) Impostate lo strumento come mostrato nella foto, collegate il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: +12V | BLACK: GROUND | BLUE: CAN-H | ORANGE: CAN-L

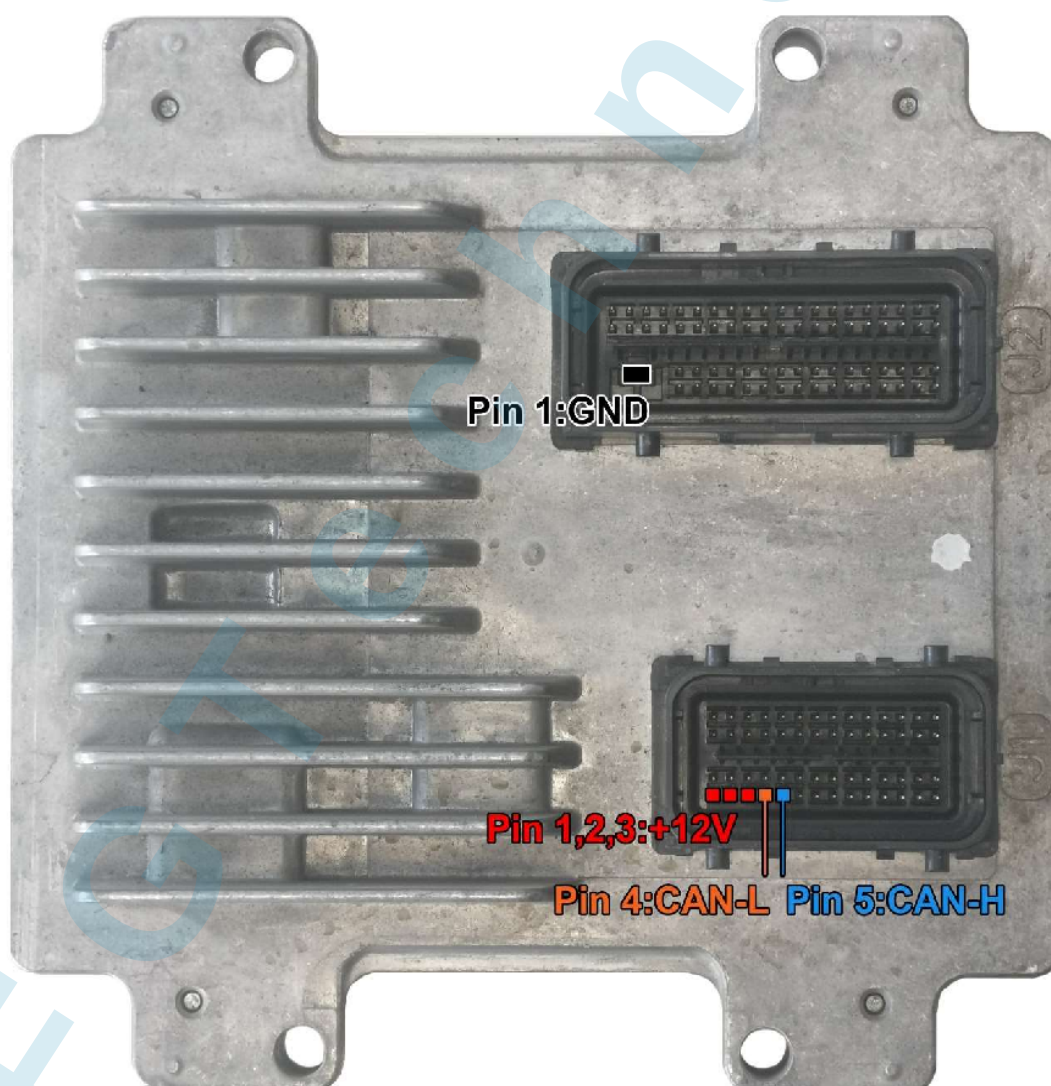

(EN) Continued on next page...


(IT) Segue a pagina successiva...

(EN) Connect the wires of the Tricore Cable and do three link on the Ecu card as pictured.

(Power the instrument from the benchplus adapter with a battery or bench power supply)

(IT) Collegare fili del Cavo Tricore e fare tre ponti sulla scheda della Ecu come in foto.

(Alimentare lo strumento dall'adattatore benchplus con una batteria o un alimentatore da banco)

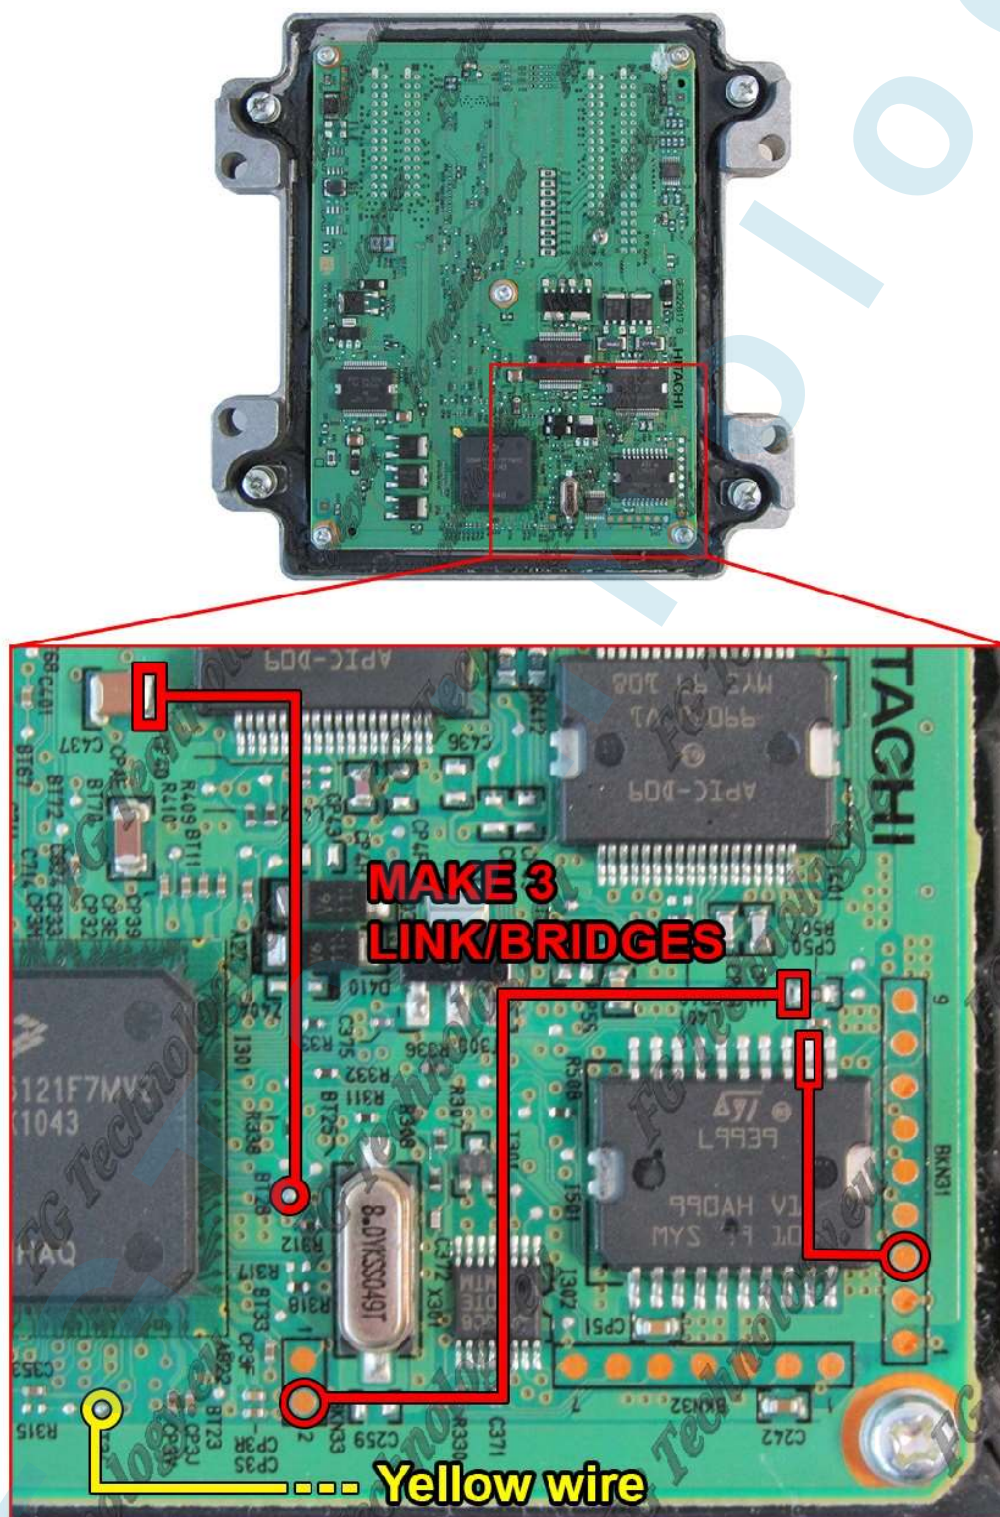

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.