


Nissan Hitachi HW2 - Nissan QX 5.6 - Renault A56-Y8x




READ THE ECU DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER

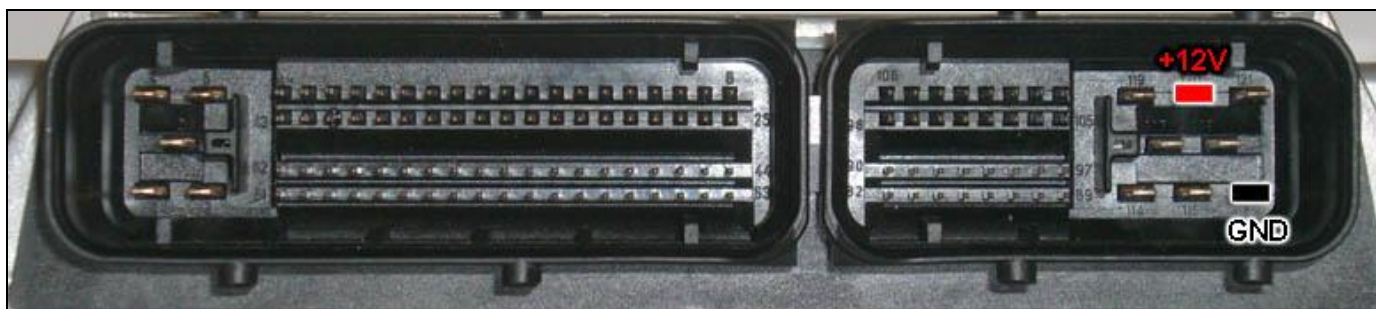

2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

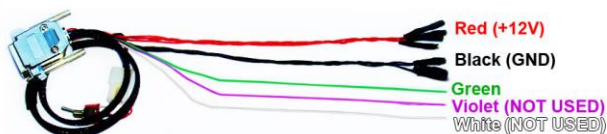


3 - USE THE COLOR FLAT CABLE




4 - DO A LINK AND USE A RESISTANCE OF 1Kohm


STEP 1/2:

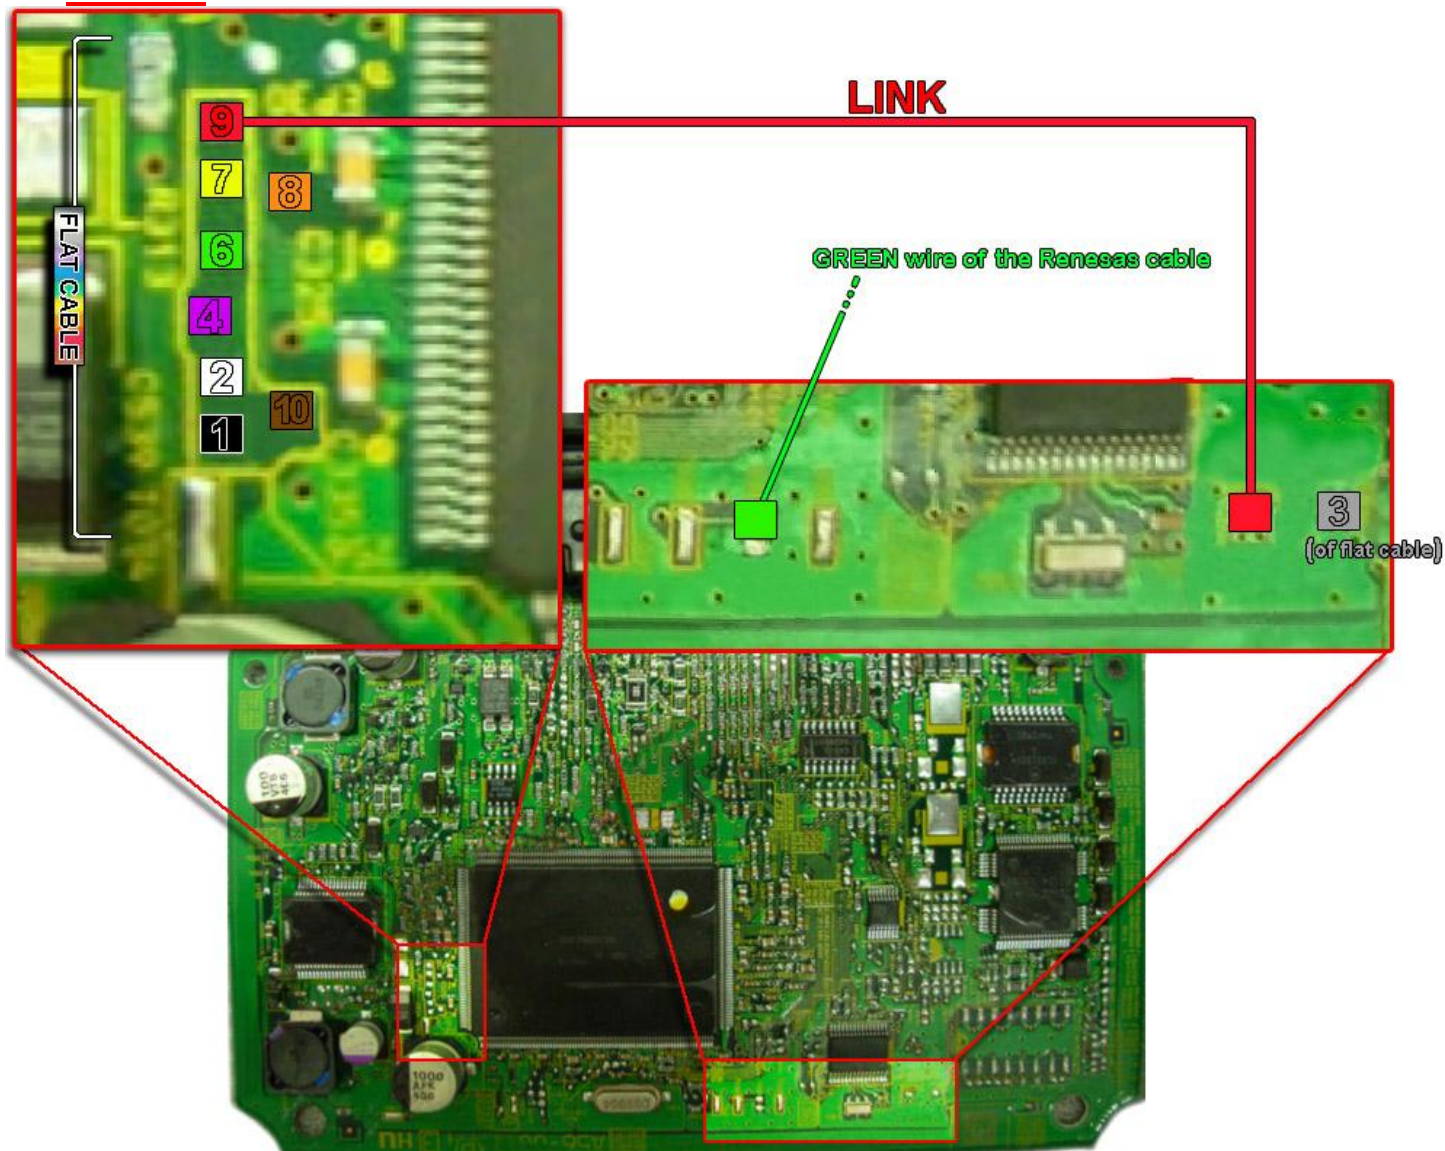

STEP 2/2 Nella parte inferiore / Backside:

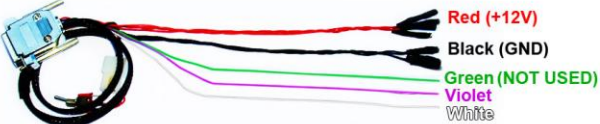

WRITE THE ECU			
DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE			
1 - REMOVE THE STANDARD ADAPTER 	2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD 	3 - DO A LINK	4 - USE A RESISTANCE OF 1 Kohm

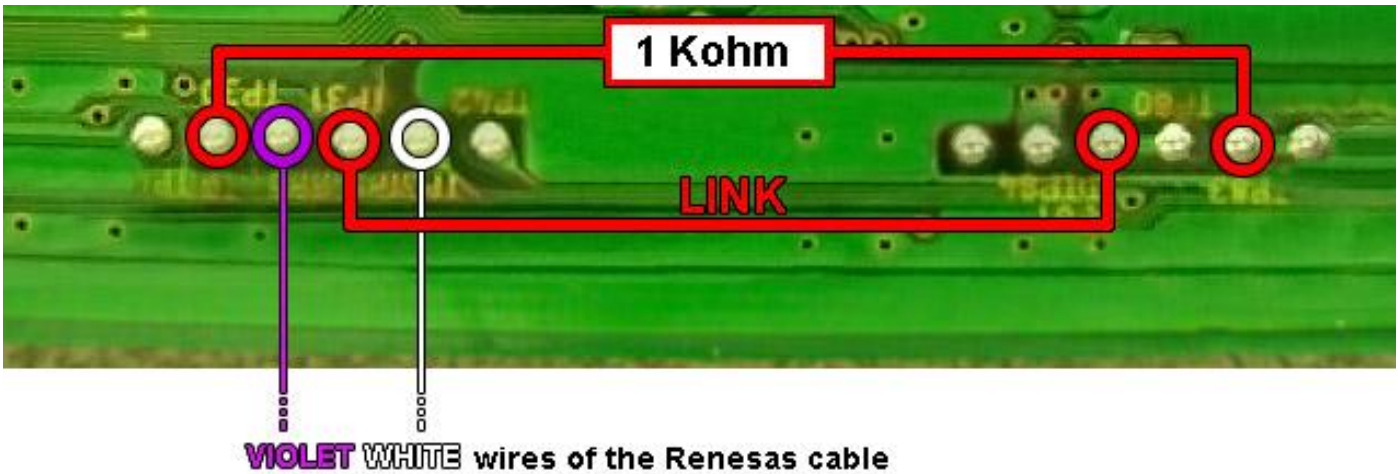

VIOLET WHITE wires of the Renesas cable