


Nissan Hitachi MEC73

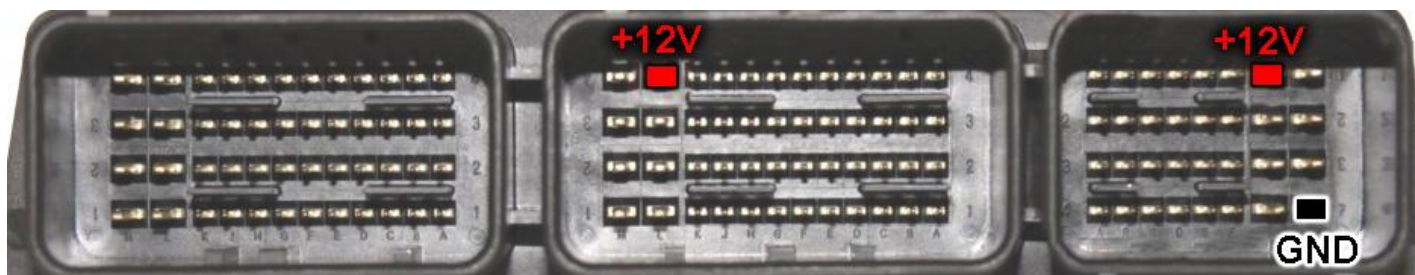


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD



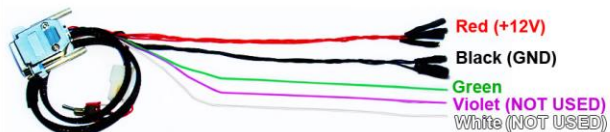


3 - USE THE COLOR FLAT CABLE




4 - DO FOUR LINKS

STEP 1/2 (FRONTSIDE):

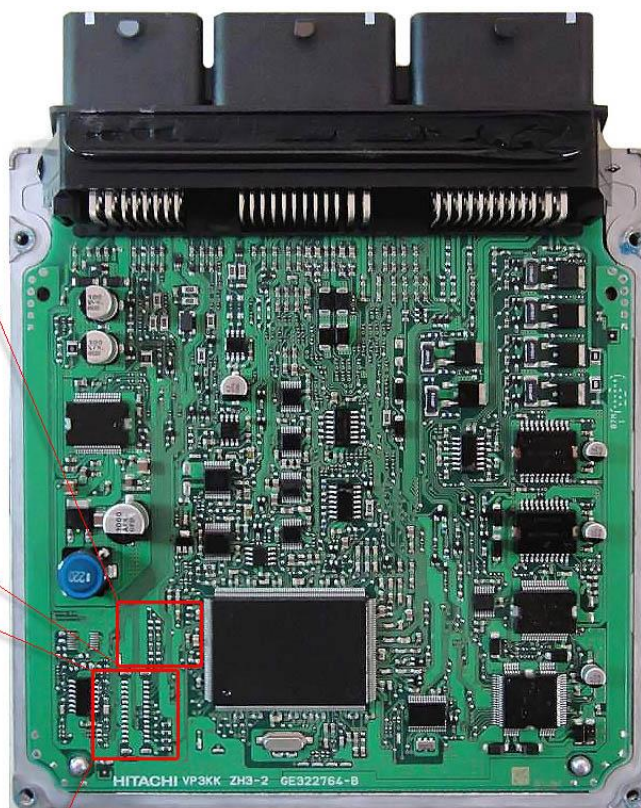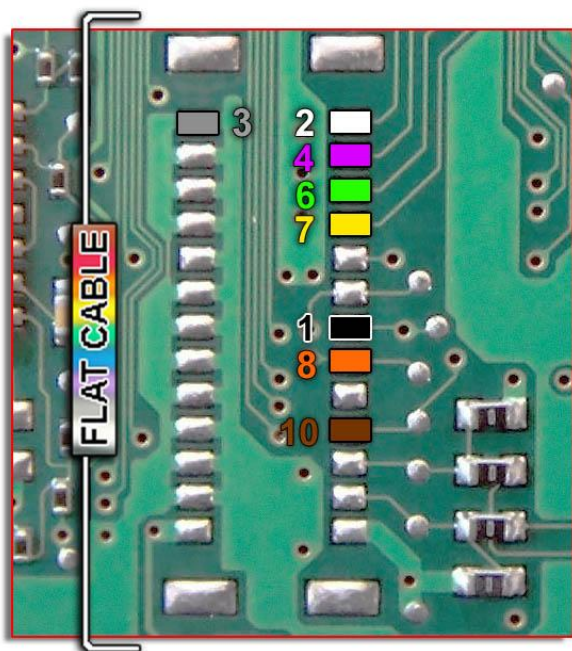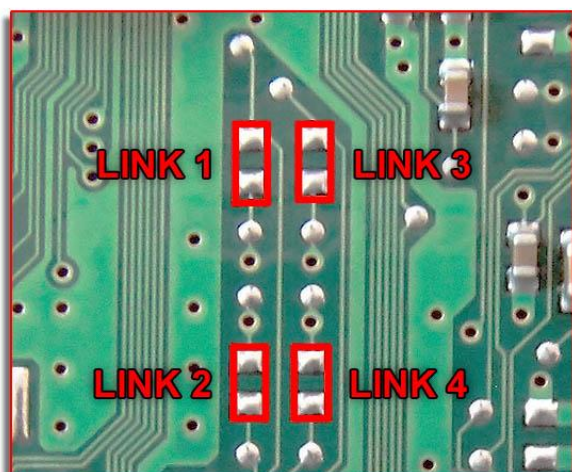

STEP 2/2 (BACKSIDE):

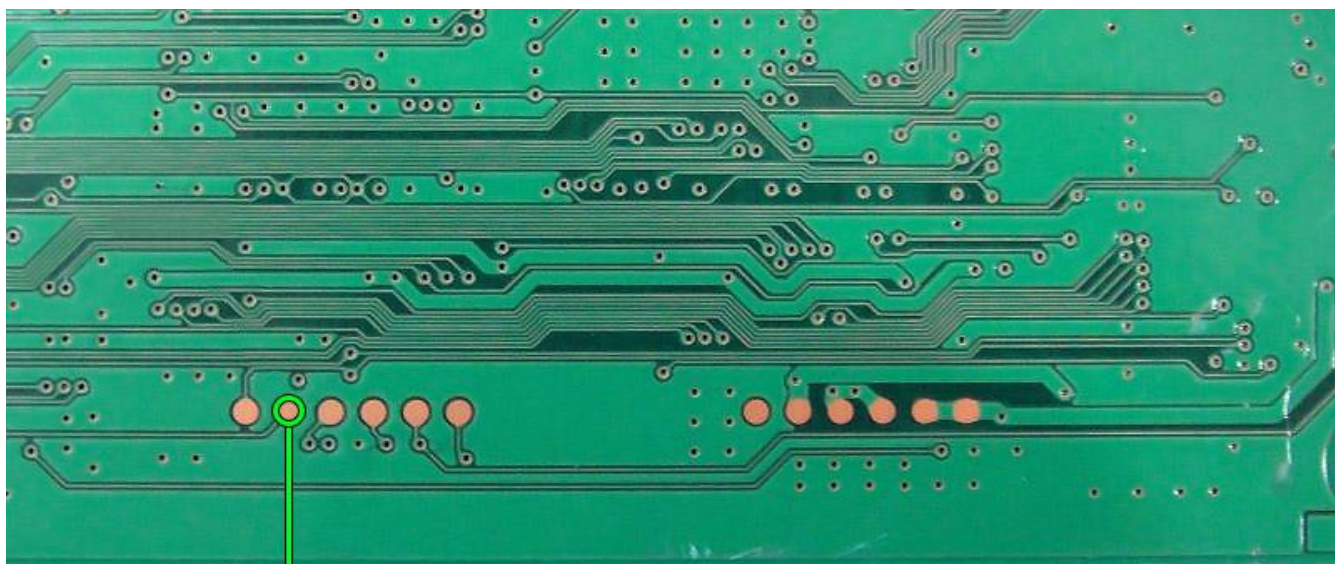

GREEN wire of the Renesas cable


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

- 1 - REMOVE THE STANDARD ADAPTER



- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

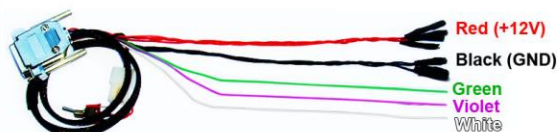

- 3 - USE A RESISTANCE OF 560 ohm

- 4 - USE A RESISTANCE OF 320 ohm

