


Nissan Micra Hitachi

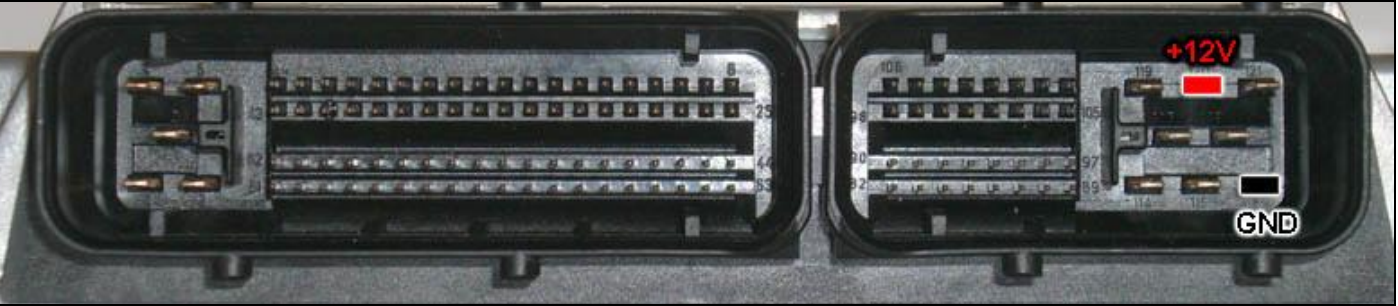

READ THE ECU DRIVER TO USE: *BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD*


READ THE ECU DRIVER TO USE: *BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD*

- 4 - DO A LINK AND
USE A RESISTANCE
OF 1Kohm




STEP 1/2:

GREEN wire of the Renesas cable

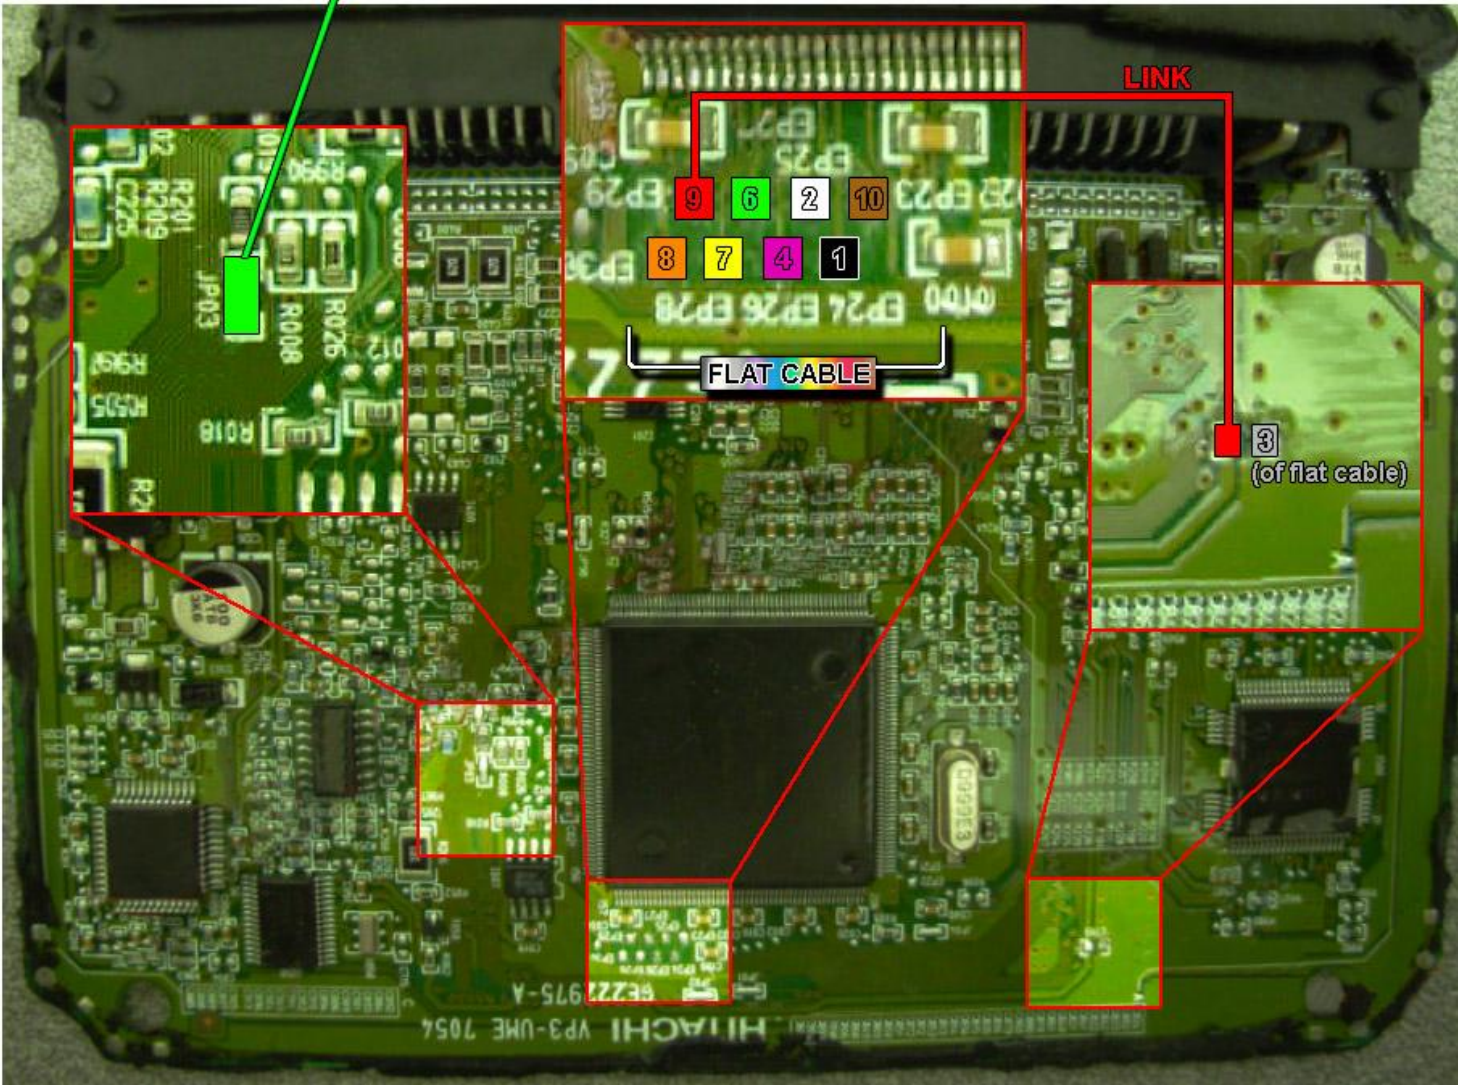

STEP 2/2:

Saldare una resistenza da 1KOhm nell'altro lato inferiore della scheda come in figura:
Join a resistance 1KOhm in the backside of the electric card like in figure:

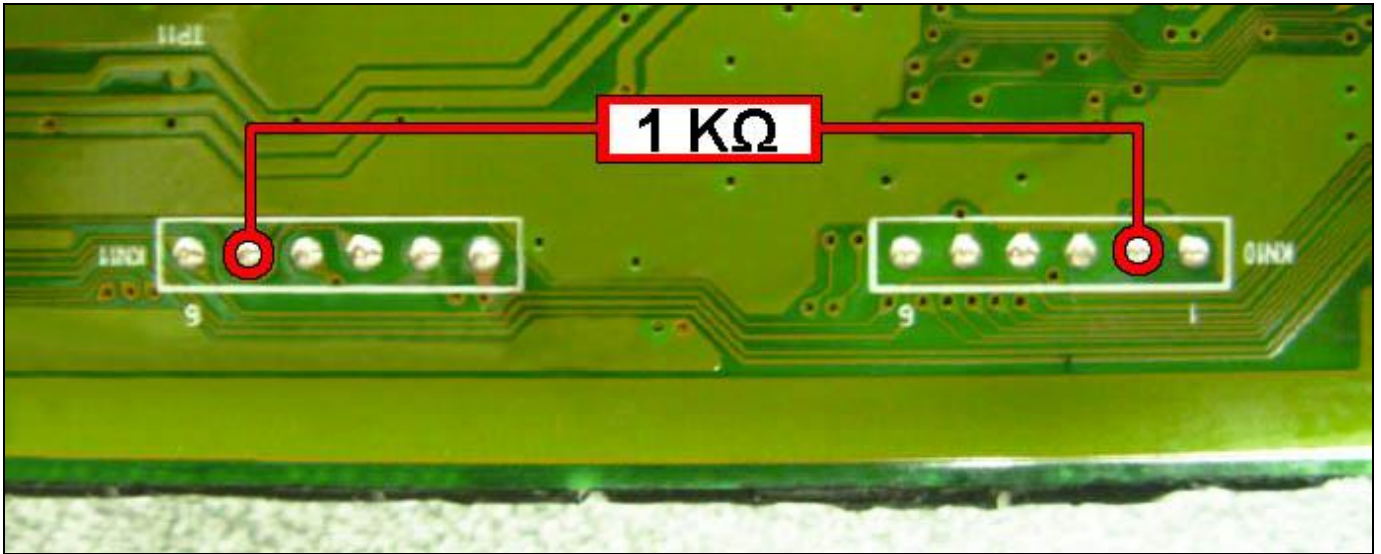


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

1 - REMOVE THE STANDARD ADAPTER




2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

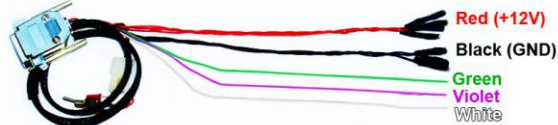

3 - DO A LINK

4 - USE A RESISTANCE OF 1 Kohm

STEP 1/2:

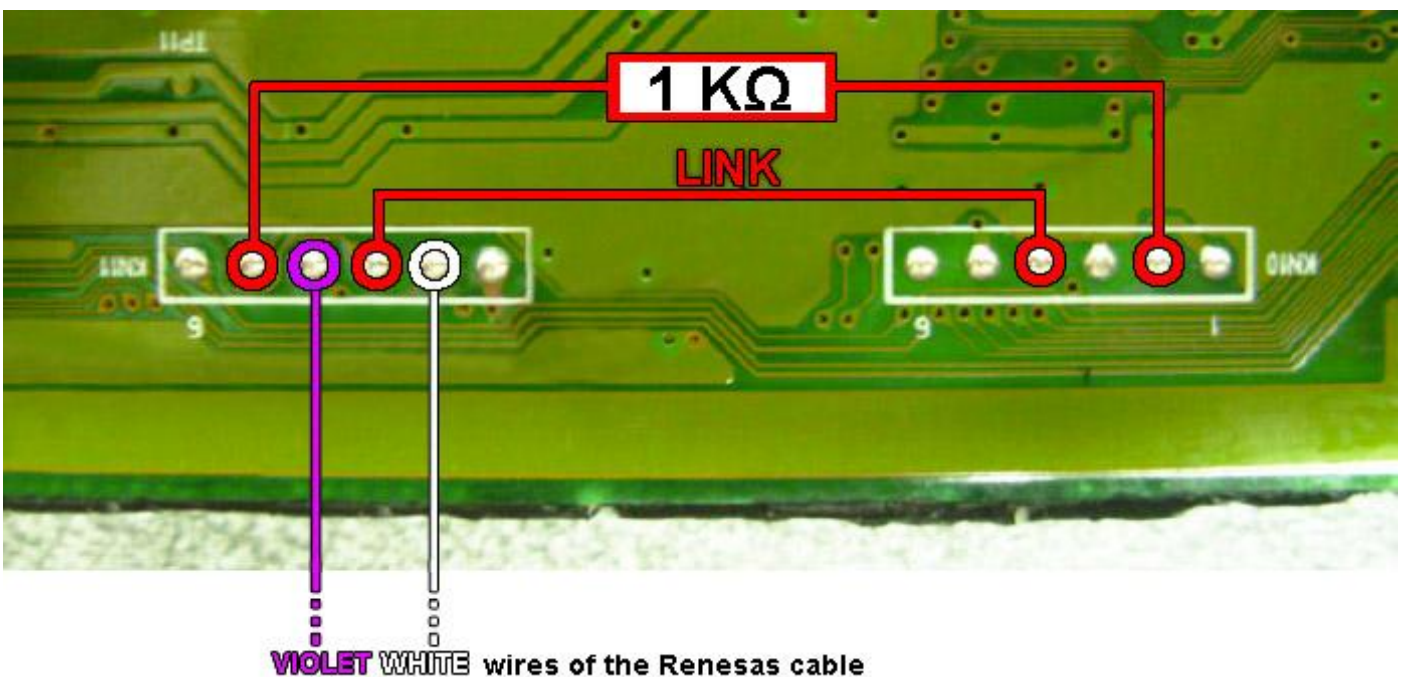

STEP 2/2:

Saldare inoltre i fili verde e nero del cavo Renesas:

Join green and black wires of Renesas cable:

