

VOLVO
DENSO MB279700 (Gasoline / Diesel)



FASE 1: LETTURA ECU
FASE 2: SBLOCCO ECU

Connettere il seguente pinout e utilizzare il driver:

CAR > VOLVO > TOOLS VOLVO >
UNLOCK DENSO MB279700 9641 SH72546R CAN


Con questo driver puoi cliccare il pulsante **Leggi file** per la lettura e il pulsante **Sblocco** per sbloccare la ECU e abilitare la scrittura.

STEP 1: READ ECU
STEP 2: UNLOCK ECU

Connect the following pinout and using the driver:

CAR > VOLVO > TOOLS VOLVO >
UNLOCK DENSO MB279700 9641 SH72546R CAN

With this driver click **Read file** button for reading, and click **Unlock** button for unlocking the ECU and enable the writing.

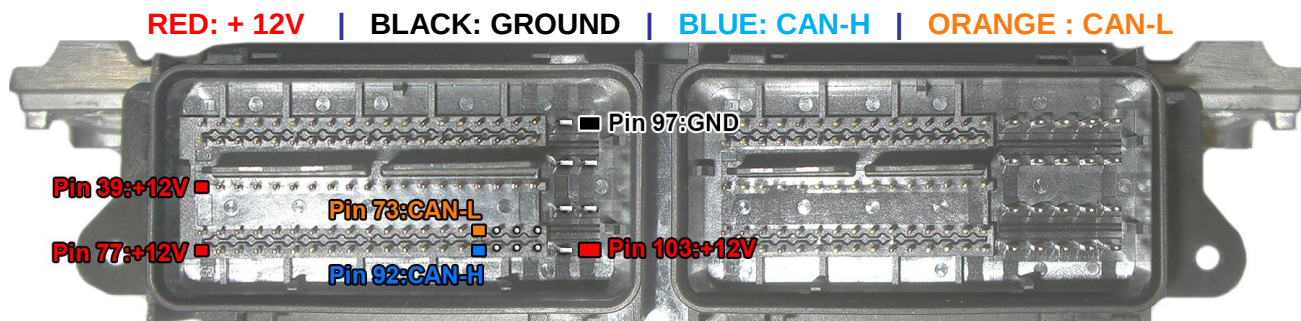

FASE 3: SCRITTURA

Ora è possibile montare la centralina all'auto e usare il driver seriale OBD per scrivere:

CAR > VOLVO > [modello] >
2.0 DENSO MB279700 9641 SH72546R CAN


È possibile anche scrivere la centralina a banco collegando il seguente pinout. (cambia la posizione della linea CAN)

STEP 3: WRITE

Now you can mount the ECU in the car and use the serial OBD driver to write:

CAR > VOLVO > [model] >
2.0 DENSO MB279700 9641 SH72546R CAN

It is also possible to write the ECU on the table connecting the following pinout. (change CAN position)

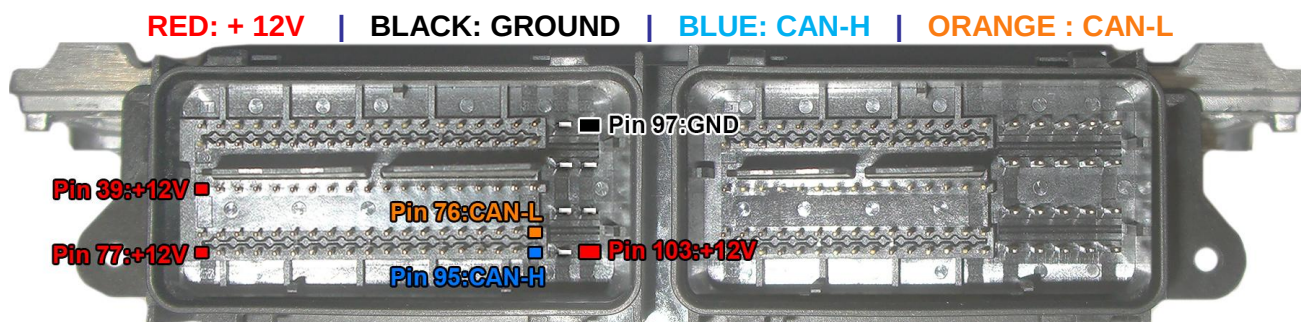

Segue a pagina successiva..

Follow to next page..

Vedi spiegazione di utilizzo del driver con un video online cliccando il seguente link:

See explanation of using the driver with an online video by clicking the following link:

<https://youtu.be/hCJilA3eQbI>

