

Per comunicare con il micro MPCZ561 (gestione motore) andare alla sezione :
- BDM MPC55x/56x

For micro MPCZ561 (engine management) go to:
- BDM MPC55x/56x

 Premessa

 DRIVER LIST

 BDM MPC55x/MPC56x

 Processor

 BDM Motorola

 BDM Bosch

 Adapter for press to EOBD2

 Driver

 PRESS AND ADAPTERS

 CAR

 TRUCK
