



ECU Vag ME17.5 - TC1766 Internal Flash

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver:



BOOT MODE TRICORE SAK TC1766

STEP1: (READ/WRITE IN BOOT MODE)

Set in Boot Mode the ECU, so connect the following pinout and solder the resistance like shown in the figure.

Use the driver:

BOOT MODE TRICORE SAK TC1766

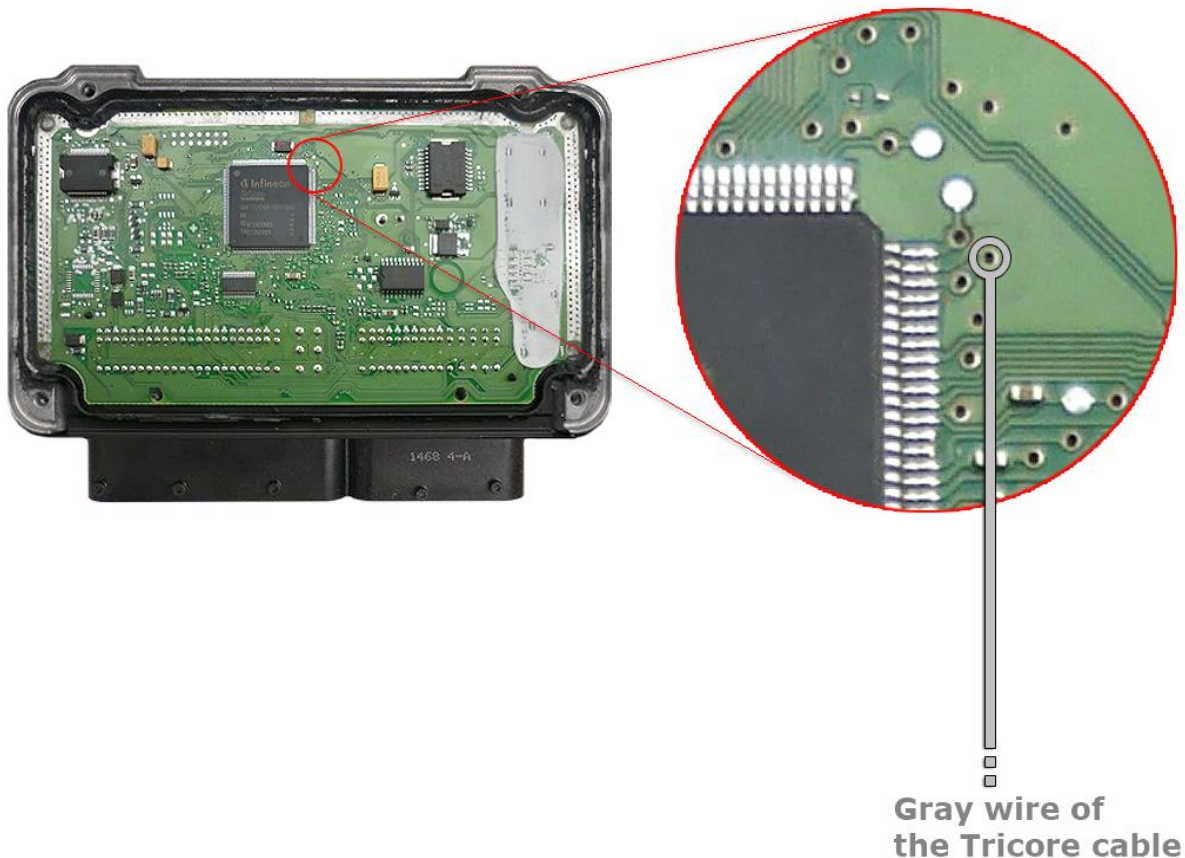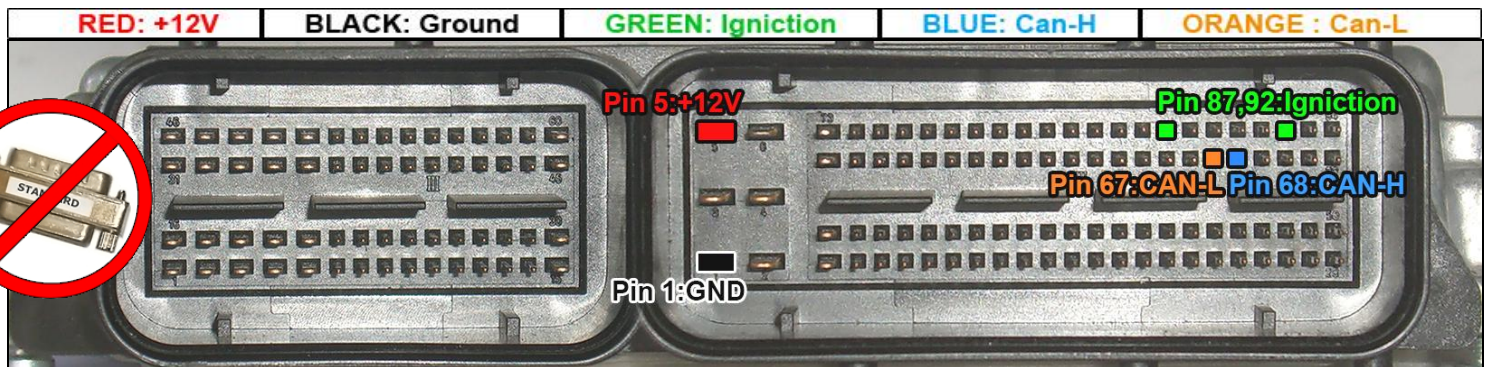

Se a inizio lettura esce il messaggio di errore :

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

seguire le istruzioni a pagina successiva alla fase 2..

When you start reading if appear the error message:

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

follow the instructions on next page to step 2...


FASE 2: (RICERCA PASSWORD)

Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire sul pinout i fili verdi con i fili rossi +12V del cavo Tricore come in figura seguente, e utilizzare il driver: **TOOL PASSWORD TPROT V08 VAG**

STEP 2: (SEARCH PASSWORD)

Unsolder the gray wire to disable the Boot Mode, change on the pinout the green wires with red wires +12V and use the driver:

TOOL PASSWORD TPROT V08 VAG

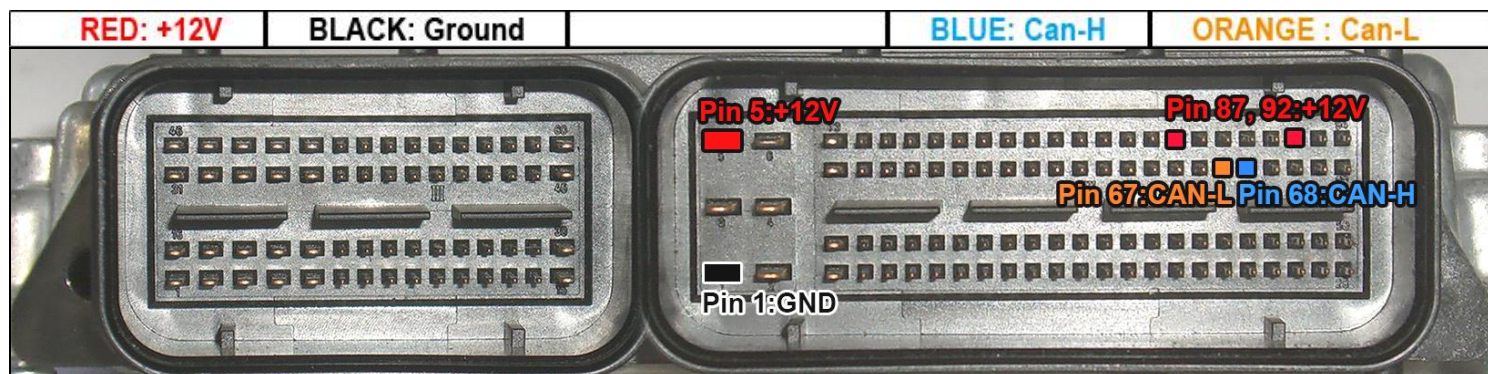

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1. [Clicca qui](#).

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1. [Click here](#).