


Nissan Hitachi BED301

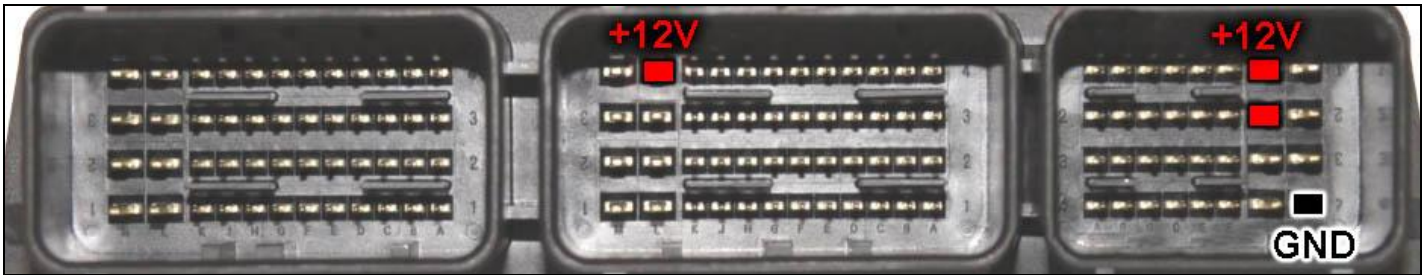


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD


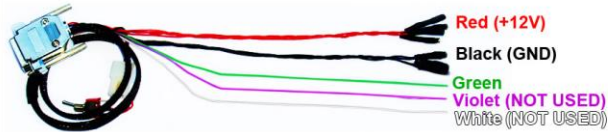


3 - USE THE COLOR FLAT CABLE





4 - DO FOUR LINKS

STEP 1/2:

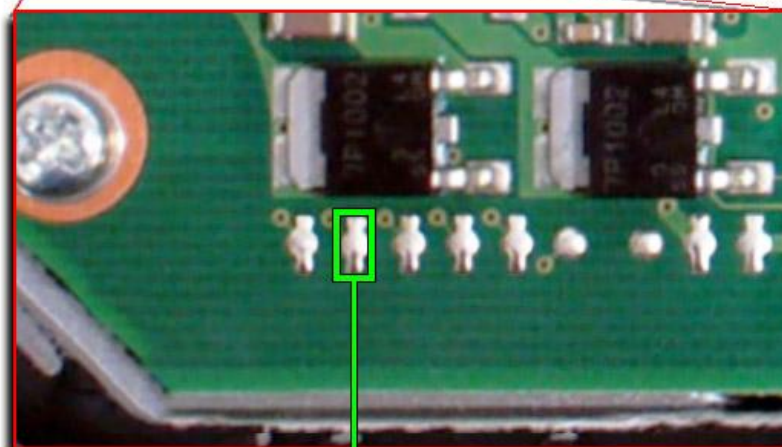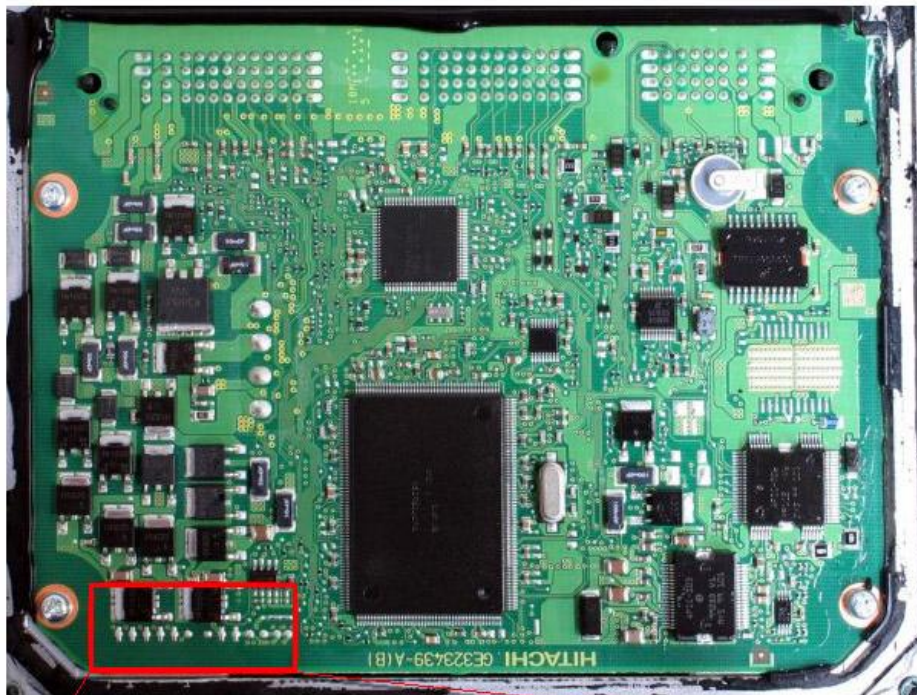

GREEN wire of the Renesas cable

STEP 2/2:

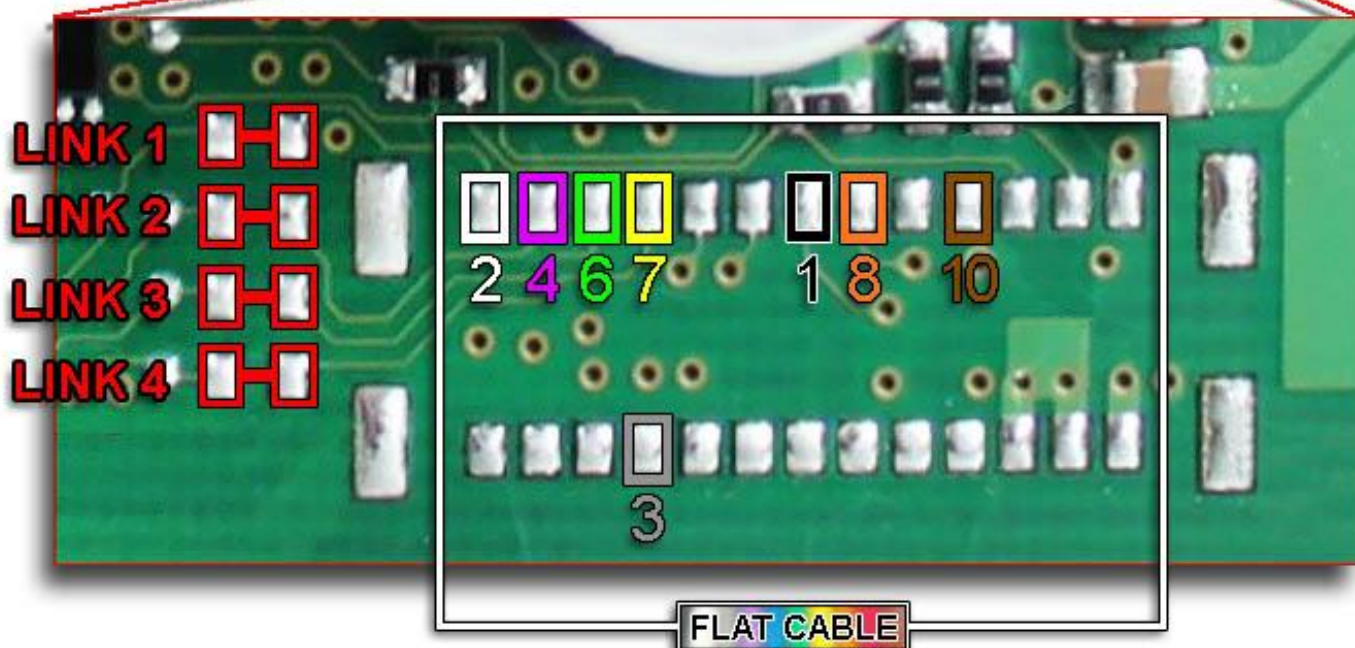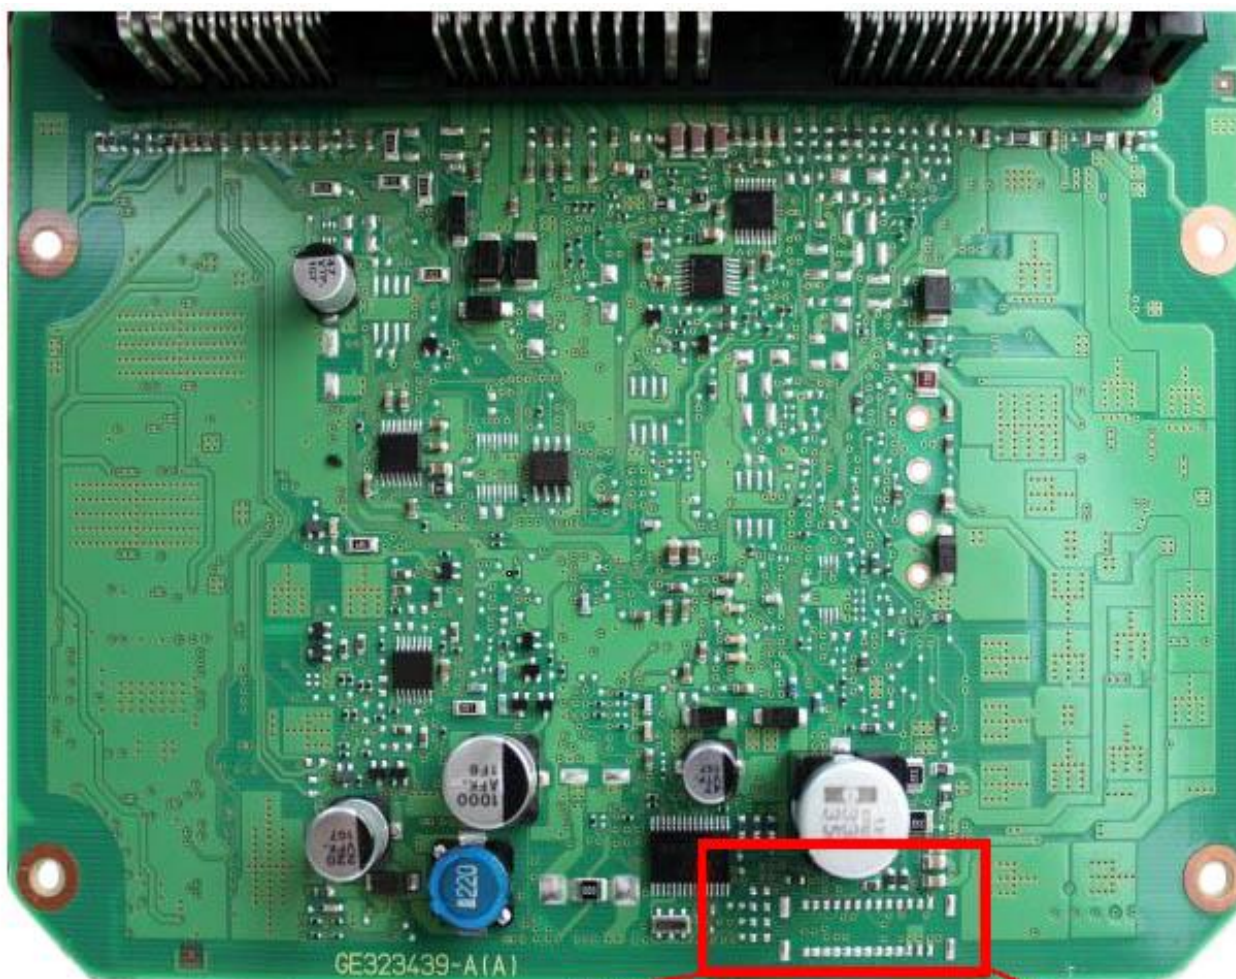

ATTENTION: REMOVE THE 4 LINKS AFTER THE READING.

For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE



- 1 - REMOVE THE STANDARD ADAPTER



- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

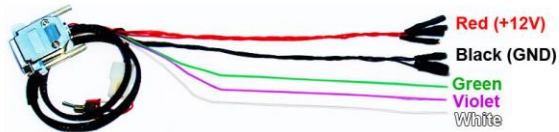

- 3 - DO A LINK

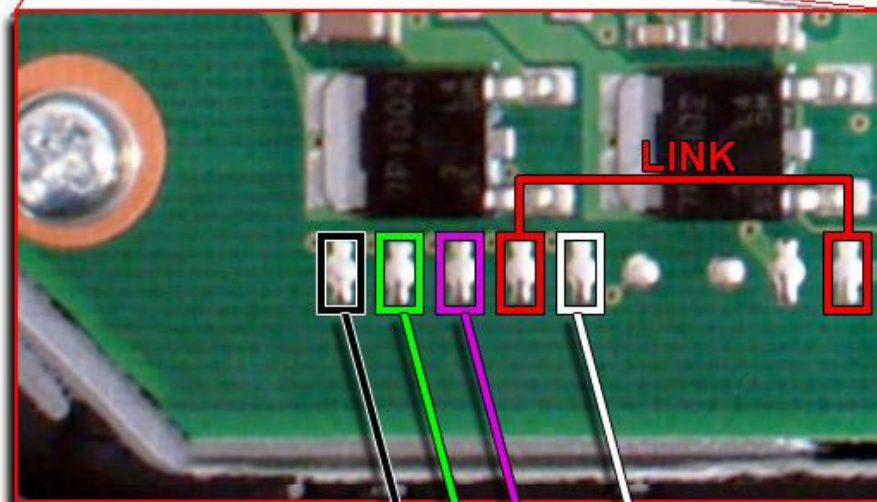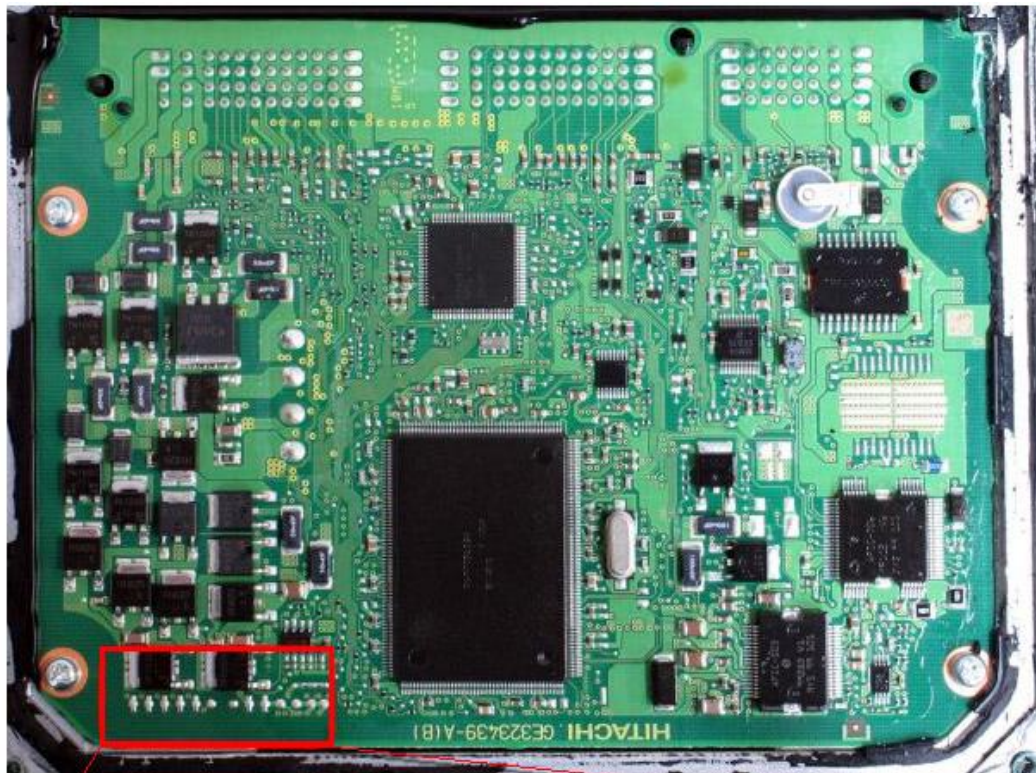

BLACK
GREEN
VIOLET
WHITE
wires of the Renesas cable