

DUCATI CONTINENTAL M3C



DRIVER: Bdm/Jtag mode → Bdm HC12 → Freescale
S12X256V / S12XET256MAL

MICRO: S12X256V / S12XET256MAL

INFO

(EN) Connect the following pinout with the Tricore Cable and put the Ecu in Bdm mode.


(IT) Collegare il seguente pinout con il cavo Tricore e mettere l'ecu in Bdm mode.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L**



(EN) Use color flat cable:

(IT) Usare il flat arcobaleno:

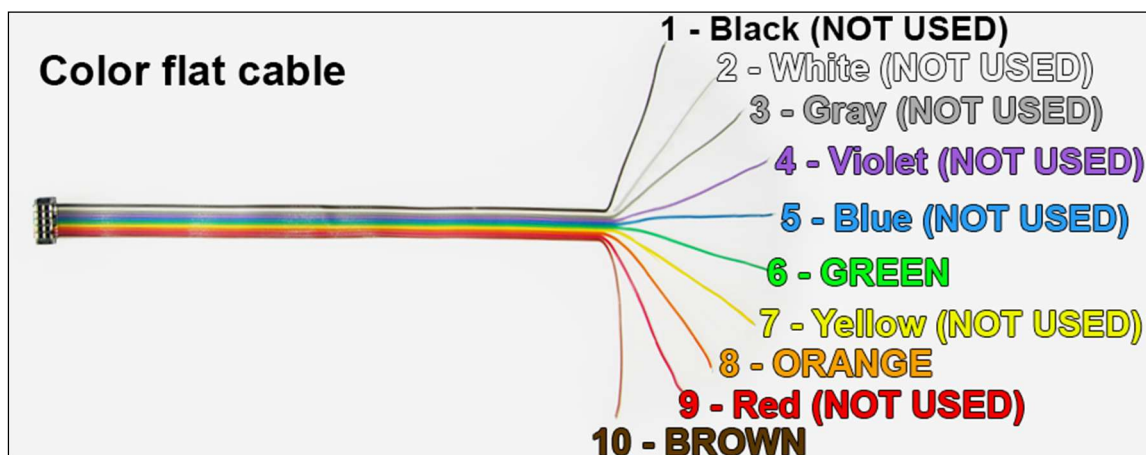


(EN) On the next page...

(IT) Nella prossima pagina...

(EN) Solder the brown green and orange wires like in figure:

(IT) Saldare i fili marrone verde e arancione del flat come in foto:

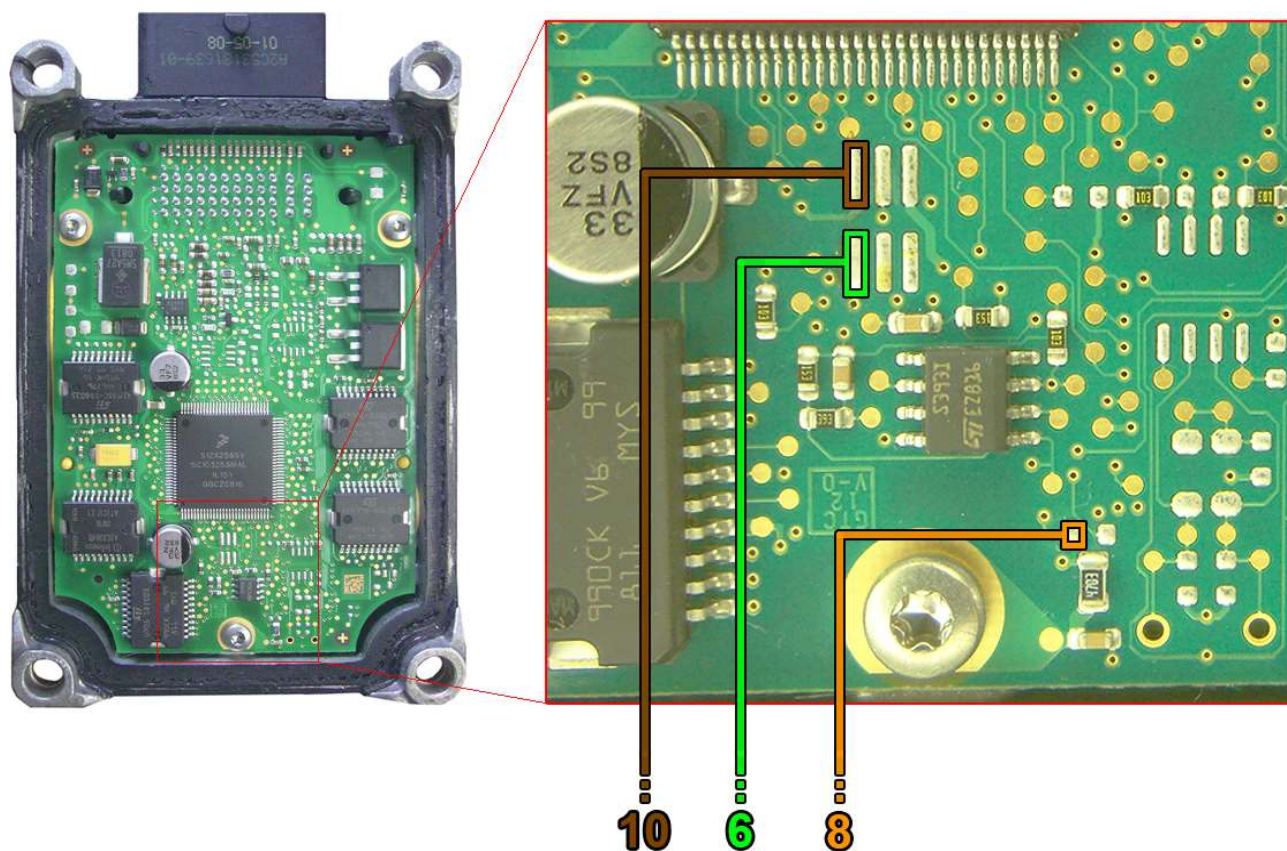

(EN) This ecu has two hardware versions:
one with **S12X256V**;
one with **S12XET256MAL**;
try both drivers in case of failure to recognize the ecu.

(IT) Questa ecu ha due versioni hardware:
una con **S12X256V**;
una con **S12XET256MAL**;
provare entrambi i driver nel caso del mancato riconoscimento della ecu.