



ECU EDC17 CP52 - TC1797 Internal Flash

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)



Porre la centralina in Boot Mode connettendo il seguente pinout e il filo grigio al pin indicato nella figura.

Usare il driver: **BOOT MODE TRICORE SAK TC1797**

STEP 1: (READ/WRITE IN BOOT MODE)

Set in Boot Mode the ECU, so connect the following pinout and connect the grey wire to the pin like shown in figure.

Use the driver: **BOOT MODE TRICORE SAK TC1797**

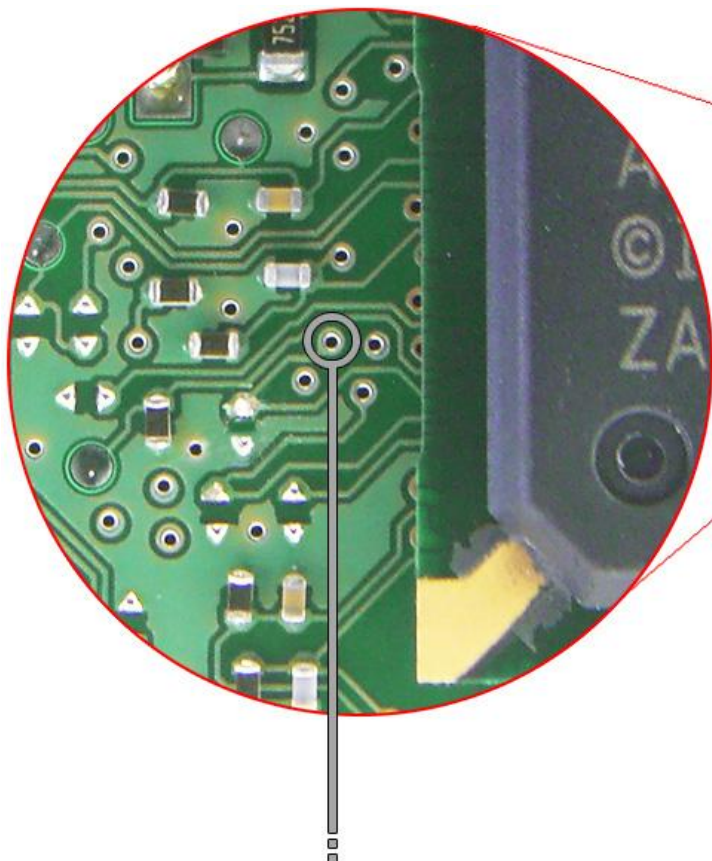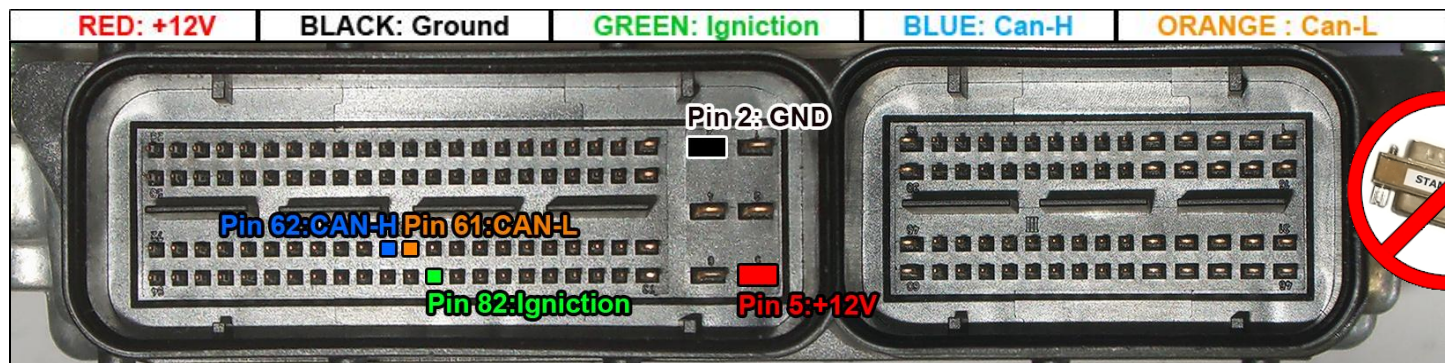

Gray wire of the Tricore cable



Se a inizio lettura esce il messaggio di errore :

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

seguire le istruzioni a pagina successiva..

When you start reading if apparir the error message:

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

follow instructions on next page..

FASE 2: (RICERCA PASSWORD)


Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire il filo verde dell'ignition con un filo rosso +12V e utilizzare il driver:

**OBD TOOL PASSWORD TPROT V11/V12/V13
FIAT/ALFA/LANCIA**

STEP 2: (SEARCH PASSWORD)

Unsolder the gray wire to remove the Boot Mode, change the green wire of the ignition with a red wire +12V and use the driver:

**OBD TOOL PASSWORD TPROT V11/V12/V13
FIAT/ALFA/LANCIA**

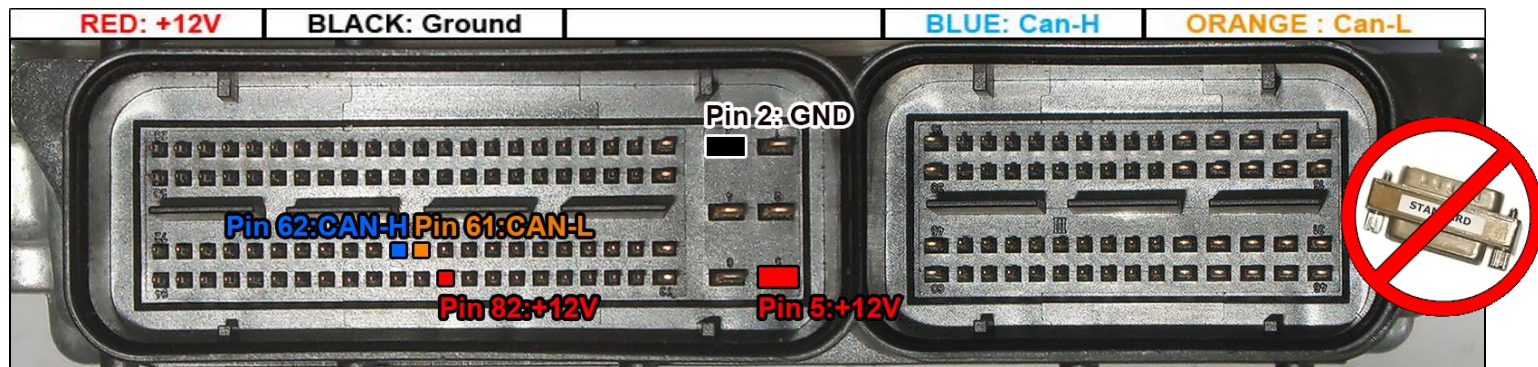

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1.