



## ECU Vag EDC17 C46 – TC1767 Internal Flash

### FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)



Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver:

**BOOT MODE TRICORE SAK TC1767**

### STEP 1: (READ/WRITE IN BOOTMODE)

Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure. Use the driver:

**BOOT MODE TRICORE SAK TC1767**

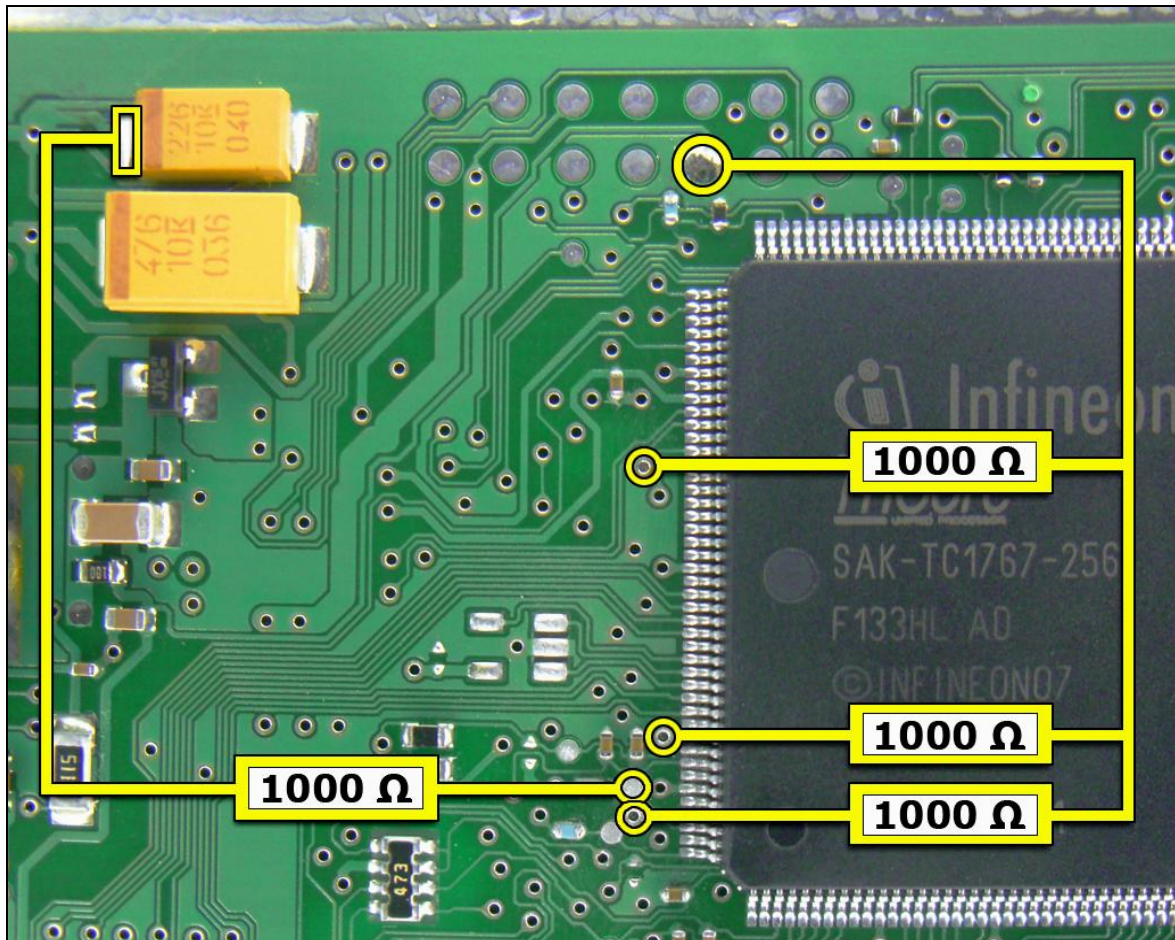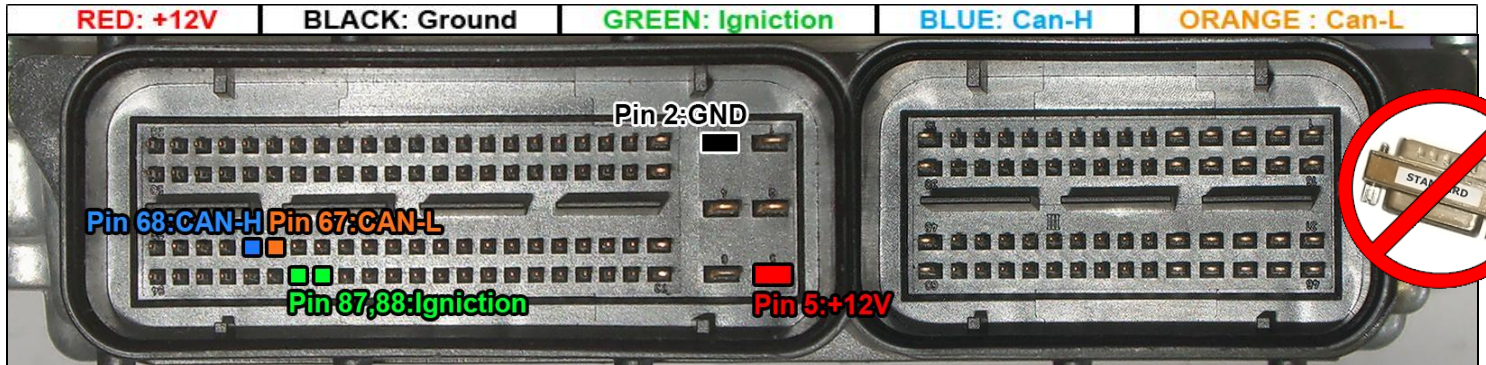

Se a inizio lettura esce il messaggio di errore :

**“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”**

seguire le istruzioni a pagina successiva alla fase 2..

When you start reading if appear the error message:

**“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”**

follow the instructions on next page to step 2...

## FASE 2: (RICERCA PASSWORD)


Dissaldare le resistenze per disabilitare il Boot Mode, sostituire sul pinout i fili verdi con dei fili rossi del cavo Tricore come in figura seguente, e utilizzare il driver:

**OBD TOOL PASSWORD TPROT V08 VAG**

## STEP 2: (SEARCH PASSWORD)

Unsolder the resistances to disable the Boot Mode, change on the pinout the green wires with red wires and use the driver:

**OBD TOOL PASSWORD TPROT V08 VAG**

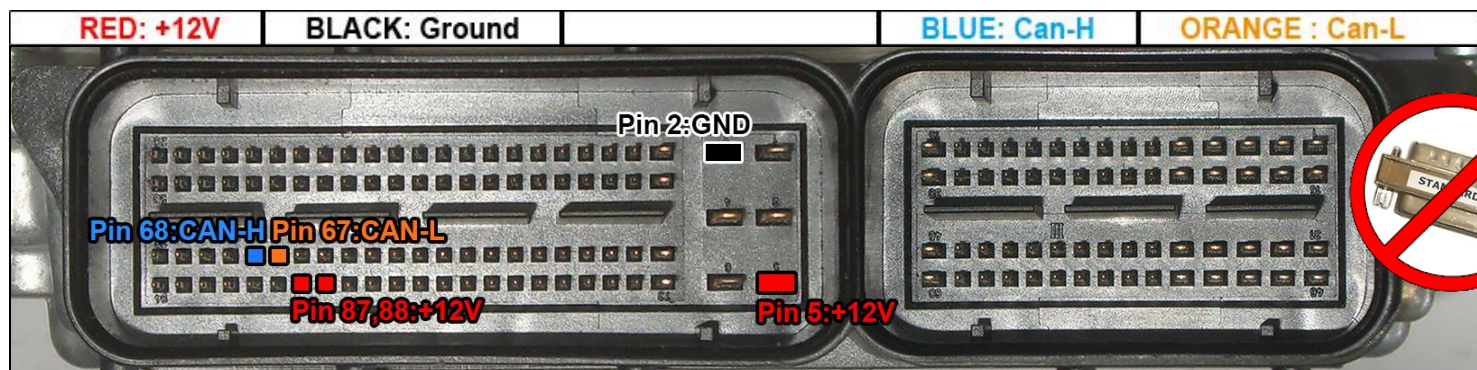

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1.