

SSANGYONG DELPHI DCM6.2AP



DRIVER: Tool Boot mode → Motorola Freescale
BAM → Freescale SPC5xxx Delphi
MICRO: Freescale SPC5674F

INFO

(EN) Set the tool as shown in the photo, connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.

(IT) Impostate lo strumento come mostrato nella foto, collegate il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L



(EN) Connect the link on the Ecu card as pictured.

(IT) Collegare il link sulla scheda della Ecu come in foto.

