

ALFA ROMEO MARELLI MM10JA




DRIVER: Tool Boot mode → Motorola Freescale
BAM → Freescale SPC5777
MICRO: Freescale SPC5777

INFO

(EN) Set the tool as shown in the photo, connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.

(IT) Impostate lo strumento come mostrato nella foto, collegate il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L

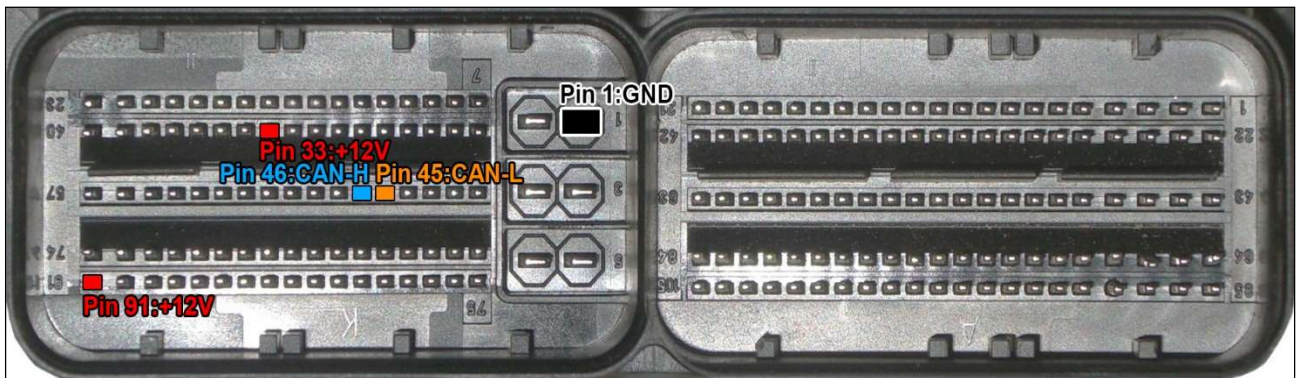

(EN) Connect the link on the Ecu card as pictured.

(IT) Collegare il link sulla scheda della Ecu come in foto.

