

# MITSUBISHI

## DENSO 4N14/275700-87xx (Diesel)




**DRIVER:** Tool Boot mode → RENESAS Benchmode  
→ Bench RENESAS SH7254xx 11Bit  
**MICRO:** Renesas SH72543R

### INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

**RED: + 12V** | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L**

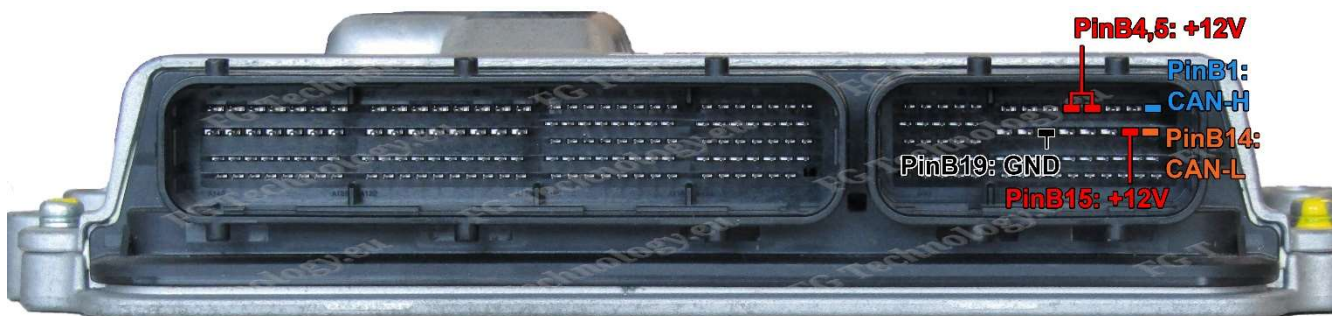

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.