


Nissan Hitachi MEC940-xxx

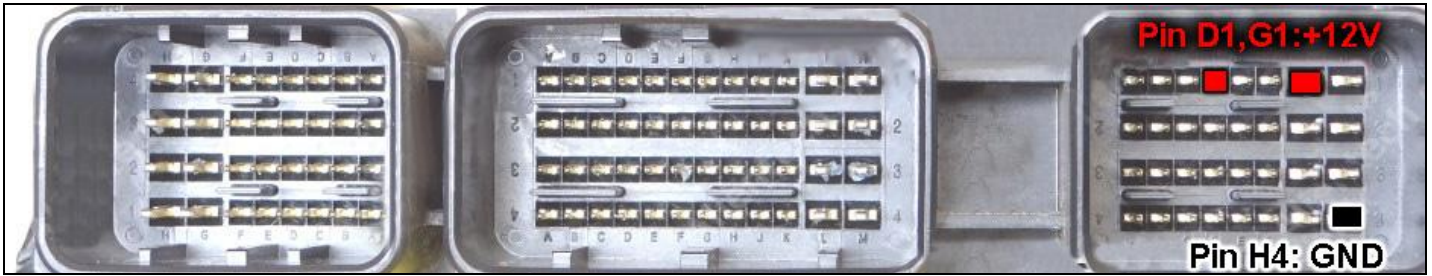


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD


- 1 - REMOVE THE STANDARD ADAPTER



- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

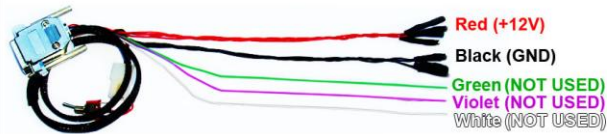

- 3 - USE THE COLOR FLAT CABLE

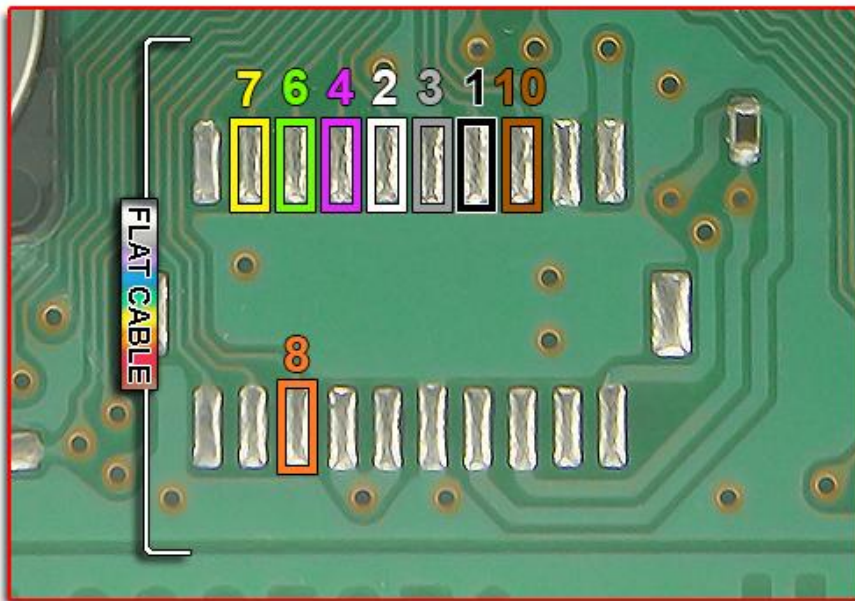

For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

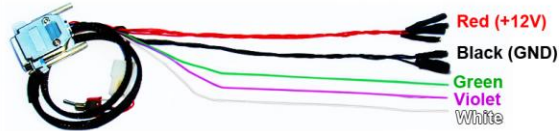

3 - USE TWO RESISTANCES OF 560 ohm

wires of the Renesas cable

GREEN VIOLET WHITE

