

SUBARU - TOYOTA

DENSO 112800-1741 (Gasoline)



DRIVER: Tool Boot mode → RENESAS Benchmode
→ Bench RENESAS SH7253x 29Bit
MICRO: Renesas SH72531

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L



(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.