

FCA GROUP MARELLI 9DF (Diesel)



DRIVER: → Tool Boot mode
→ Motorola Freescale BAM
→ Freescale SPC564x Marelli 9DF/9GC/9GF


MICRO: Freescale SPC5644

INFO

(EN) Set the tool as shown in the photo, connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.



(IT) Impostare lo strumento come mostrato in foto, collegare il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: +12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L

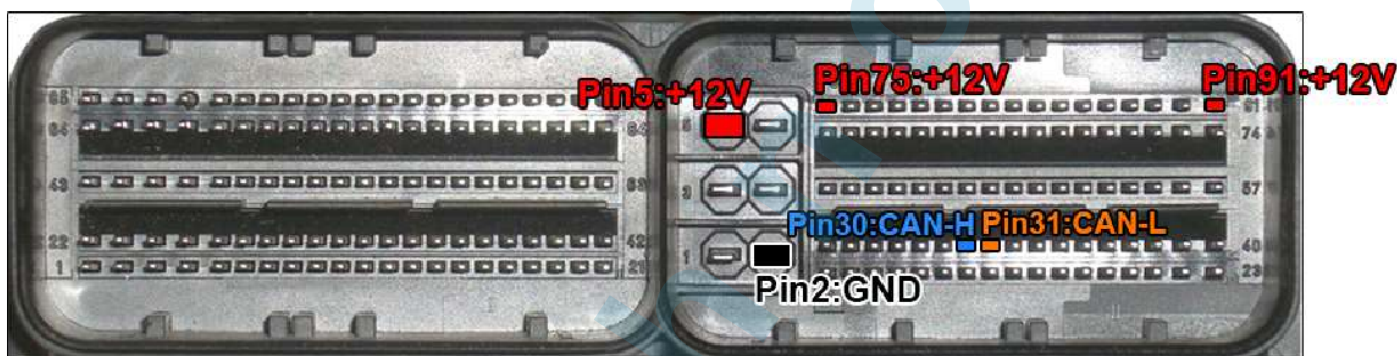

(EN) Connect the yellow wire of the Tricore Cable on the Ecu card as pictured.

(IT) Collegare il filo giallo del Cavo Tricore sulla scheda della Ecu come in foto.

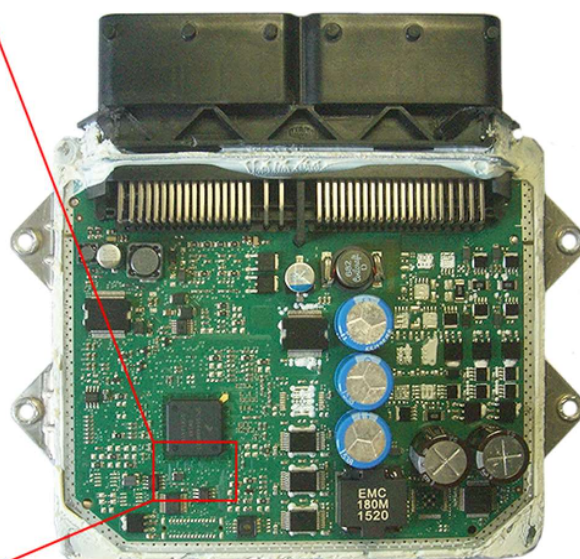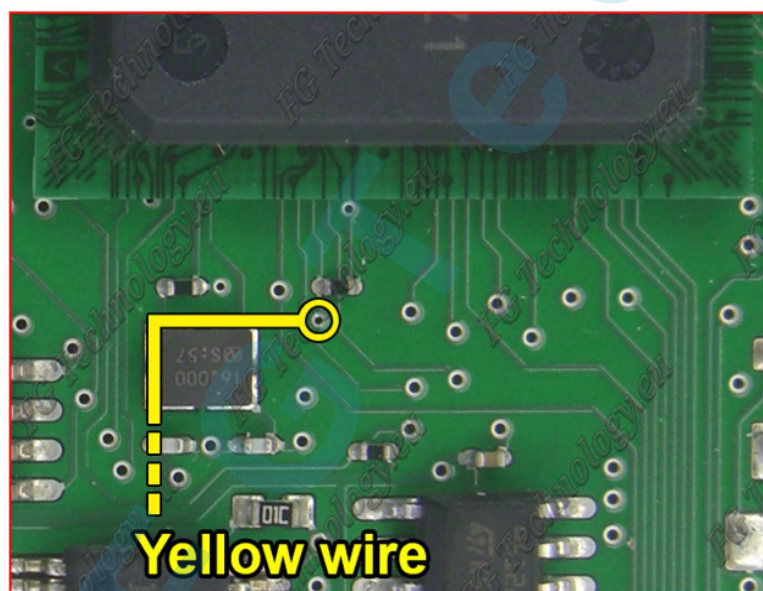

(EN) The Bootmode for the 9DF HW002 version follows on the **next page** (check on the label).



(IT) A **pagina successiva** segue il Bootmode per la versione 9DF HW002 (verificare sull'etichetta).

(EN) Connect the Red-Brown and yellow wires of the Tricore Cable on the Ecu card as pictured.

(IT) Collegare i fili Rosso-marrone e giallo del Cavo Tricore sulla scheda della Ecu come in foto.



Red/Brown wire
Filo rosso/marrone

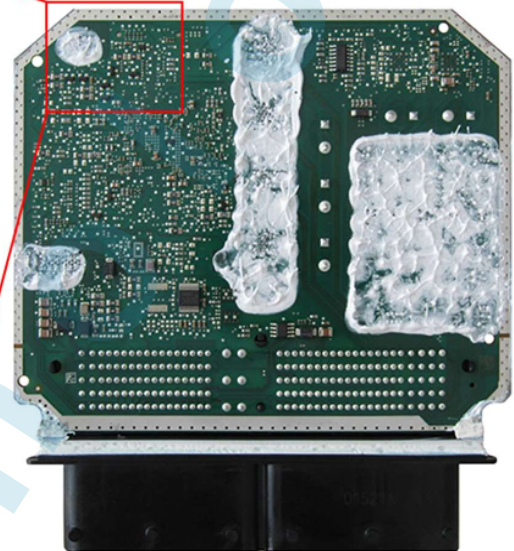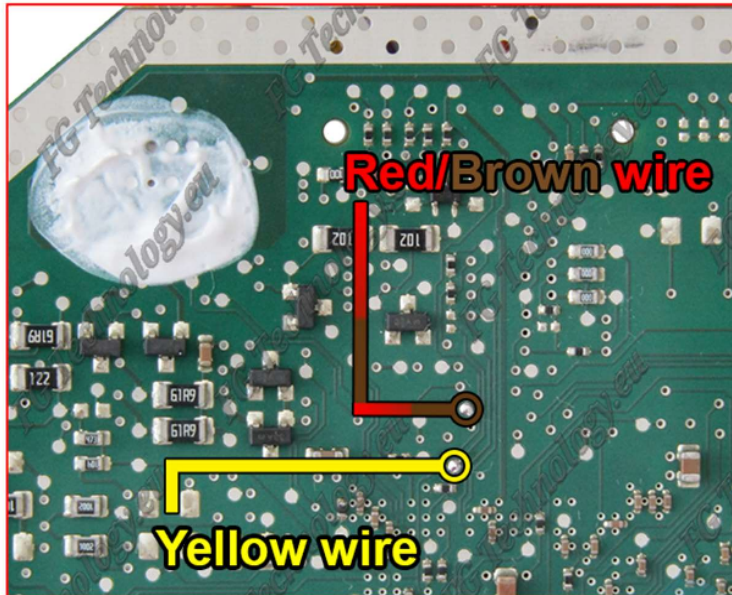

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.