



ECU MED17.3.1 - TC1766 Internal Flash

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare il filo grigio nel punto di Boot indicato nella figura. Utilizzare il driver:



BOOT MODE TRICORE SAK TC1766

STEP 1: (READ/WRITE IN BOOT MODE)

Set in Boot Mode the ECU, so connect the following pinout and solder the gray wire in the boot pin shown in the figure.

Use the driver:

BOOT MODE TRICORE SAK TC1766

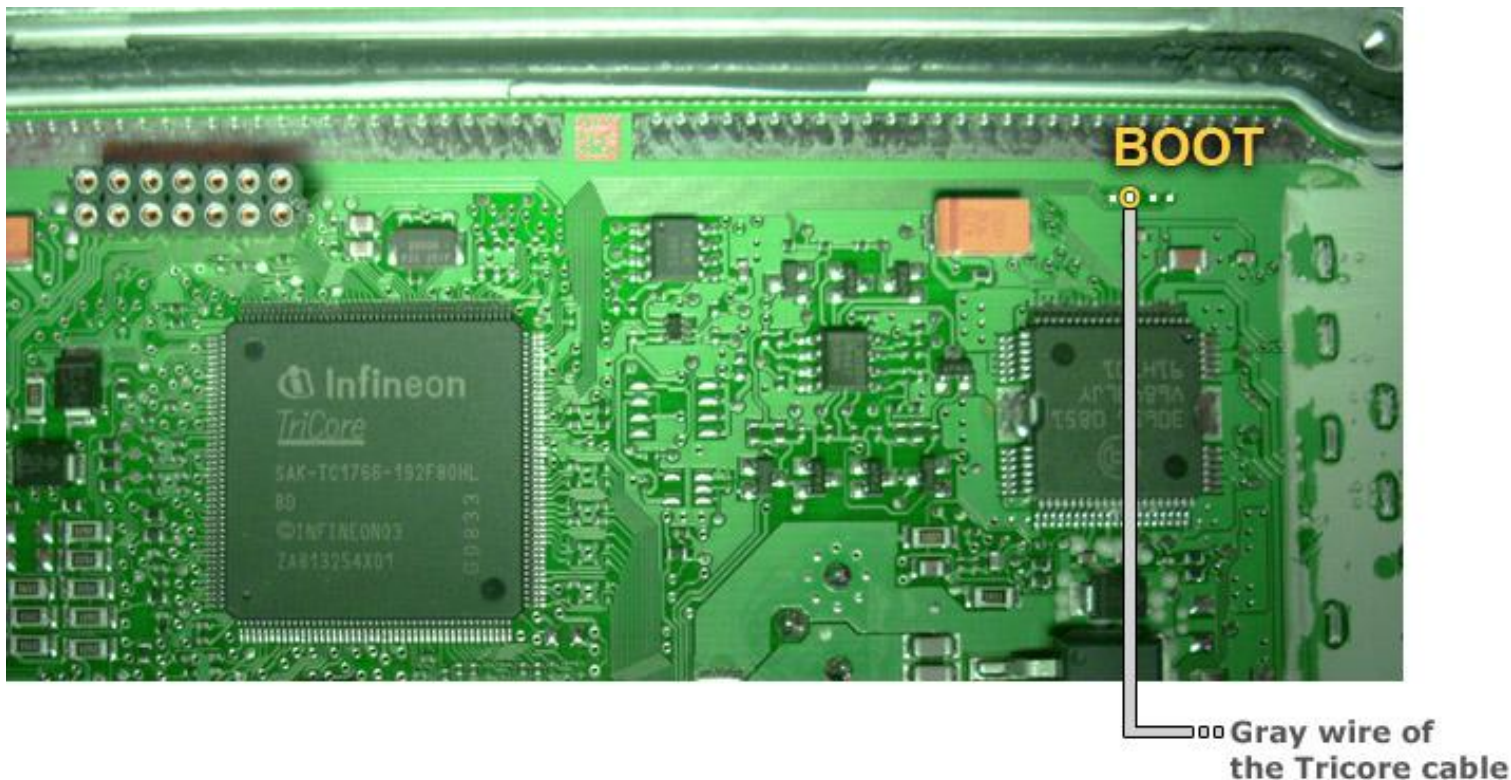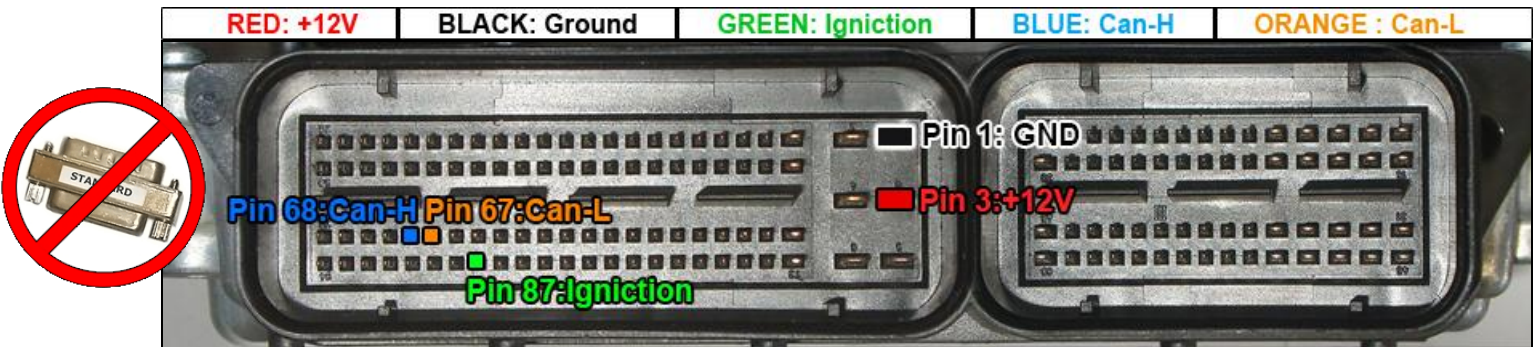

Se a inizio lettura esce il messaggio di errore :

**“ERROR UNLOCK READ - TRY TOOL TRICORE
PASSWORD”**

seguire le istruzioni a pagina successiva..

When you start reading if apparir the error message:

**“ERROR UNLOCK READ - TRY TOOL TRICORE
PASSWORD”**

follow instructions on next page..

FASE 2: (RICERCA PASSWORD)

Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire il filo verde dell'ignition con un filo rosso +12V e utilizzare il driver:

**OBD TOOL PASSWORD TPROT V11/V12/V13
FIAT/ALFA/LANCIA**

STEP 2: (SEARCH PASSWORD)

Unsolder the gray wire to remove the Boot Mode, change the green wire of the ignition with a red wire +12V and use the driver:

**OBD TOOL PASSWORD TPROT V11/V12/V13
FIAT/ALFA/LANCIA**



A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1.