



ECU EDC17 C58 - TC1793 Internal Flash

FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout e utilizzare il driver:

TOOL PASSWORD SPECIAL *ALL*

(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (FIND PASSWORD)

Connect the following pinout and use the driver:

TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))



A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina.

Quindi, porre la centralina in Boot Mode come descritto alla successiva Fase 2.

Now, once you have found the password, you can read and write the ECU.

So, set in Boot Mode the ECU as described in next Step 2.

FASE 2: (LETTURA/SCRITTURA IN BOOT MODE)

Porre la centralina in Boot Mode connettendo il seguente pinout e il filo grigio al sesto pin del Micro come indicato nella figura a pagina seguente.

Usare il driver: **BOOT MODE TRICORE SAK TC1793**

STEP 2: (READ/WRITE IN BOOT MODE)


Set in Boot Mode the ECU, so connect the following pinout and connect the grey wire to the 6th pin of the Micro like shown in figure at following page.

Use the driver: **BOOT MODE TRICORE SAK TC1793**



A pagina seguente il Boot..

At following page the Boot..

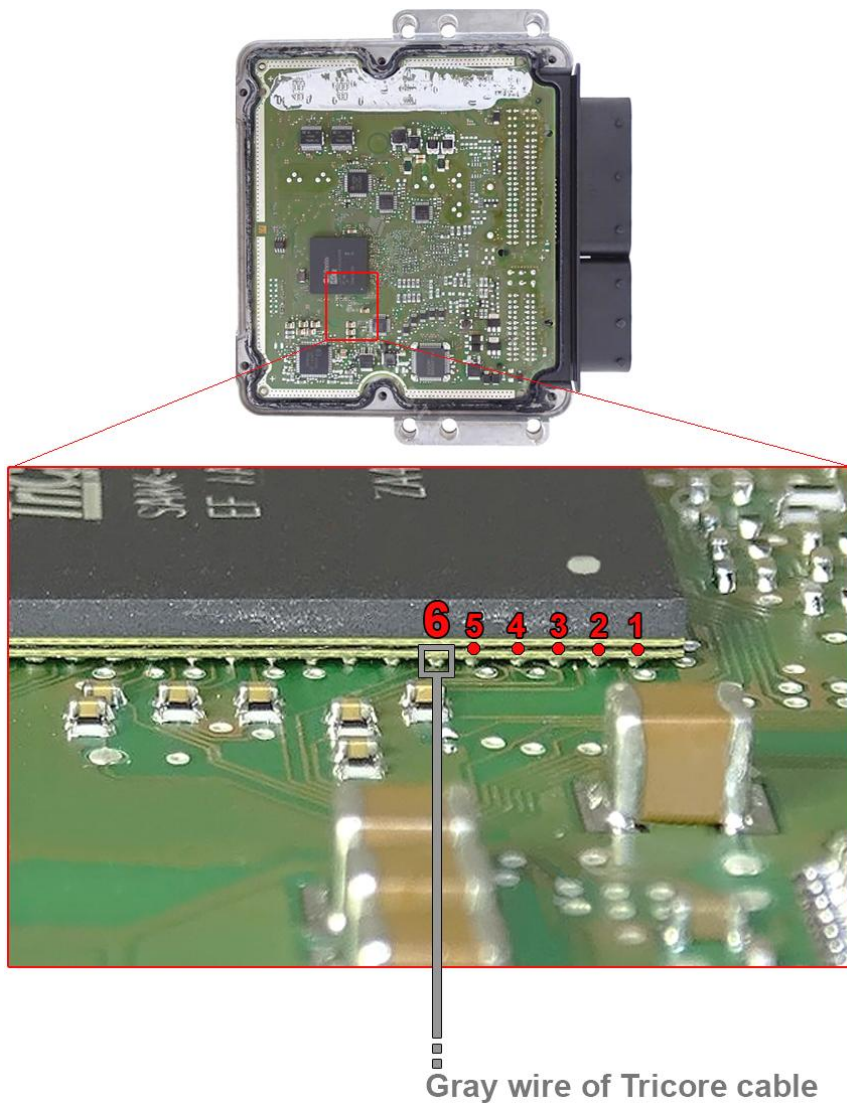

Per connettere il pin del Micro utilizzare un Hook oppure costruirsi una staffa con un ago puntato sul pin.

For connecting the pin of the Micro use a Hook or build a bracket to aim a needle.

USING HOOK



BUILD A BRACKET TO AIM A NEEDLE

