

KUBOTA

BOSCH EDC17CV45 (Diesel)




DRIVER: Tool Boot → Bench mode → Infineon
Tricore Benchmode → Tricore Sak TC1782
MICRO: TC1782

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L** | **WHITE** | **BROWN**

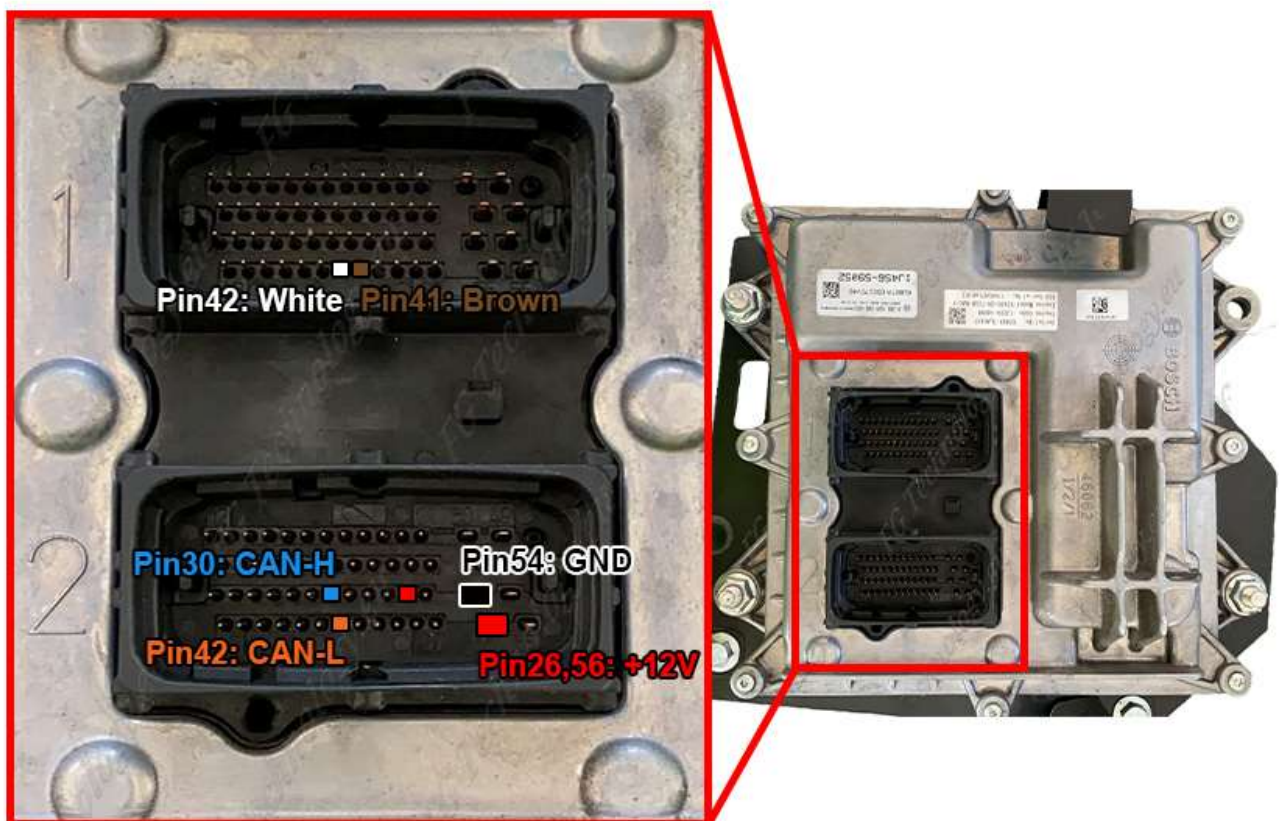

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.