

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare il filo grigio come in figura. Utilizzare il driver:




BOOT MODE TRICORE SAK TC1797

STEP1: (READ/WRITE IN BOOT MODE)

Set in Boot Mode the ECU, so connect the following pinout and solder the the gray wire like in the figure.

Use the driver:

BOOT MODE TRICORE SAK TC1797

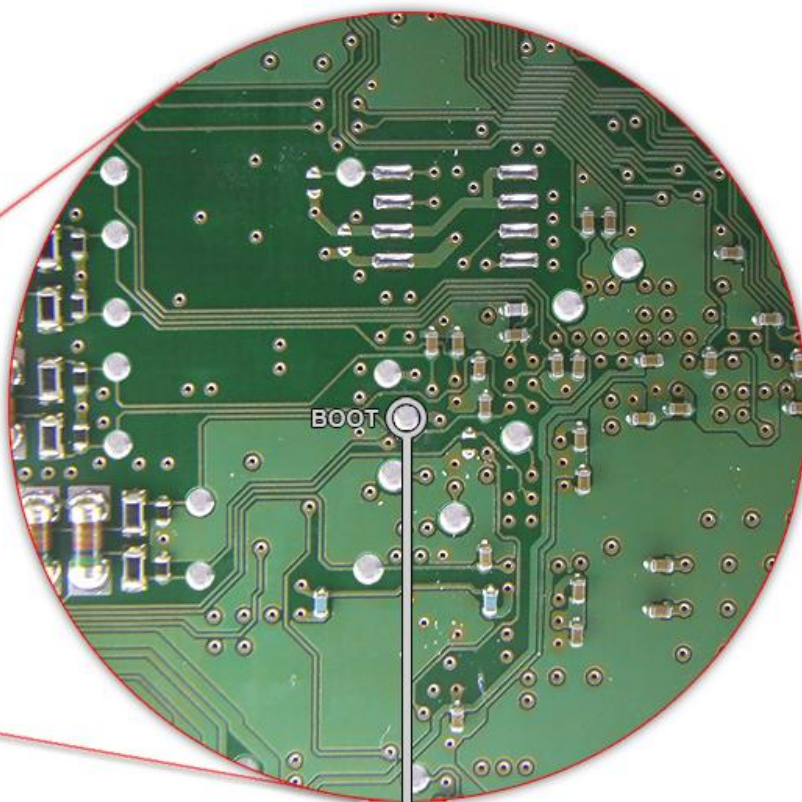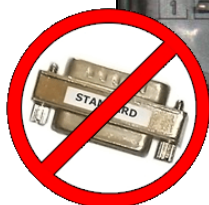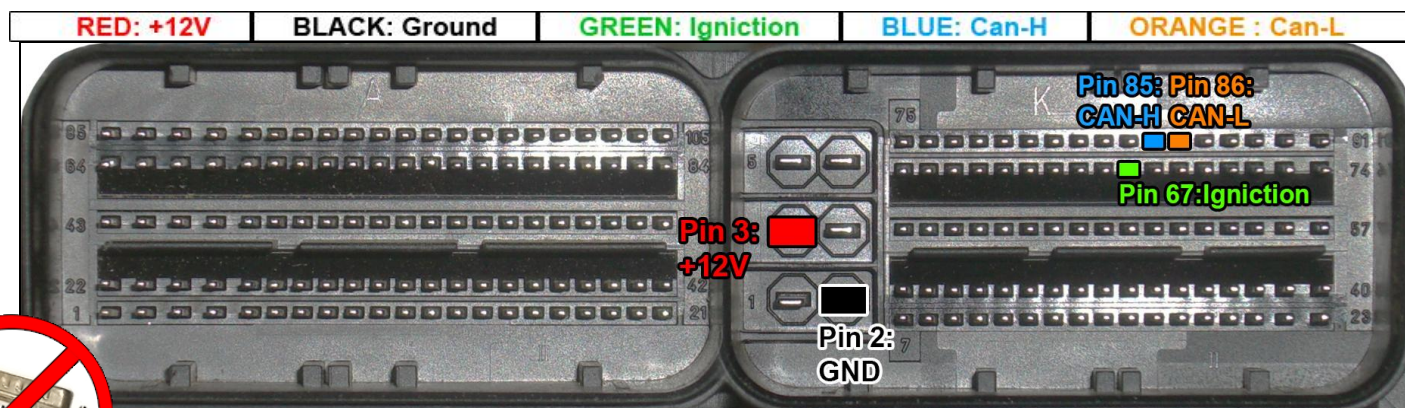

Gray wire of Tricore cable

Se a inizio lettura esce il messaggio di errore :

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

seguire le istruzioni a pagina successiva alla fase 2..

When you start reading if apparir the error message:

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”


follow the instructions on next page to step 2..

FASE 2: (RICERCA PASSWORD)

Sostituire il filo verde di ignition con un filo rosso +12V e aggiungere i fili bianco e viola sul pinout. Lanciare il driver: **TOOL PASSWORD SPECIAL *ALL***

STEP 2: (SEARCH PASSWORD)

Change the green wire of ignition with a red wire +12V and add white and violet wires on the pinout. Use driver: **TOOL PASSWORD SPECIAL *ALL***

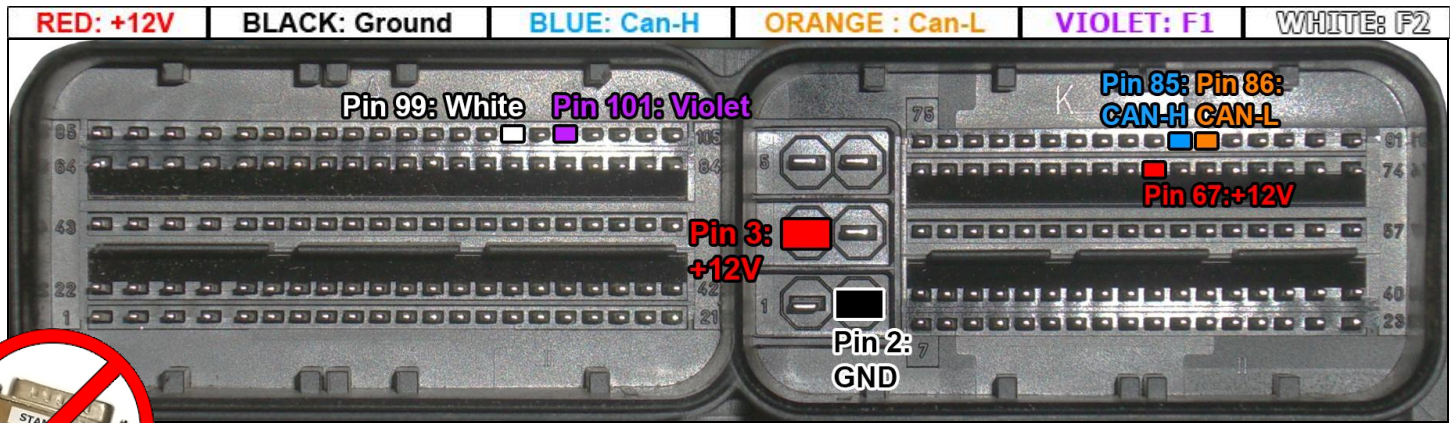

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1.