

## Nissan Hitachi MEC35



### READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD




Red (+12V)  
Black (GND)  
Green  
Violet (NOT USED)  
White (NOT USED)

3 - USE THE COLOR FLAT CABLE



4 - DO A LINK AND USE A RESISTANCE OF 1Kohm

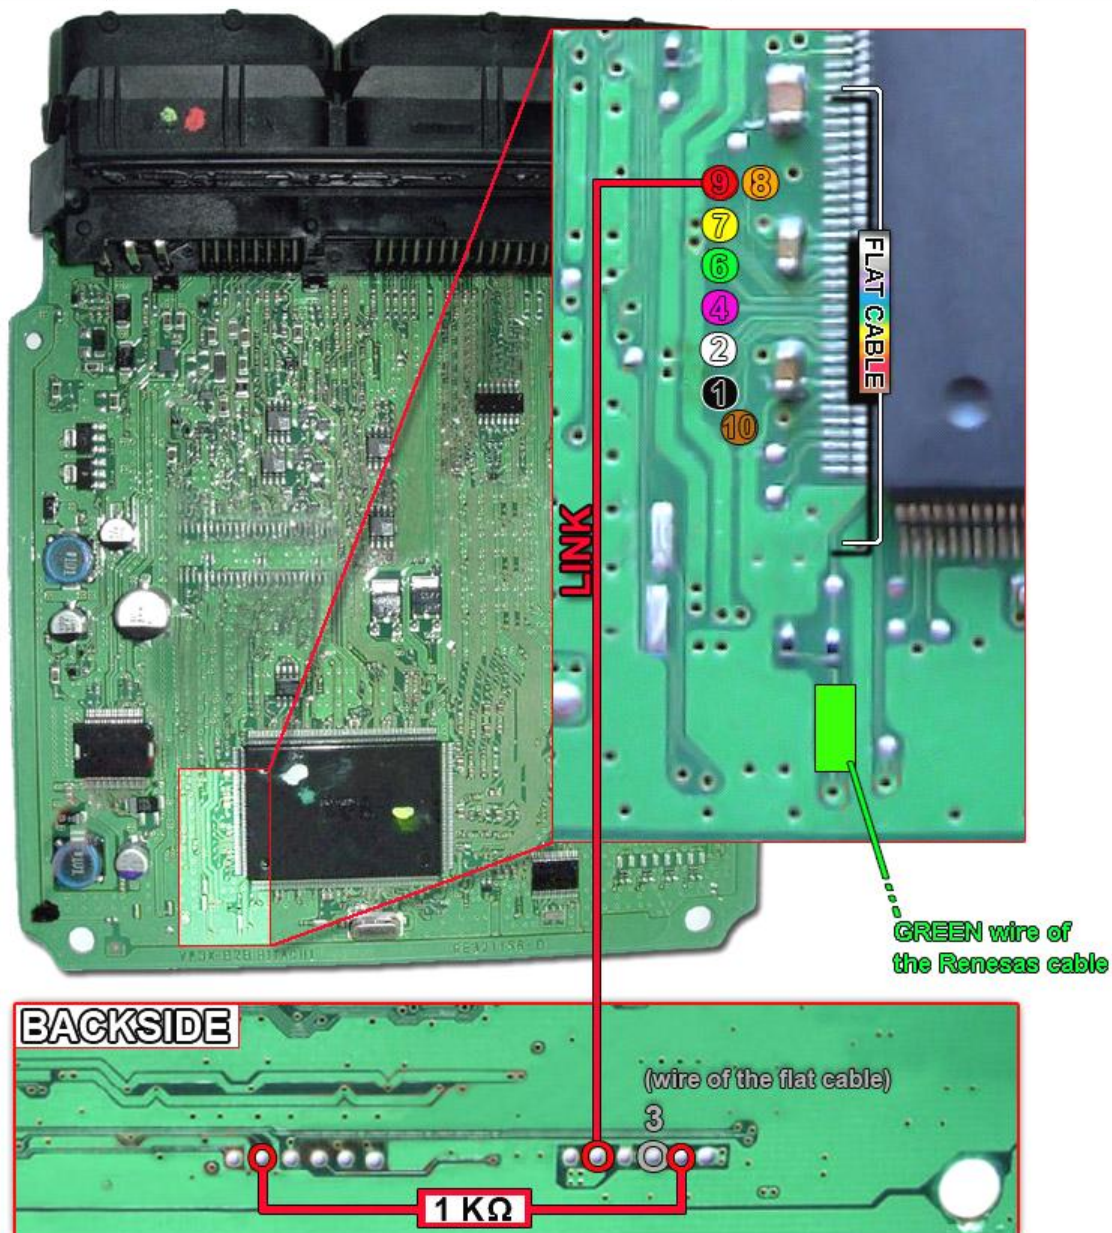

For writing follow the instructions on the next page.


## WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

1 - REMOVE THE STANDARD ADAPTER




2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

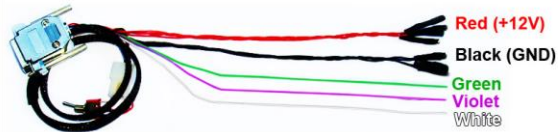

3 - DO A LINK

4 - USE A RESISTANCE OF 1 Kohm

Frontside:

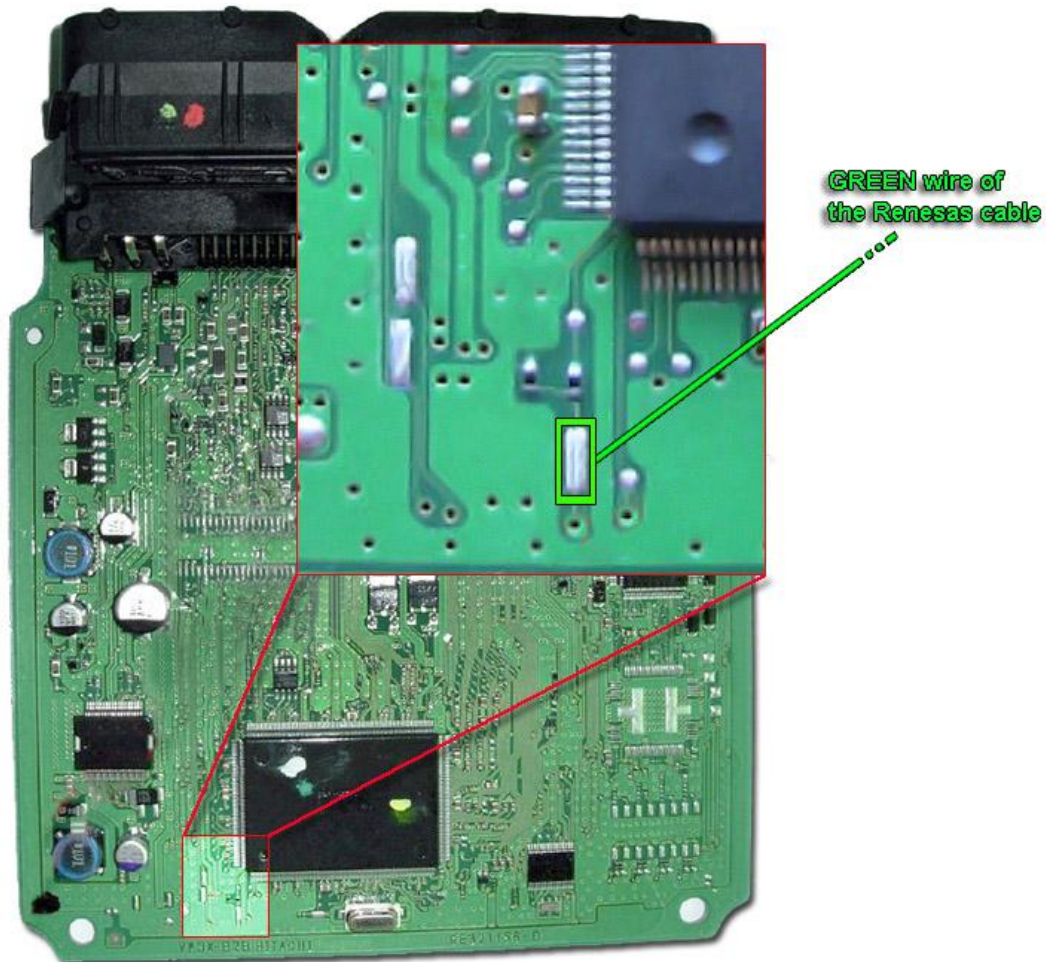

Backside:

