



ECU EDC17 CP18 – Acdelco E86 - TC1797 Internal Flash

FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout ed utilizzare il driver:
TOOL PASSWORD SPECIAL *ALL*

(Attenzione: verifica di avere già l'ultima versione del cavo Tricore: [Clicca qui](#))

STEP 1: (SEARCH PASSWORD)

Connect the next pinout and use the driver:
TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable: [Click here](#))



A questo punto, una volta trovata la password, sarà possibile leggere/scrivere la centralina.

Quindi, porre la centralina in boot mode come descritto alla successiva Fase 2..

Now, once you have found the password, you can read/write the ECU.

So, set in boot mode the ECU as described in the following step 2..

FASE 2: (LETTURA/SCRITTURA IN BOOT MODE)

Rimuovere i fili bianco e viola. Connettere il seguente pinout sostituendo il filo rosso +12V del pin J1/48 con un filo verde dell'ignition. Spostare la linea CAN. Porre la centralina in Boot Mode con il filo grigio come indicato nella figura. Utilizzare il driver: **BOOT MODE TRICORE SAK TC1797**

STEP 2: (READ/WRITE IN BOOT MODE)

Remove white and violet wires. Connect the following pinout changing the red wire +12V of the pin J1/48 with a green wire of ignition. Change the CAN lines. Set in Boot Mode the ECU with the gray wire like shown in the figure. Use the driver: **BOOT MODE TRICORE SAK TC1797**

RED: +12V

BLACK: Ground

GREEN: Ignition

BLUE: Can-H

ORANGE : Can-L

