


Nissan 350z Hitachi

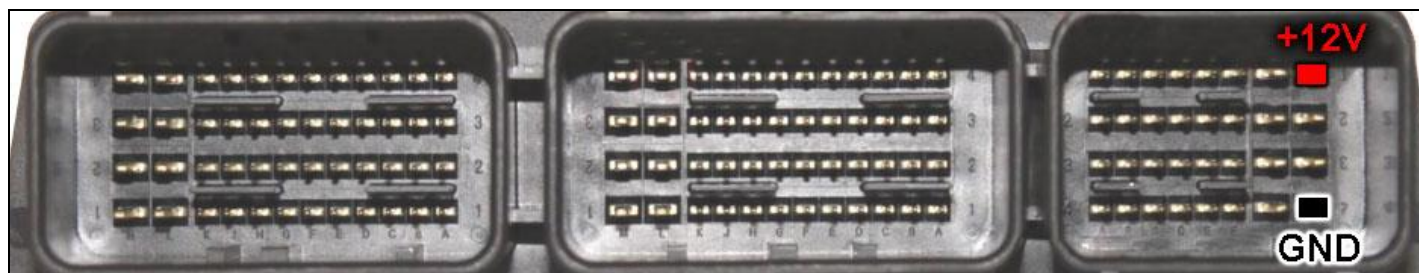


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

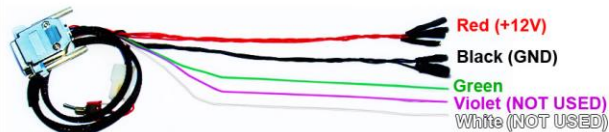


3 - USE THE COLOR FLAT CABLE



4 - DO A LINK AND USE A RESISTANCE OF 1Kohm


STEP 1/2:

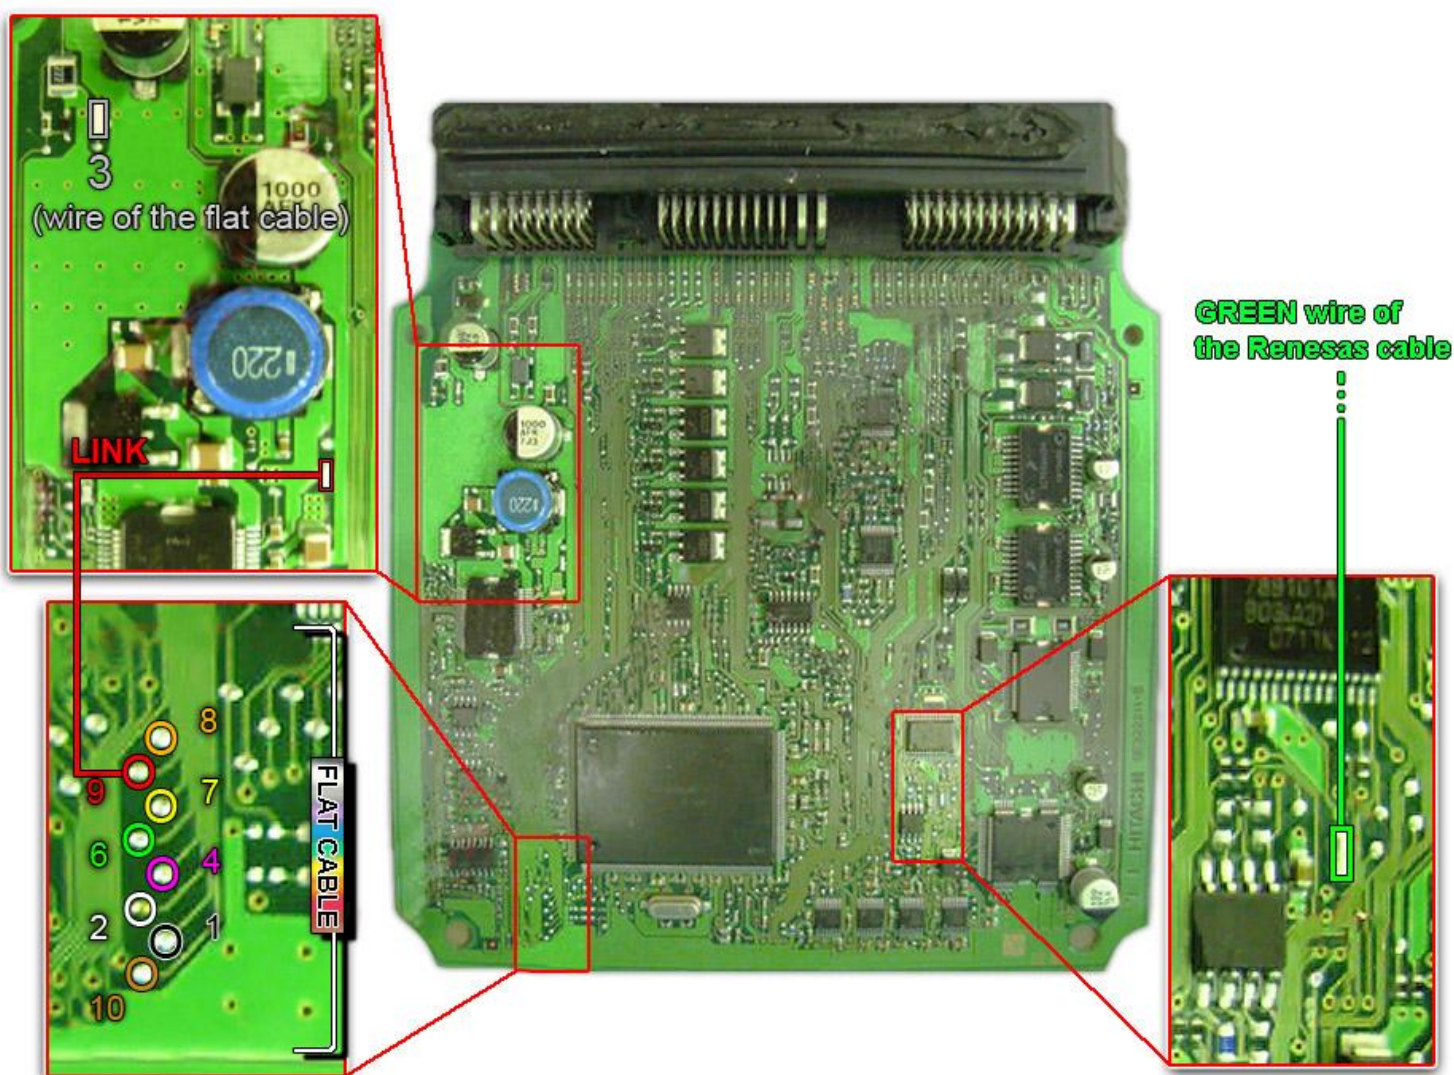

Segue pagina successiva.. / [Follow next page..](#)

STEP 2/2:

Saldare inoltre una resistenza da 1KOhm nell'altro lato della scheda come in figura:
Join a resistance 1KOhm in the other side of the electric card like in figure:

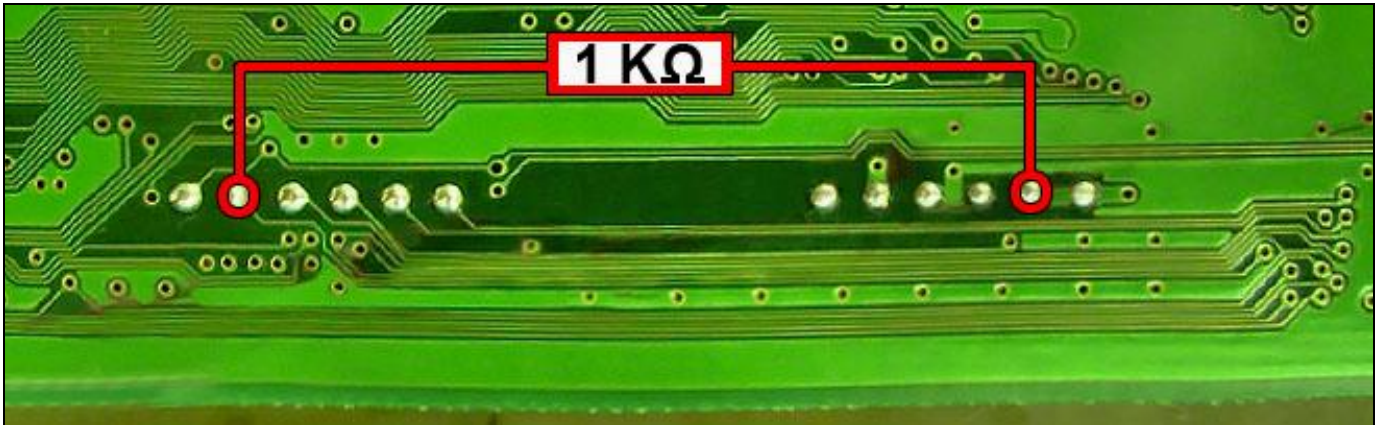


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

1 - REMOVE THE STANDARD ADAPTER




2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

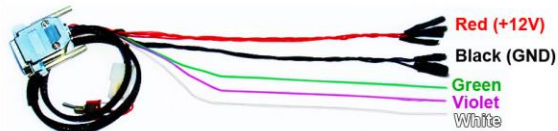

3 - DO A LINK


4 - USE A RESISTANCE OF 1 Kohm

STEP 1/2:

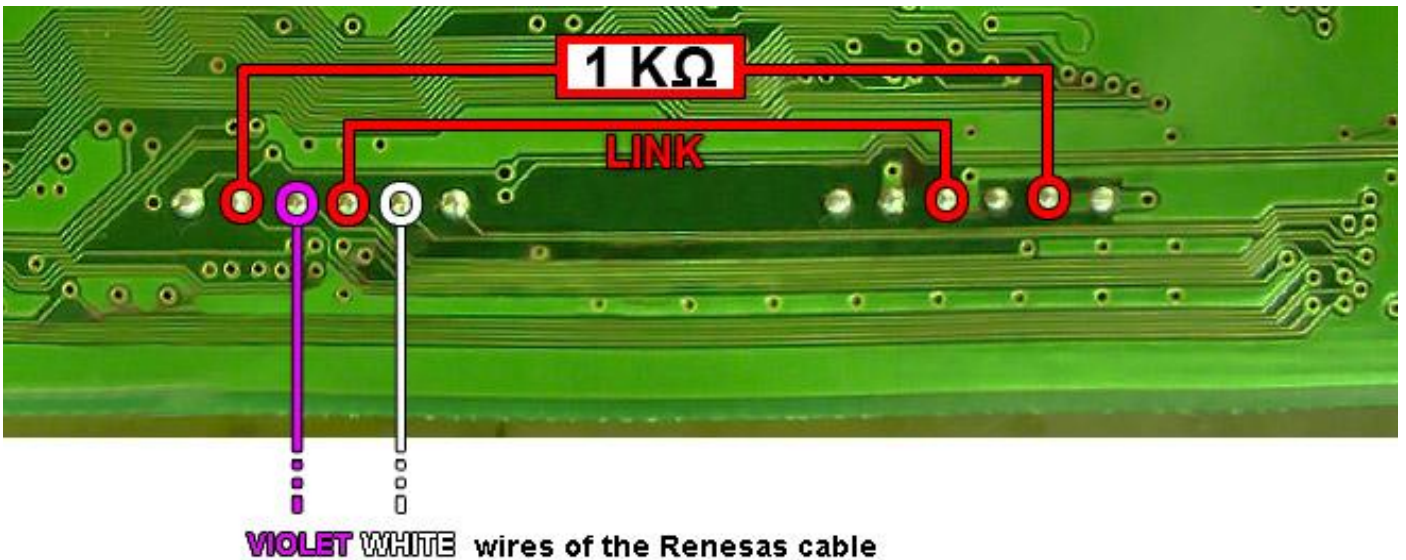


Segue pagina successiva.. / [Follow next page..](#)

STEP 2/2:

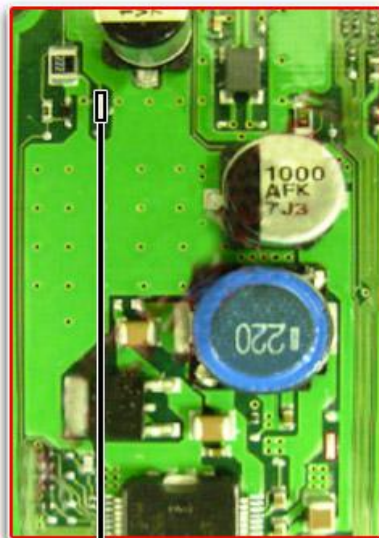

**BLACK wire of
the Renesas cable**

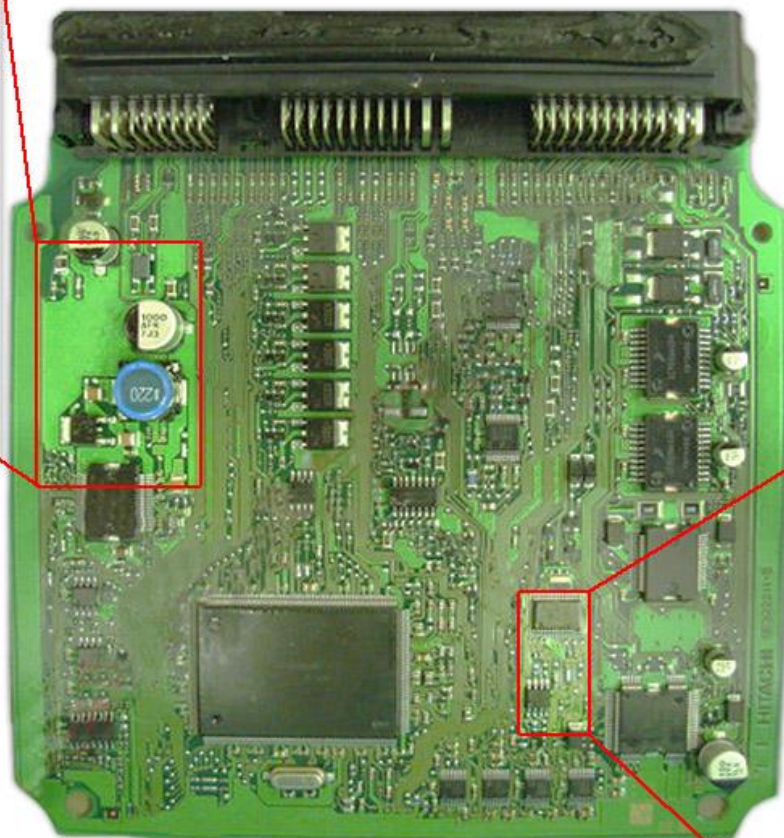

**GREEN wire of
the Renesas cable**

