

RENAULT

HITACHI EWR20-xxx (Diesel)




DRIVER: Bdm/Jtag mode → Jtag Renesas (only read)
→ AUD 7055
MICRO: SH7055

INFO

(EN) Connect the following pinout with the Renesas Cable and put the Ecu in JTAG mode.

(IT) Collegare il seguente pinout con il cavo Renesas e mettere la Ecu in modalità JTAG.

RED: + 12V | BLACK: GROUND

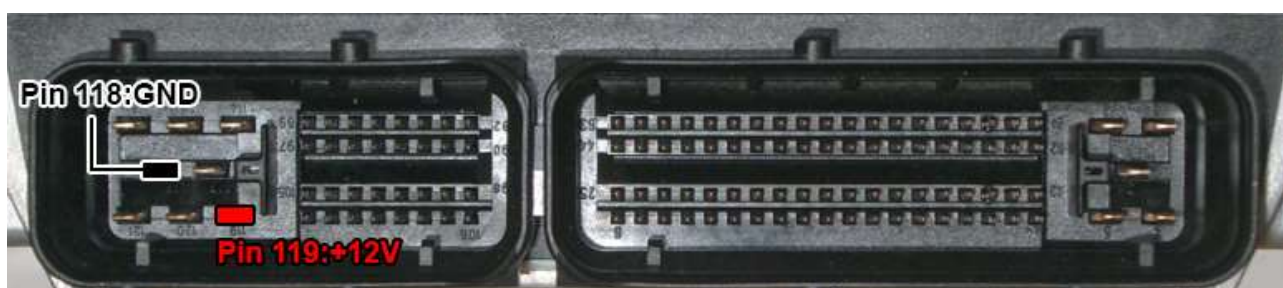


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

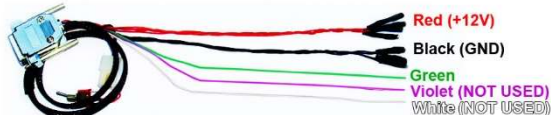

3 - USE THE COLOR FLAT CABLE



4 - DO A LINK


(EN) Follow the instruction in the next page.

(IT) Seguire le istruzioni a pagina successiva.

STEP 1/2 (BACKSIDE):



STEP 2/2 (FRONTSIDE):

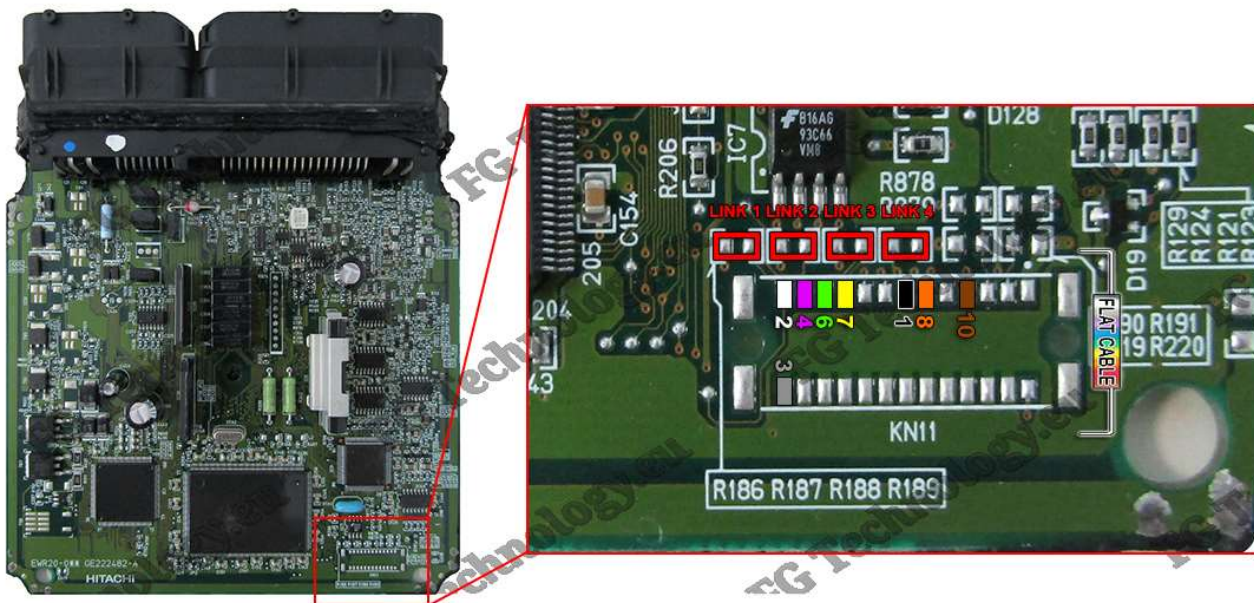

(EN) Remove the link after the reading.

For writing follow the instructions on the next page.

(IT) Rimuovere il link dopo la lettura.

Per la scrittura seguire le istruzioni nella pagina successiva.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE


1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

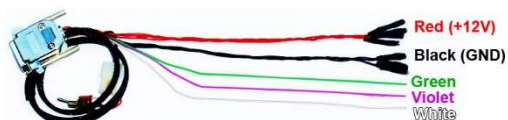

3 - DO A LINK

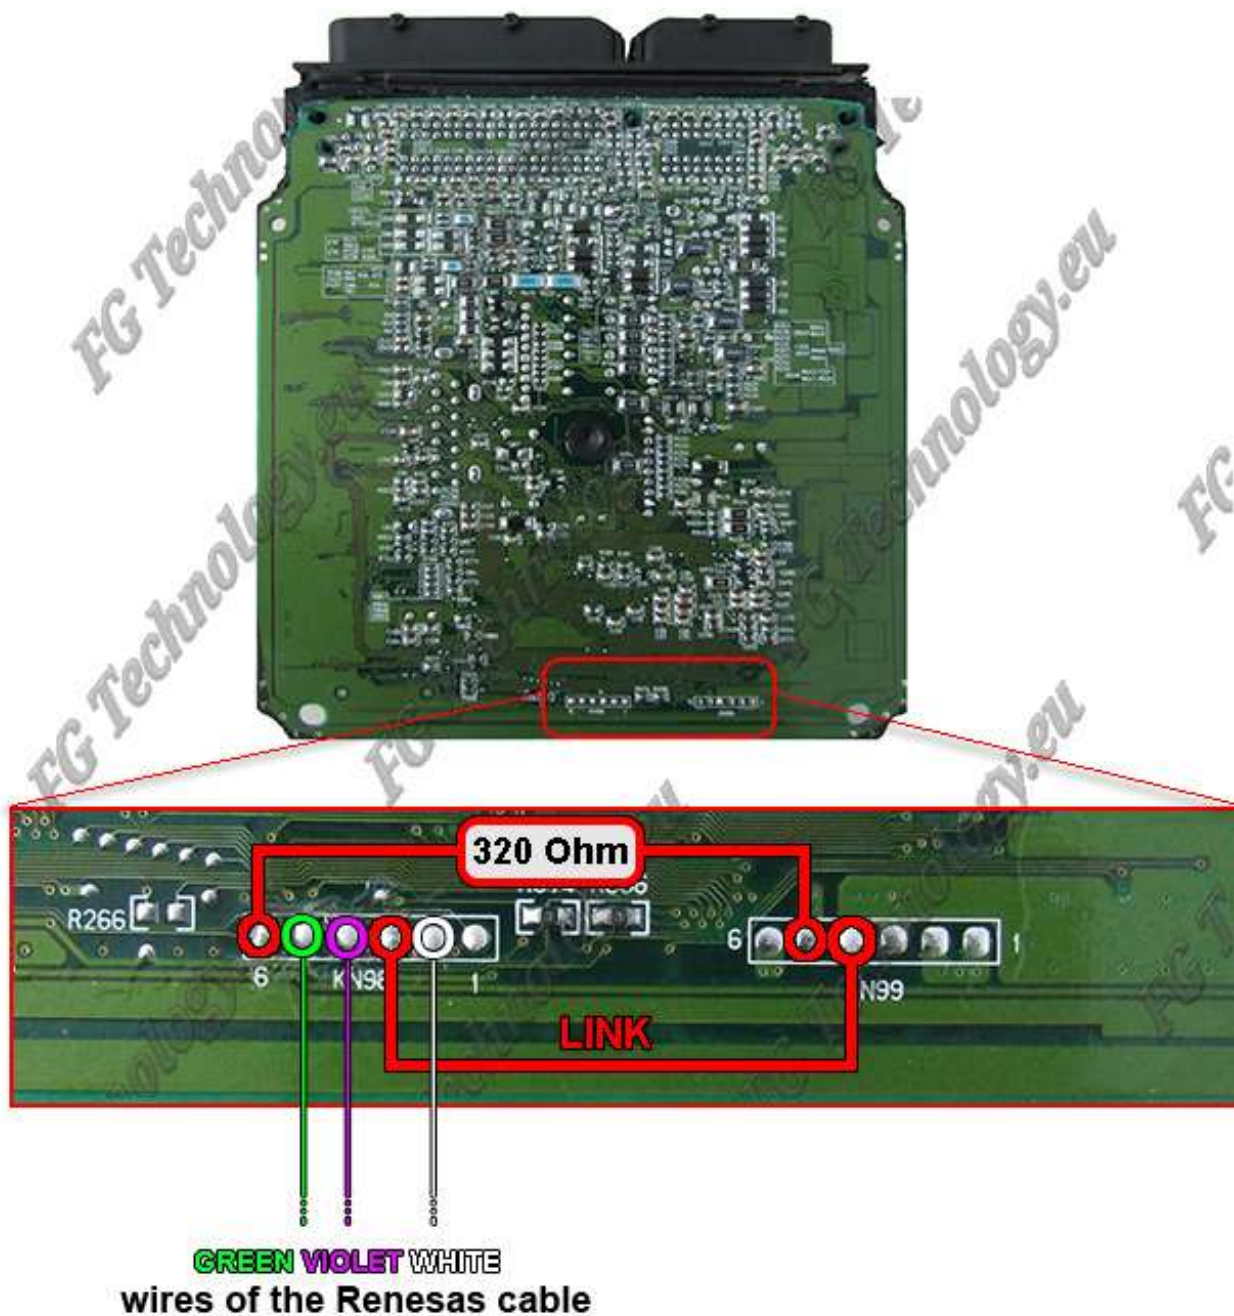

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.