



ECU EDC17 C73 - TC1793 Internal Flash

FASE 1: (DISPONIBILE CON FIRMWARE DAL 2015)

Connettere il seguente pinout e utilizzare il driver:

OBD TOOL PASSWORD SPECIAL *ALL*

(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (AVAILABLE WITH FIRMWARE SINCE 2015)

Connect the following pinout and use the driver:

OBD TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))



A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina.

Quindi, porre la centralina in Boot Mode come descritto alla successiva Fase 2.

Now, once you have found the password, you can read and write the ECU.

So, set in Boot Mode the ECU as described in next Step 2.

FASE 2:


Porre la centralina in Boot Mode connettendo il seguente pinout rimuovendo i fili bianco e viola e spostando la linea CAN.

Usare il driver: **BOOT MODE TRICORE SAK TC1793**

STEP 2:

Set in Boot Mode the ECU, so connect the following pinout removing the white and violet wires and changing the CAN line.

Use the driver: **BOOT MODE TRICORE SAK TC1793**

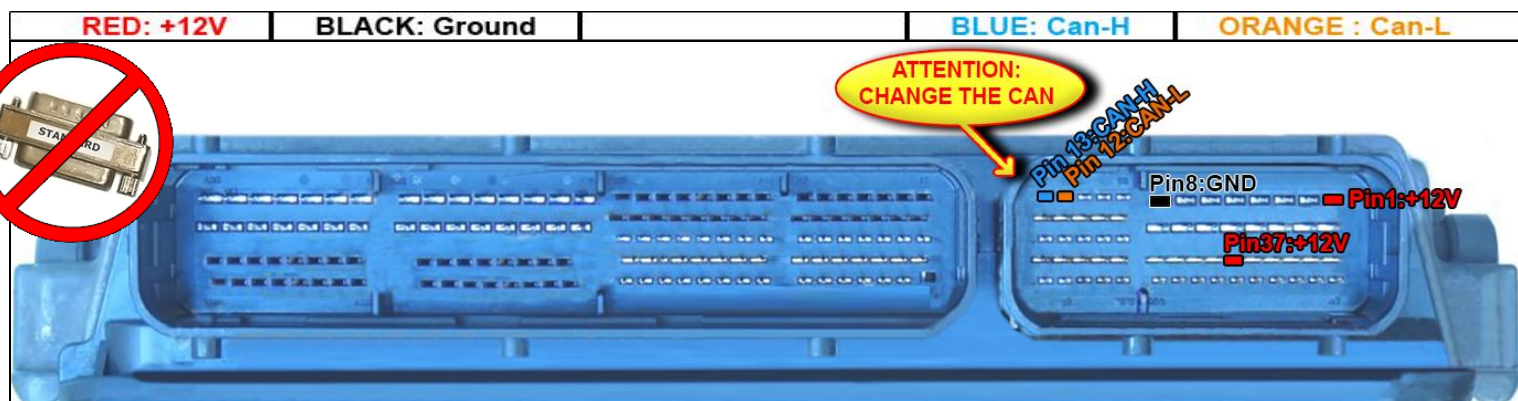

A pagina seguente il Boot..

At following page the Boot..



Gray wire of the Tricore cable