



The lay-by pins are placed in the lower part of the ECU.

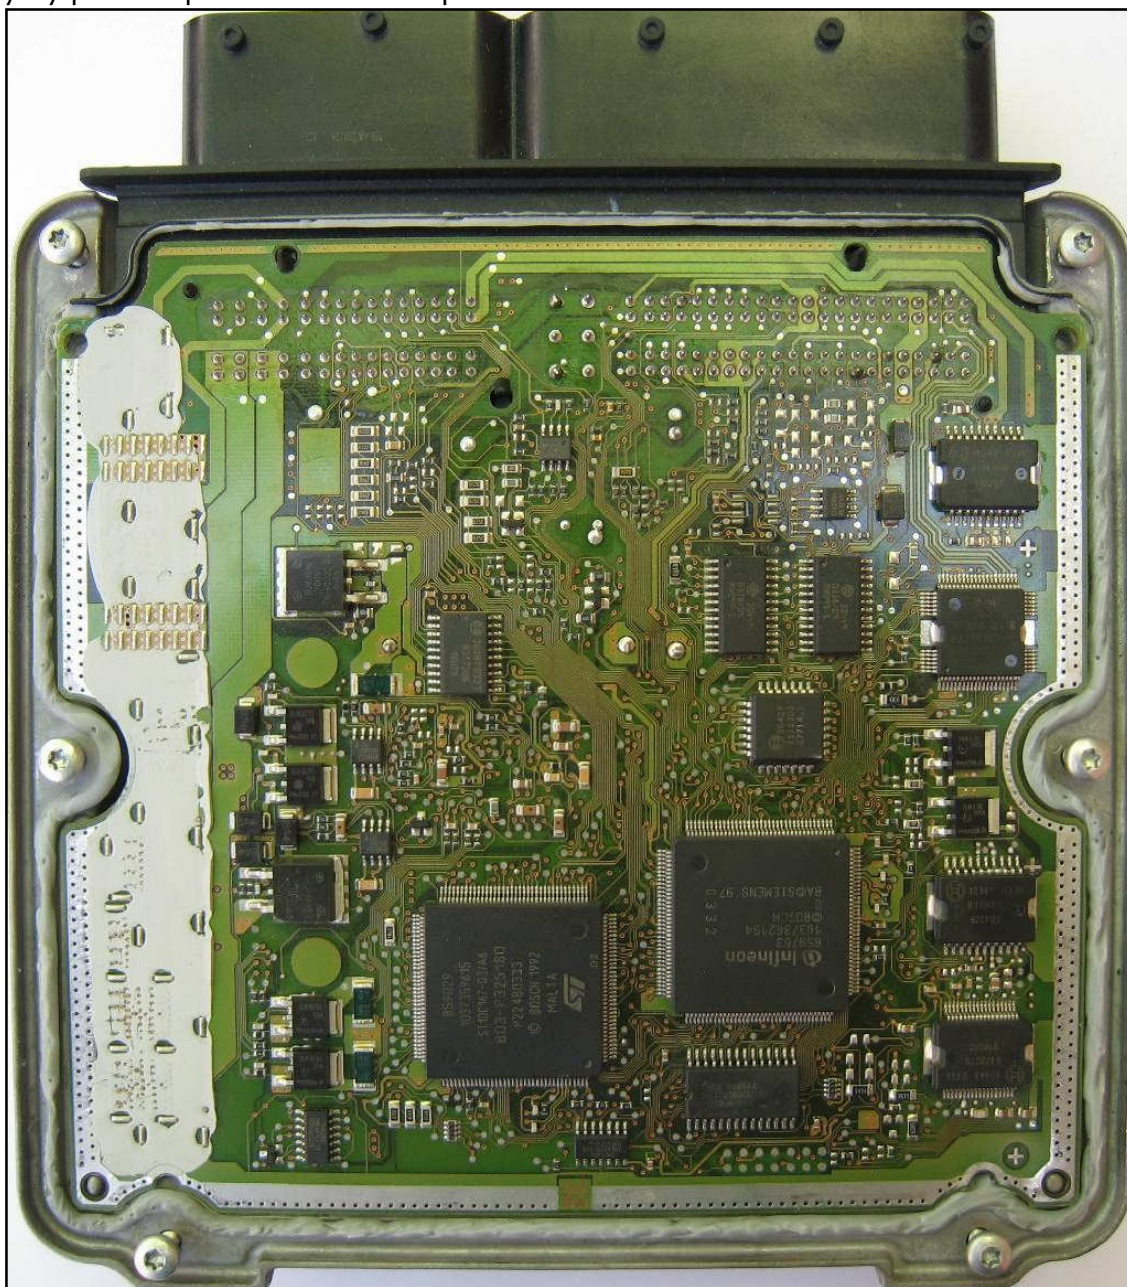


ECU CONNECTOR

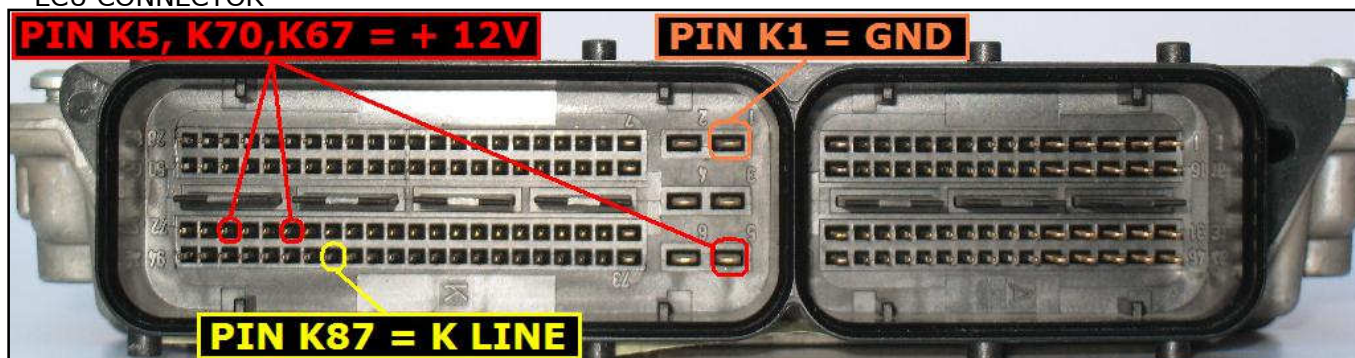

DIRECT CONNECTION

Connect the universal cable to POL4 as shown in the picture

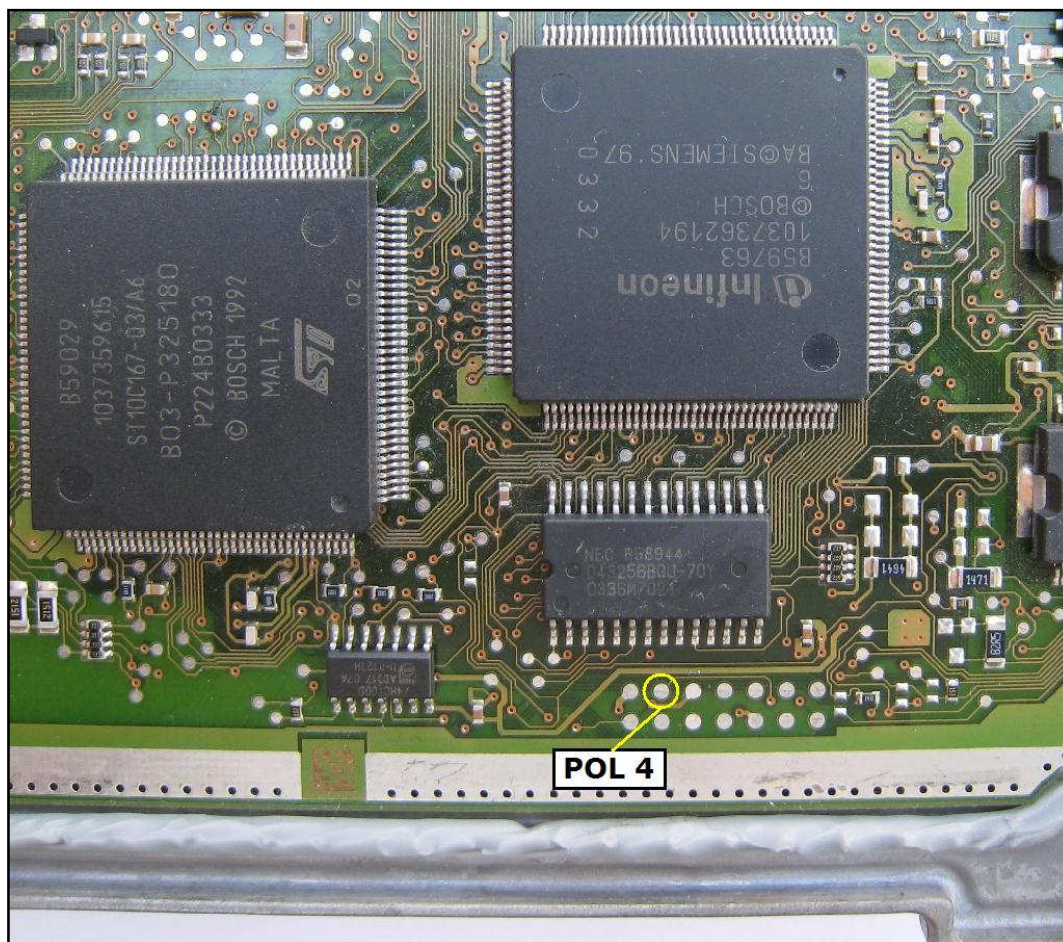**DIMA CONNECTION**