



The lay-by pins are placed in the lower part of the ECU.

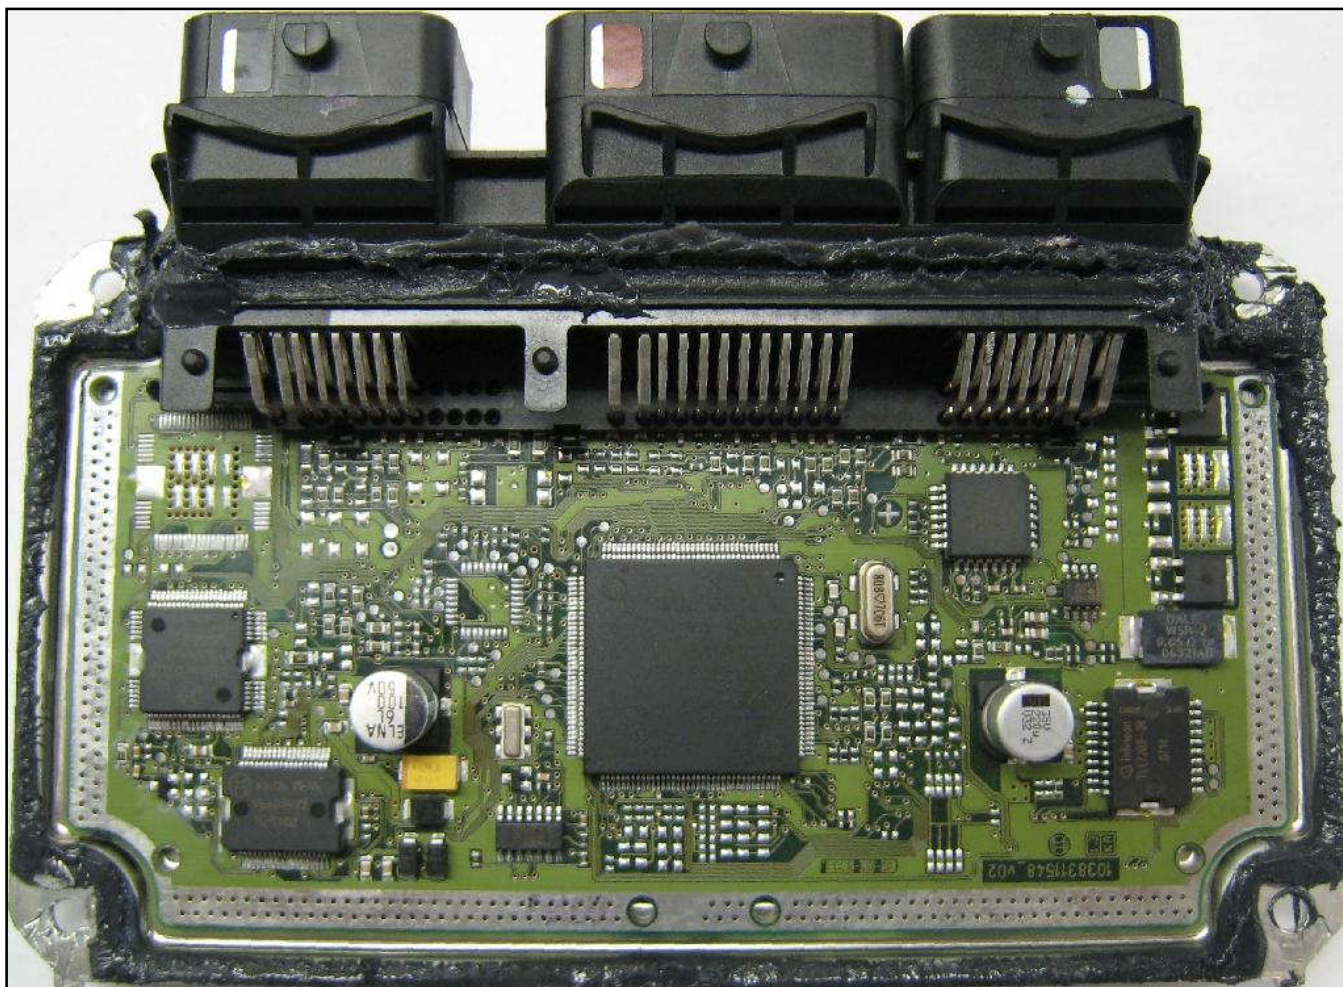

ECU CONNECTOR

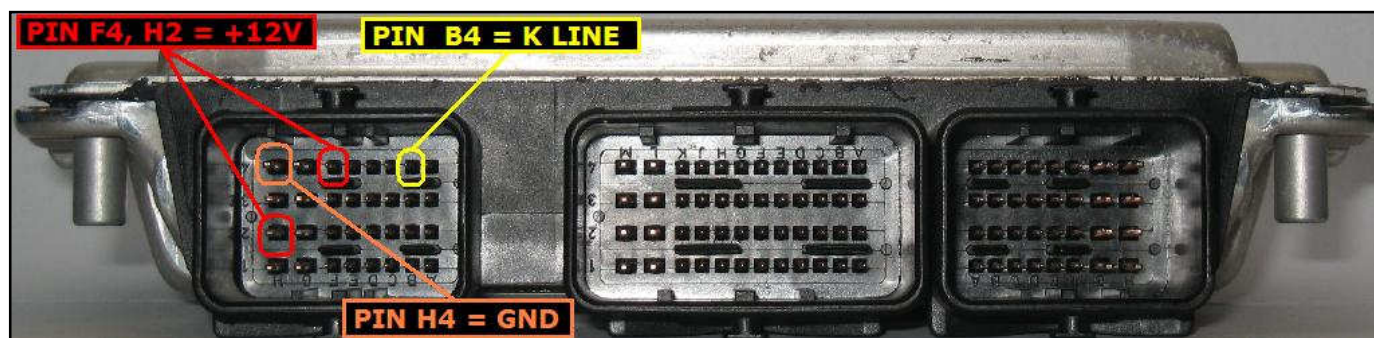

DIRECT CONENCTION

Connect the universal wiring to POL4 & POL5 and to the connector as in the following pictures

