

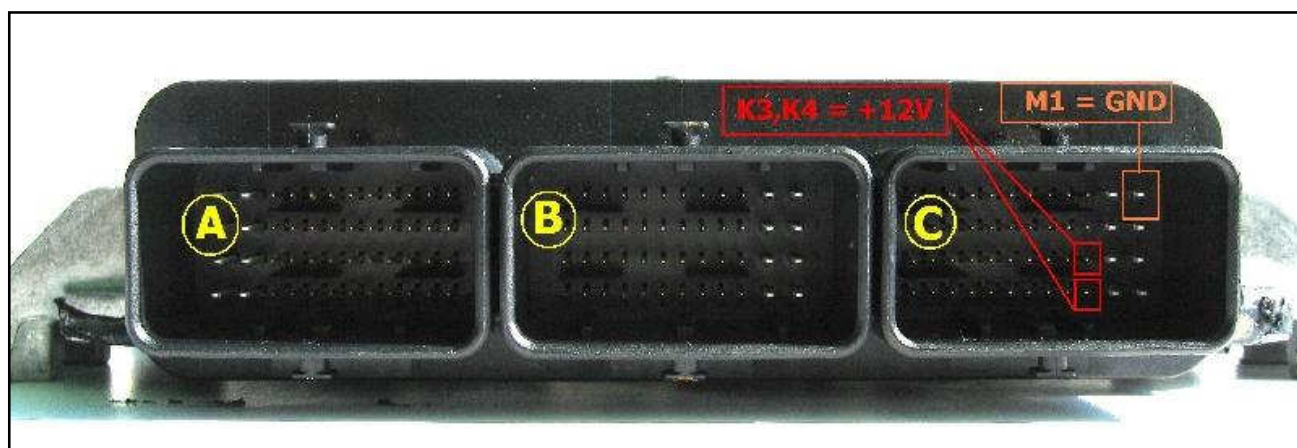


The lay-by pins are placed in the middle of the ECU as in the picture.

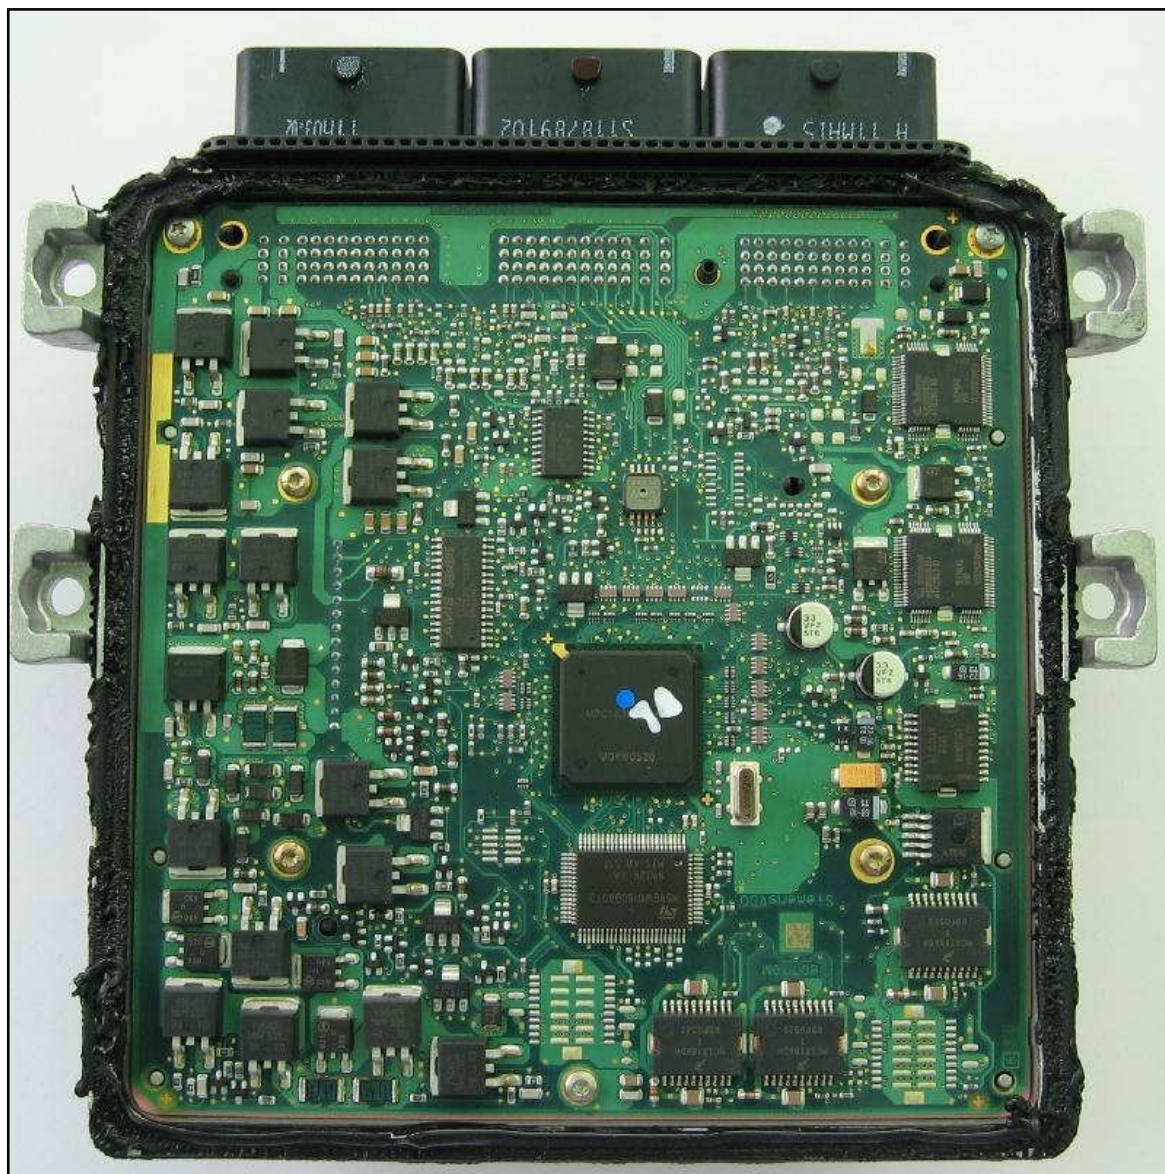

DIRECT CONNECTION with SIEMENS F34FL006

Connect the adapter F34FL006 as in the picture.

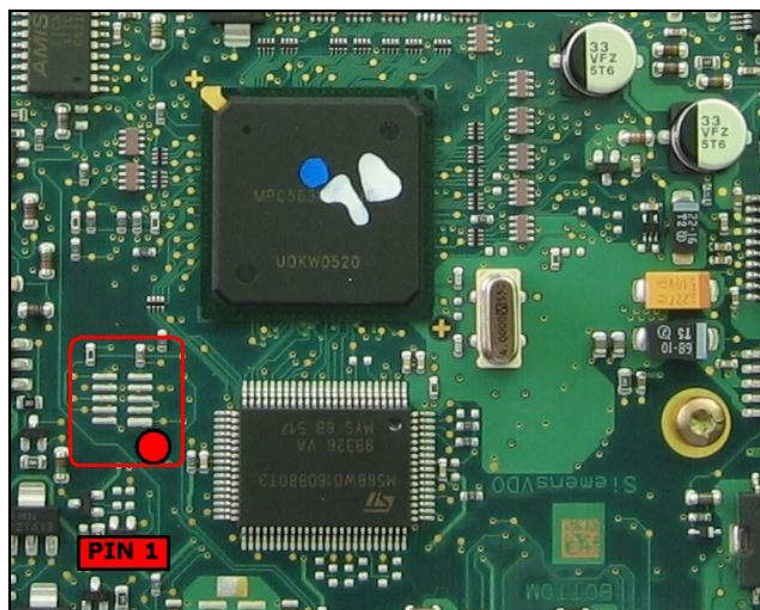