



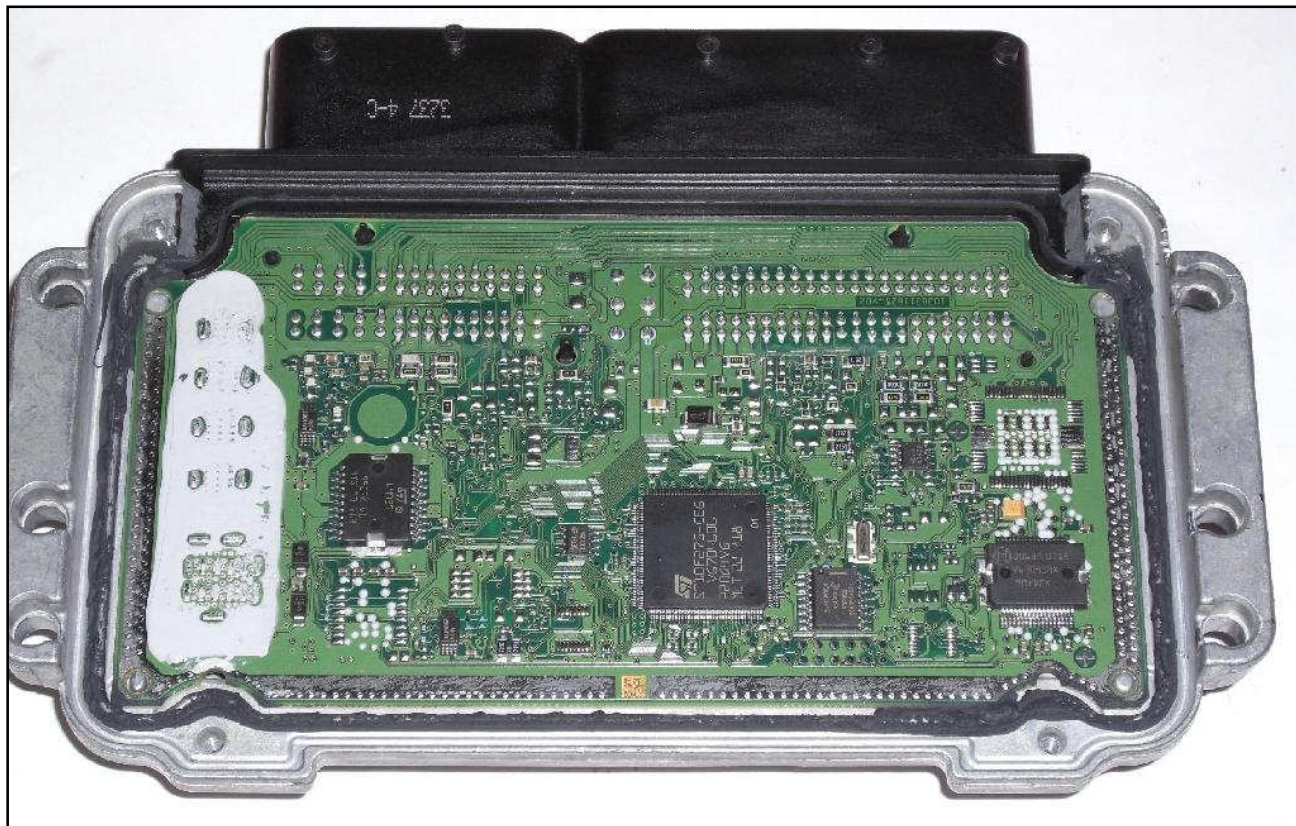


External power is necessary only with DIRECT CONNECTION. If you use DIMA CONNECTION the power will be given by the dima module.

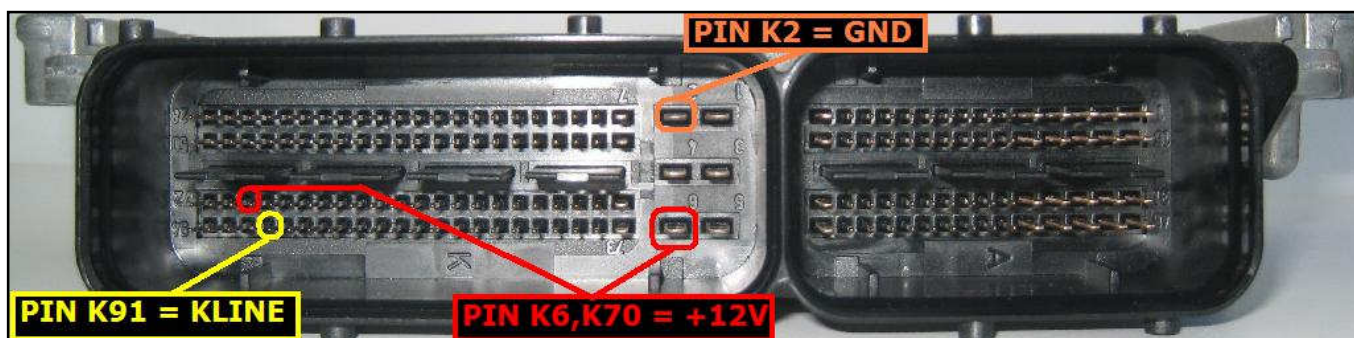



**DIRECT CONNECTION**

Connect universal cable to POL4 & POL5 and to connector as suggested.

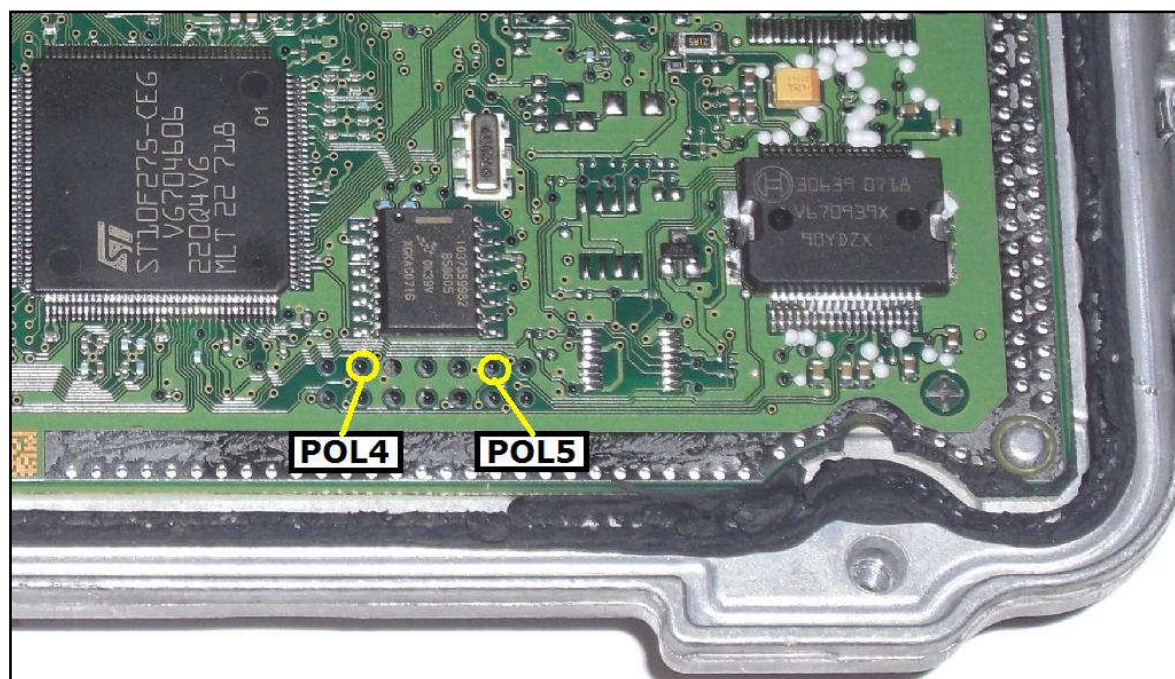**DIMA CONNECTION**