


NEW TRASDATA

Plugin 944 DELPHI_DCM6.2AP_SSANGYONG

Plugin 1024 DELPHI_DCM6.2AP_HYUNDAI

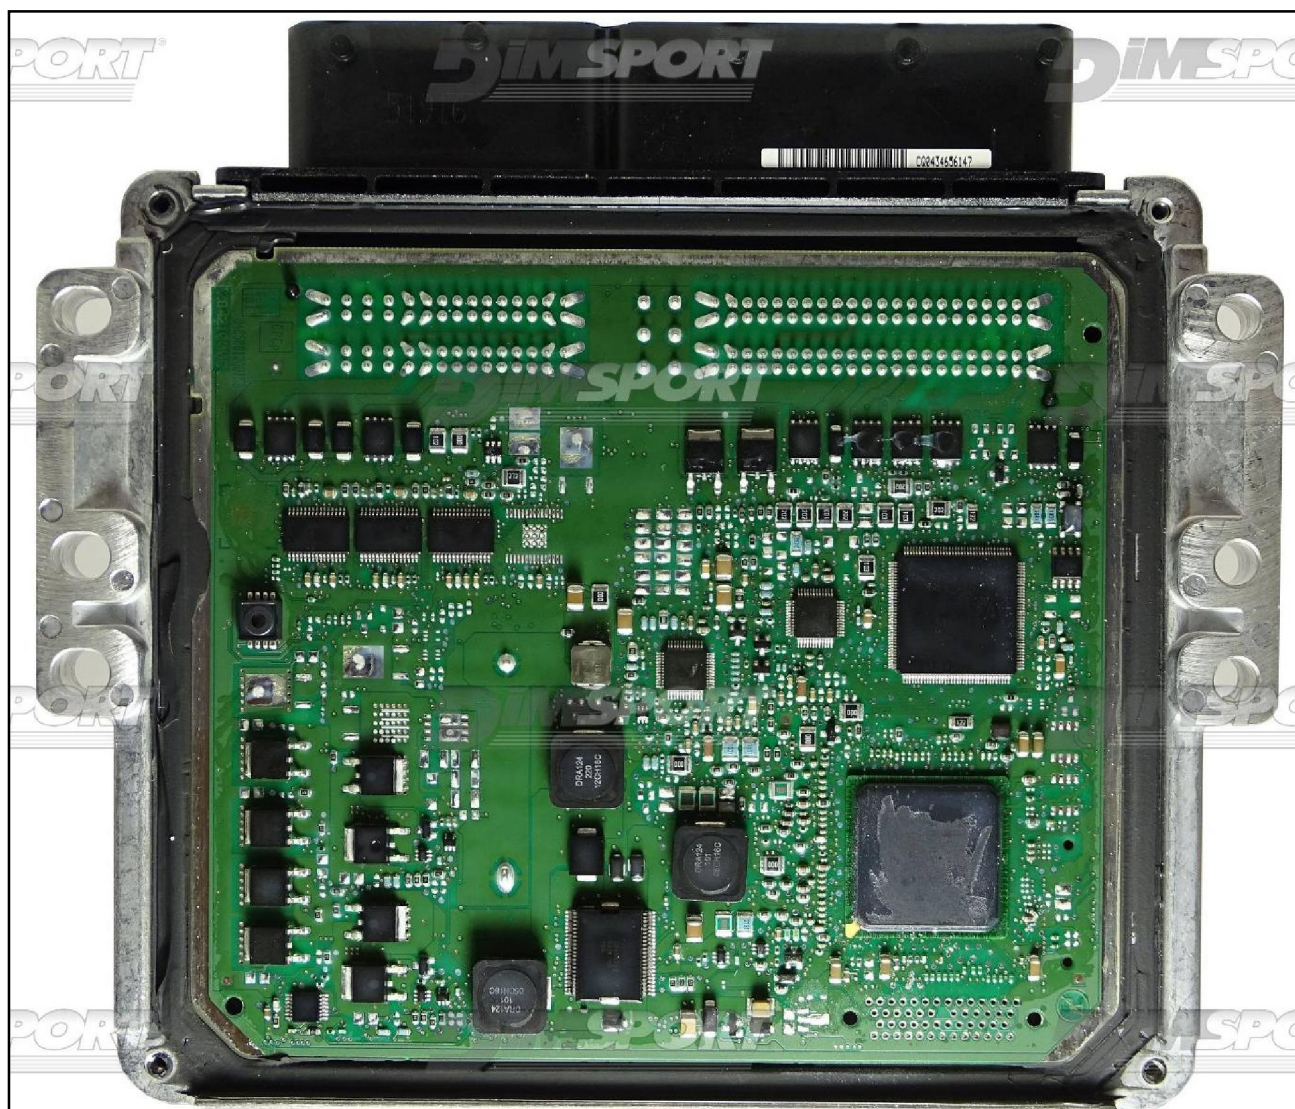




DIRECT CONNECTION


In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON. These connections are required for all the connection approaches: loose wires and metal positioning frame adapter.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

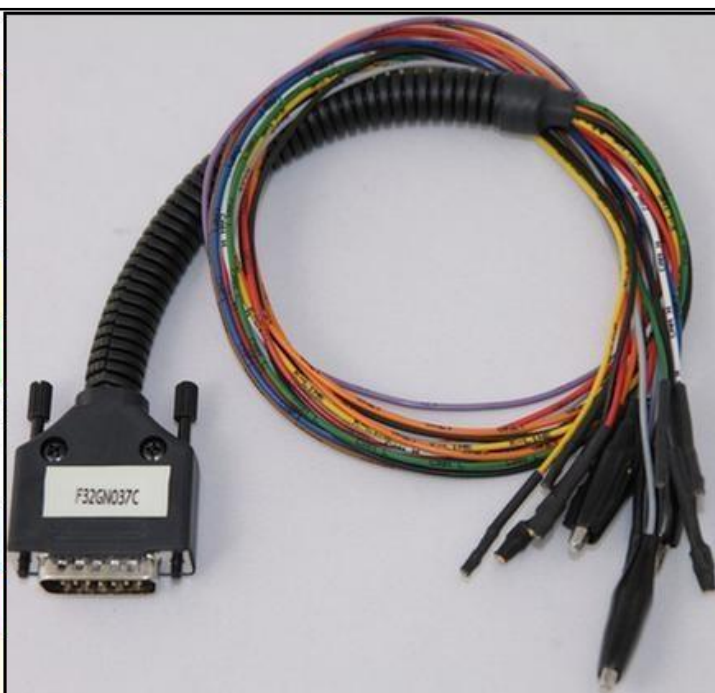


CONNETTORE ECU

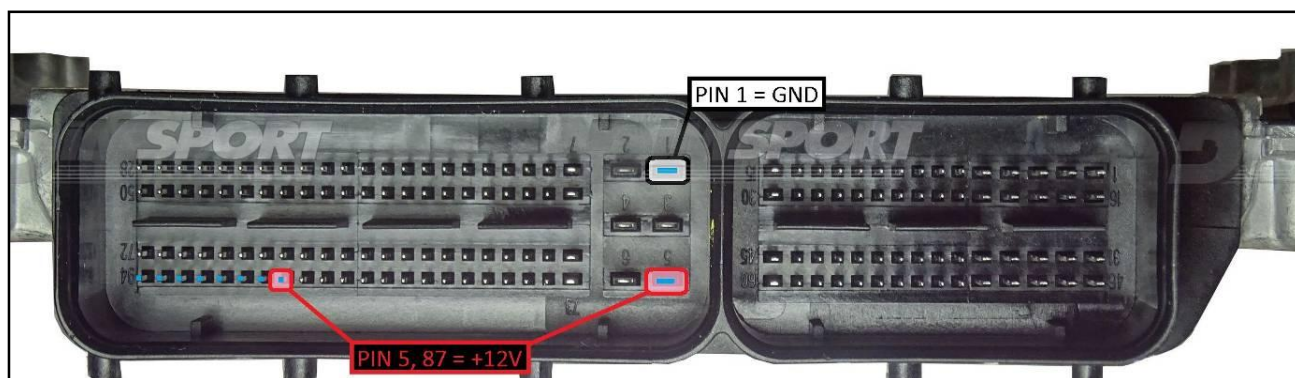

Connect the F34NTF53 cable ad shown in the following picture :


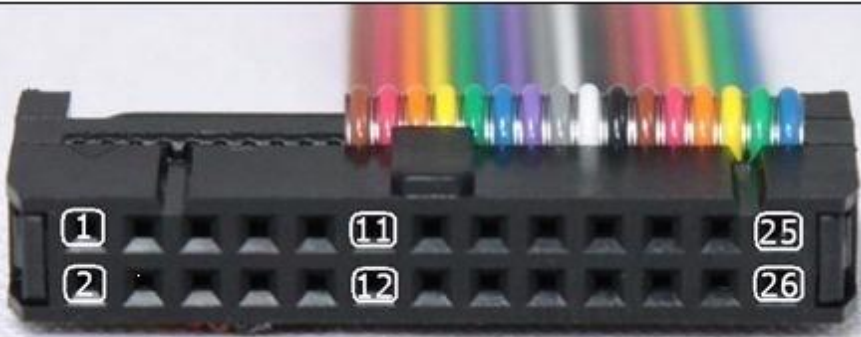
			
Pin	Colore Colour		
11	Non usato Not used		
12	Non usato Not used		
13	Non usato Not used		
14	Non usato Not used		
15	Non usato Not used		
16	Blu Blue		
17	Viola Violet		
18	Grigio Grey		
19	Bianco White		
20	Nero Black		
21	Marrone Brown		
22	Rosso Red		
23	Non usato Not used		
24	Giallo Yellow		
25	Non usato Not used		
26	Non usato Not used		

Connect the wires on the pads 16,17,18,19,20,21,22,24 avoiding any short circuits.

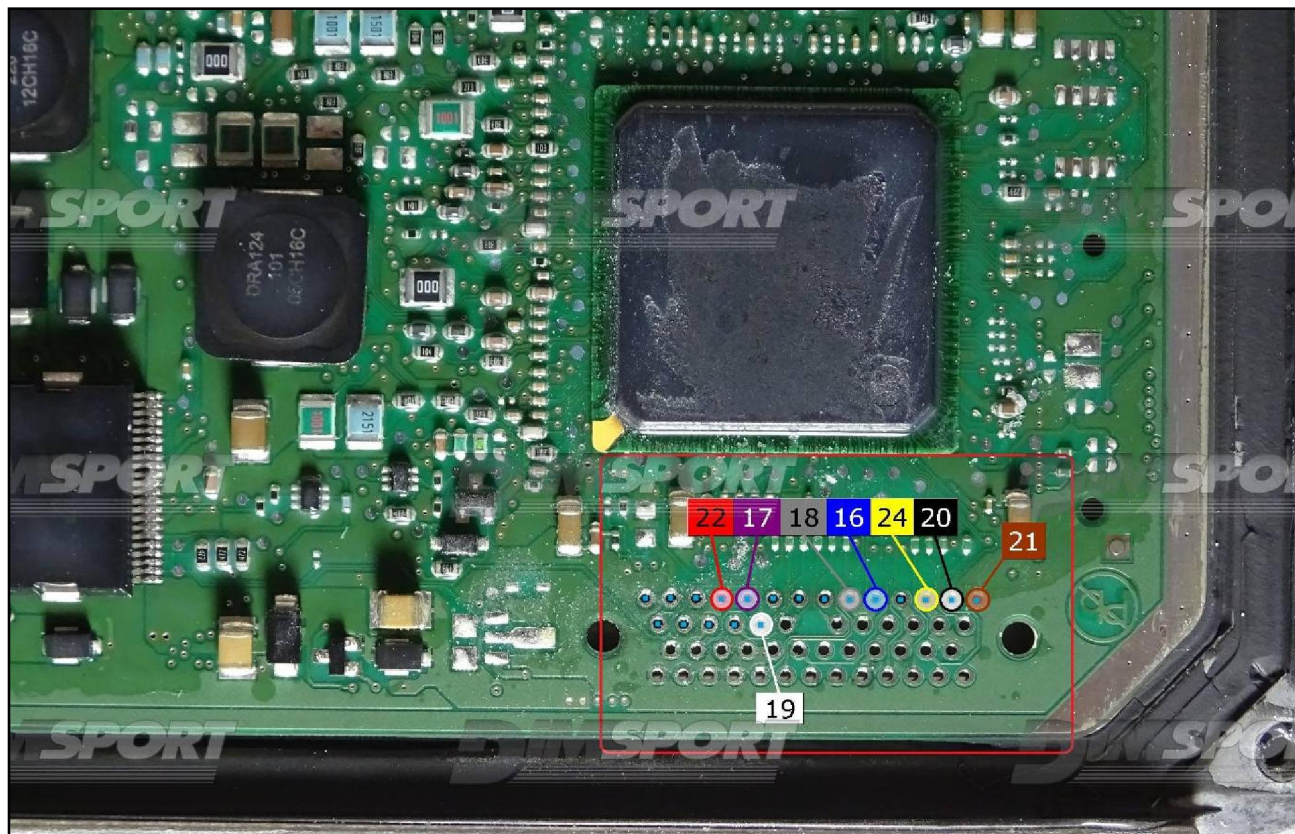

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM013 adapter.

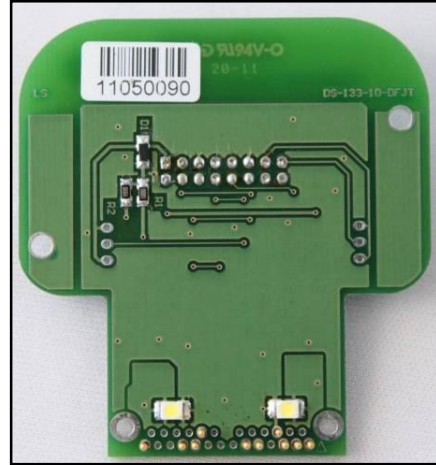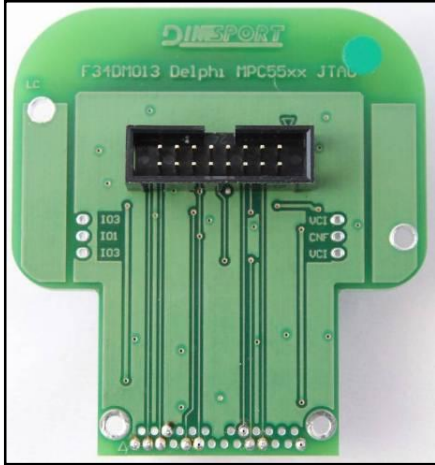

JTAG pads are placed below the microprocessor.
Place the F34DM013 adapter as shown in the following picture.

