


In this ECU it is possible only the DIRECT CONNECTION



DIRECT CONNECTION

Connect universal cable to POL4 & POL5 and to connector as suggested.

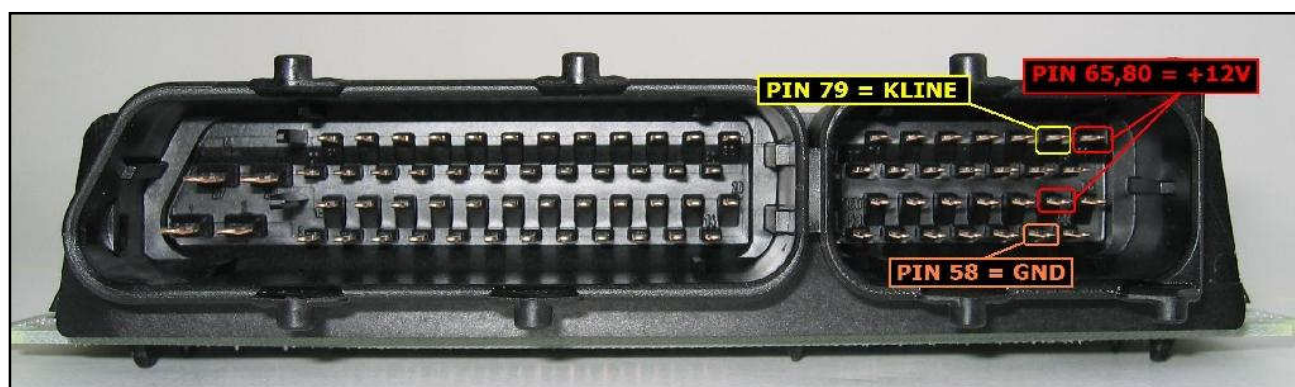