


The lay-by pins are placed in the lower part of the ECU.

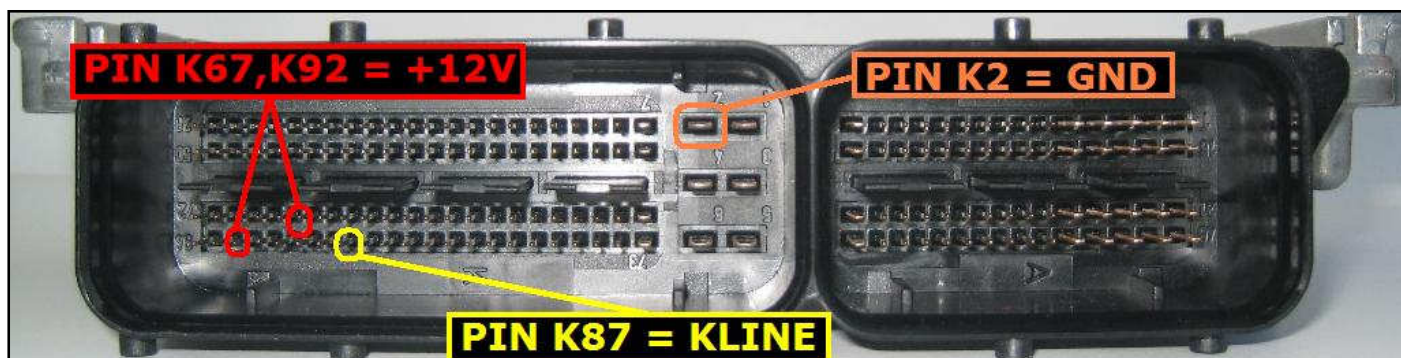


ECU CONNECTOR



DIRECT CONNECTION

Connect universal cable to POL4 & POL5 and to connector as suggested.

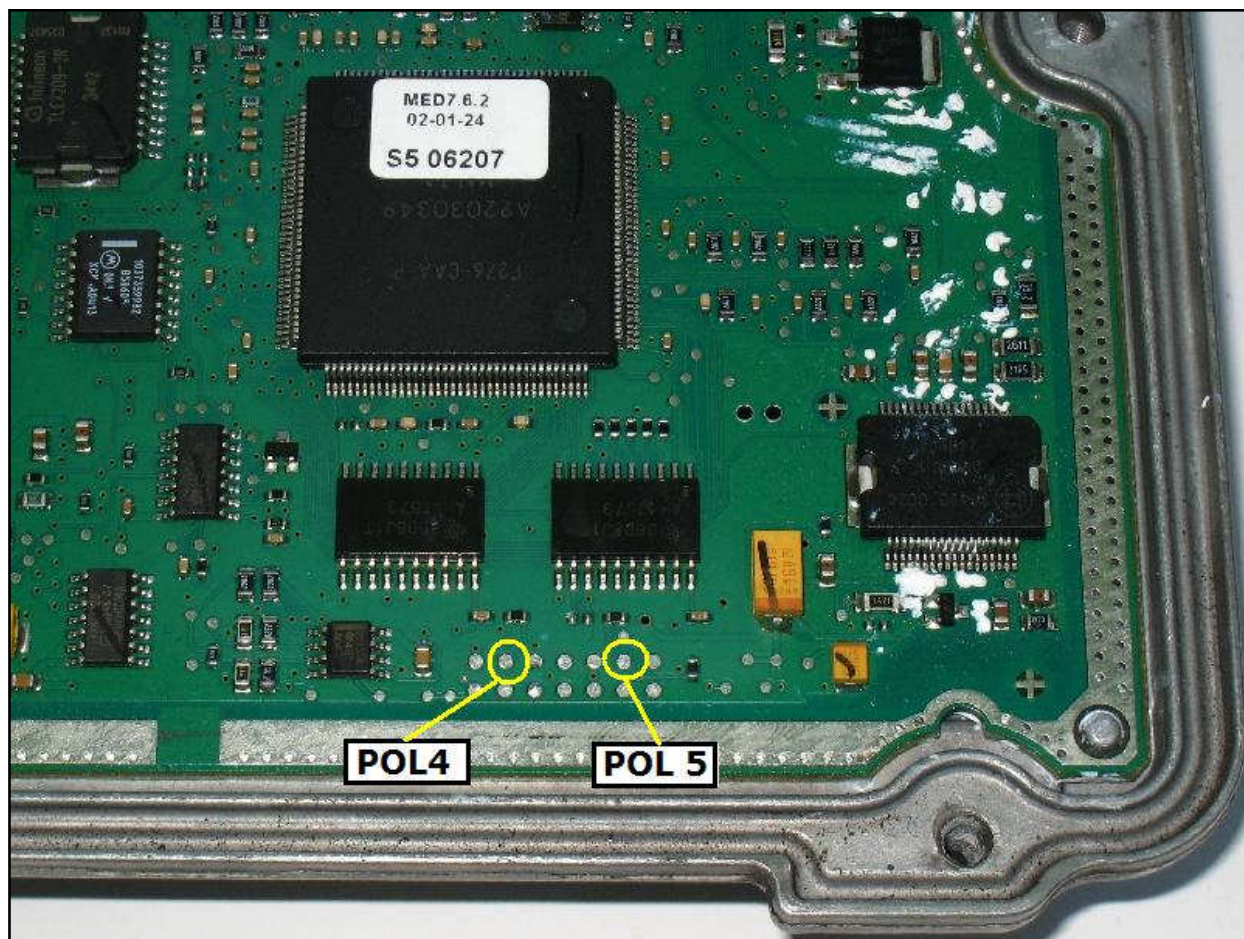**DIMA CONNECTION**