

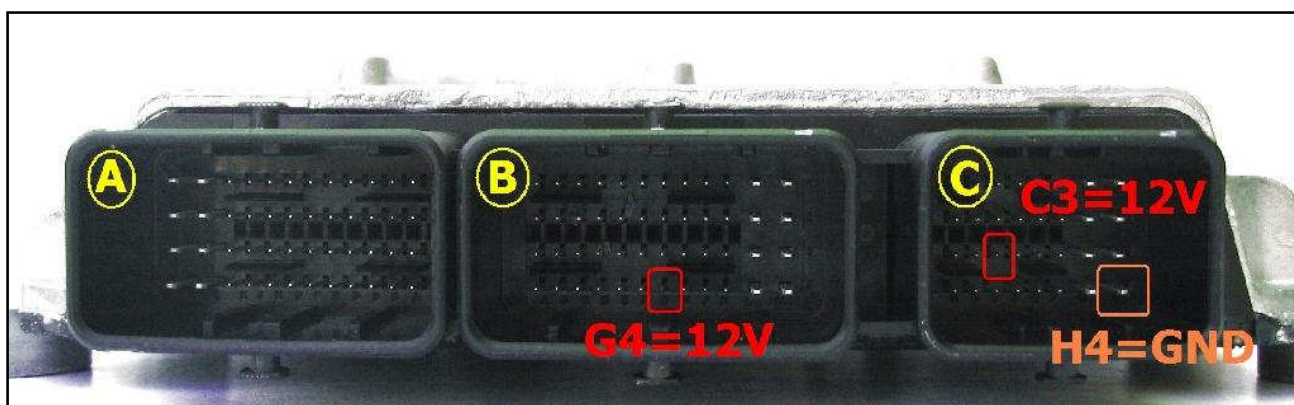
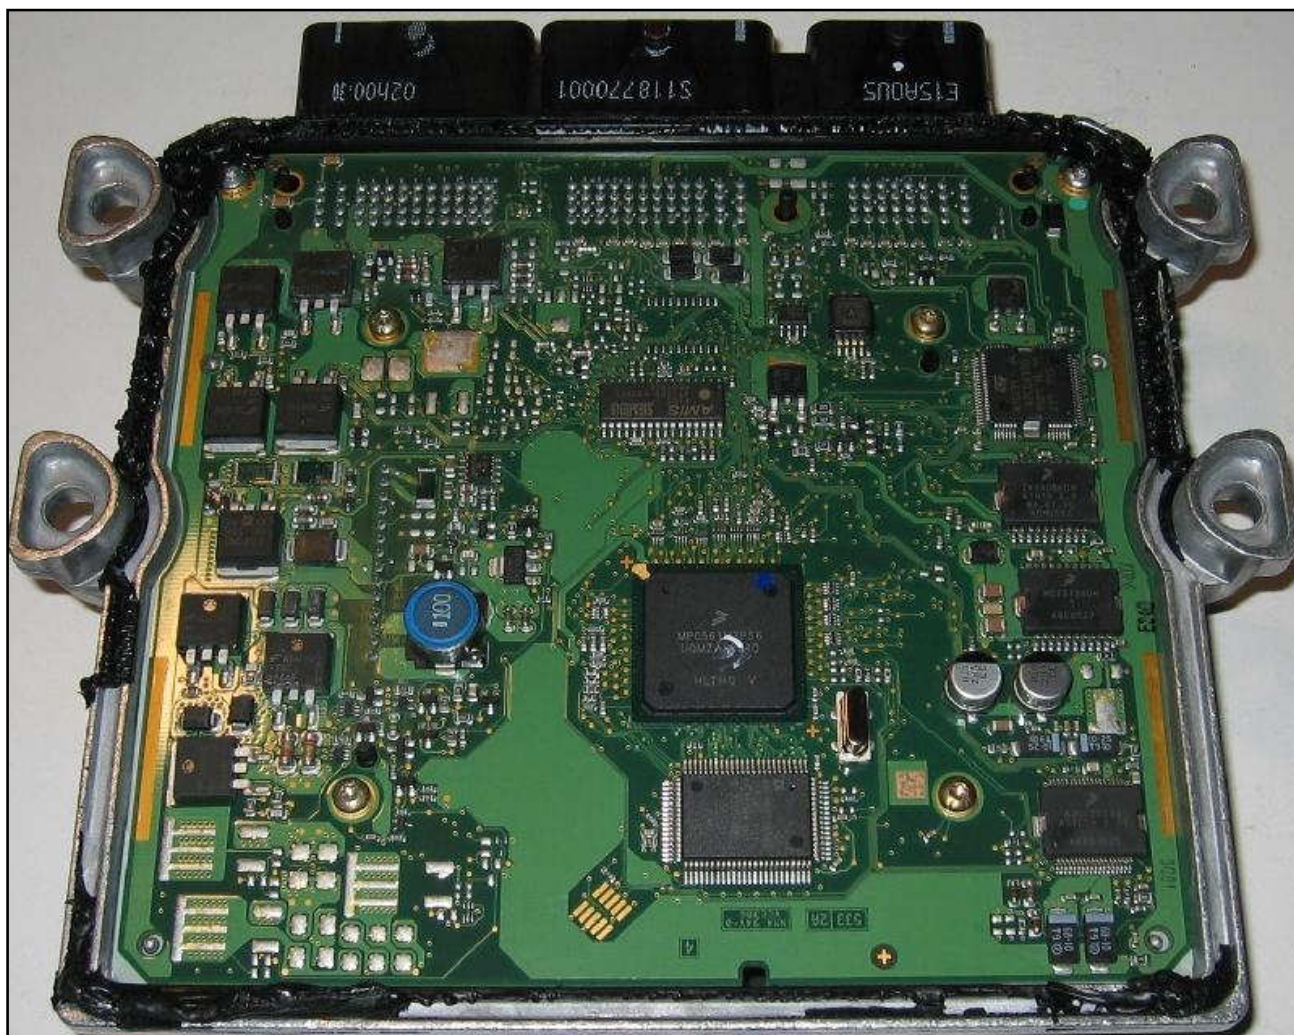


The lay-by pins are placed in the lower part of the ECU as shown in the picture.

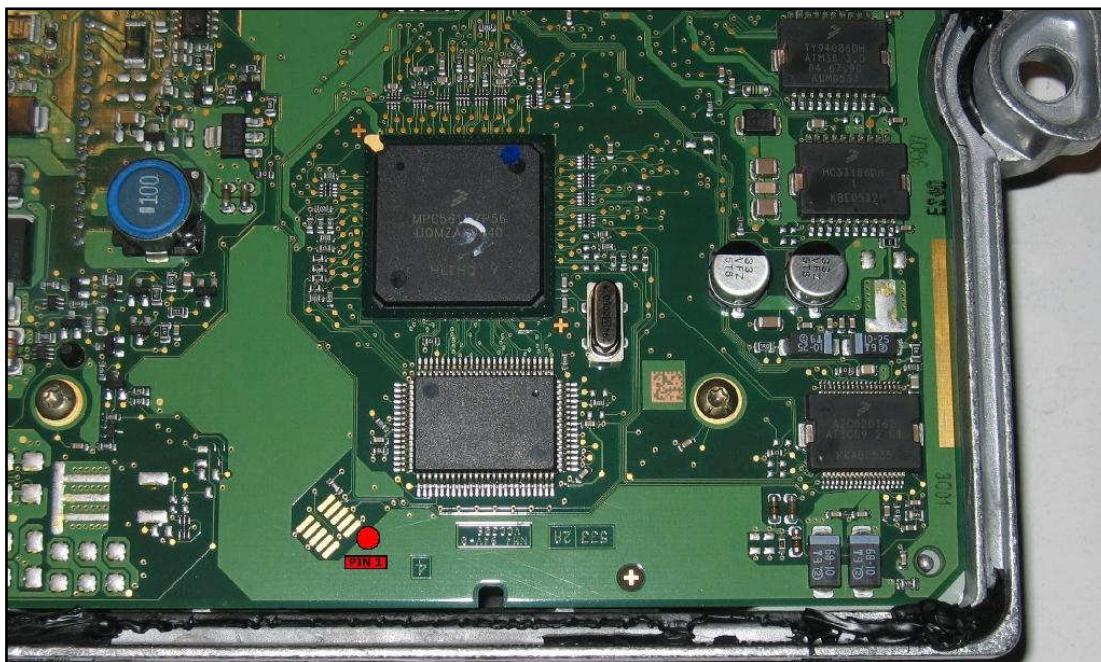

DIRECT CONNECTION with SIEMENS F34FL006

Connect the adapter F34FL006 as in the picture.

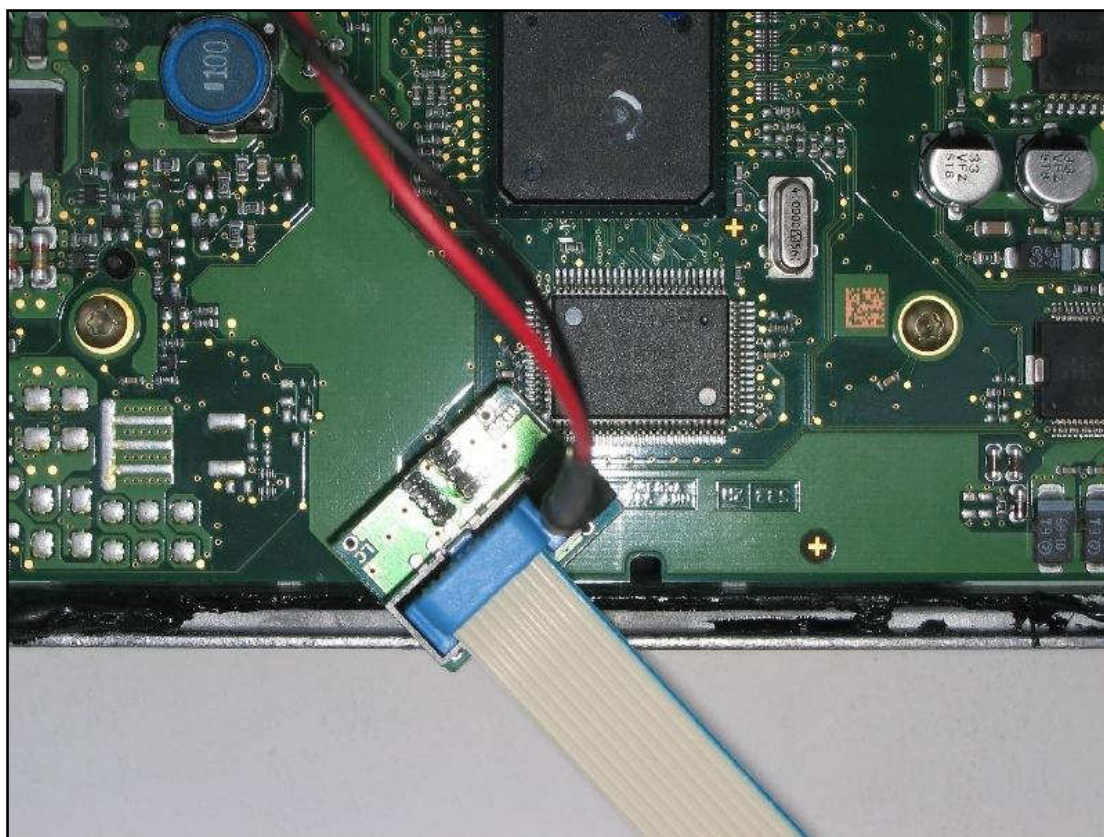

DIMA CONNECTION

It is necessary to use the adapters F34DM003 and F34DM004, check carefully the correct position of the PIN 1.

