



The lay-by pins are placed in the lower part of the ECU.




The pin 1 pointed in the picture here below is referred only for the DIMA connection.

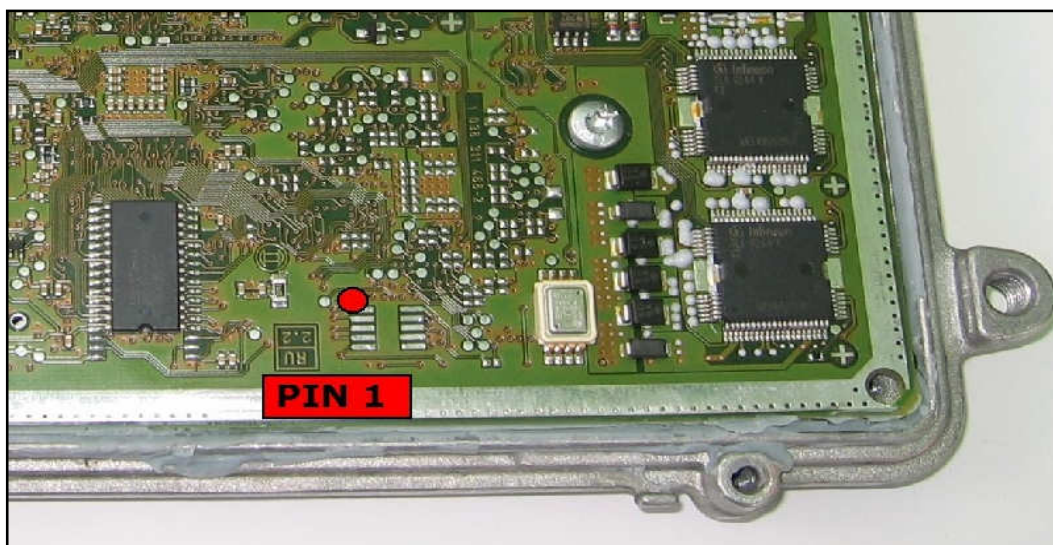

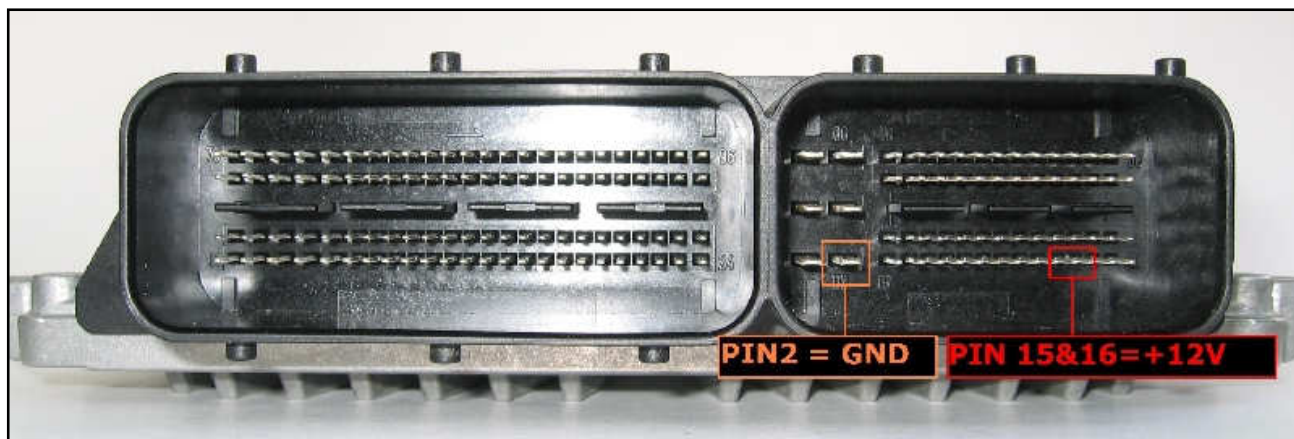

DIRECT CONNECTION

Use adaptor SIEMENS F34FL006

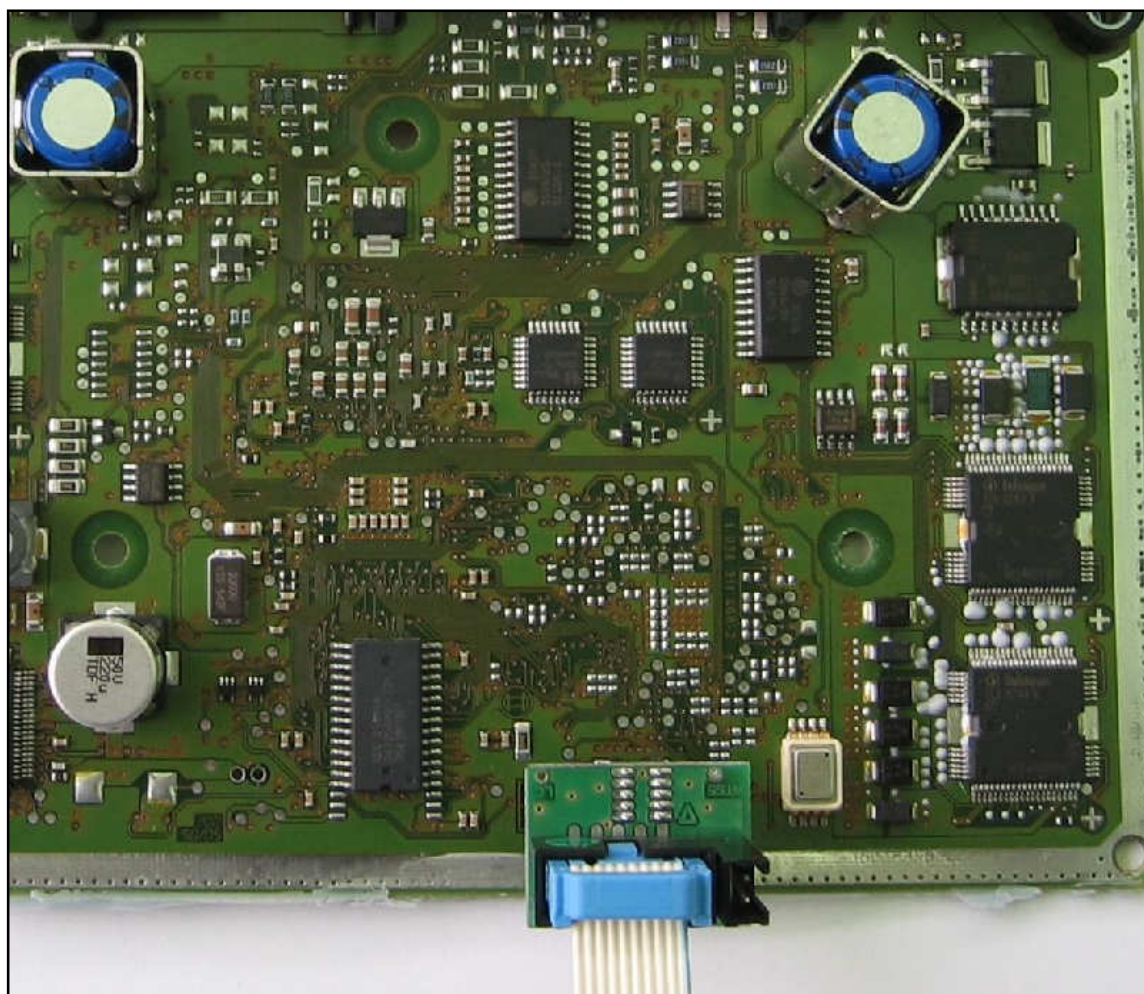

DIMA CONNECTION