


PLUGIN 500 :NEW TRASDATA

The lay by pins are placed in the low-middle side of the ECU. It is possible ONLY the loose wires connection with the F34NTF51 universal adapter.


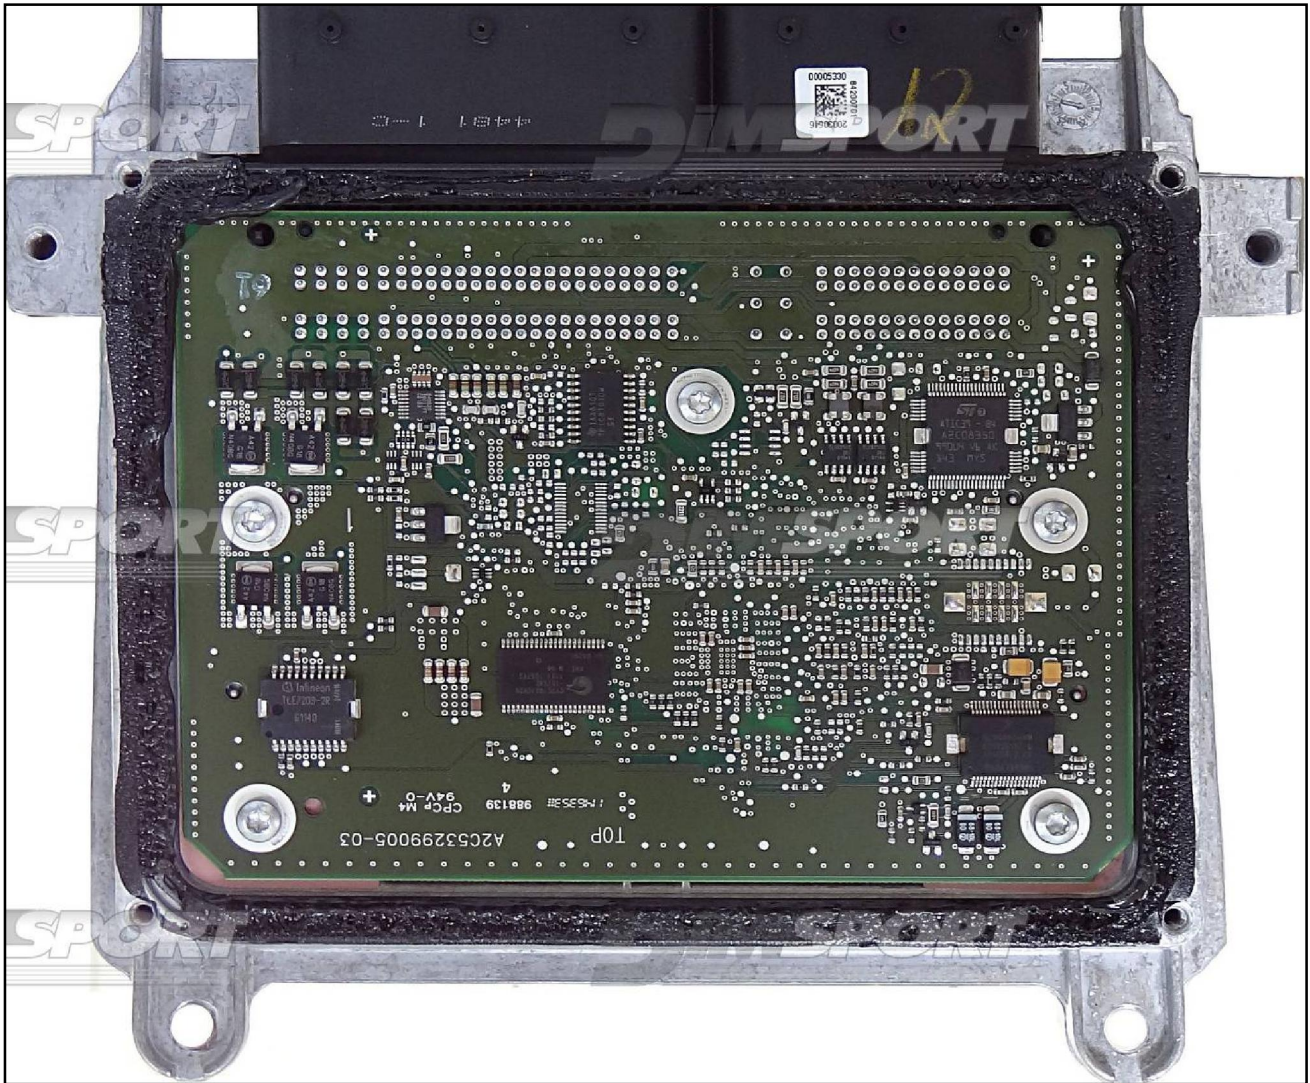


ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.



Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLO/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

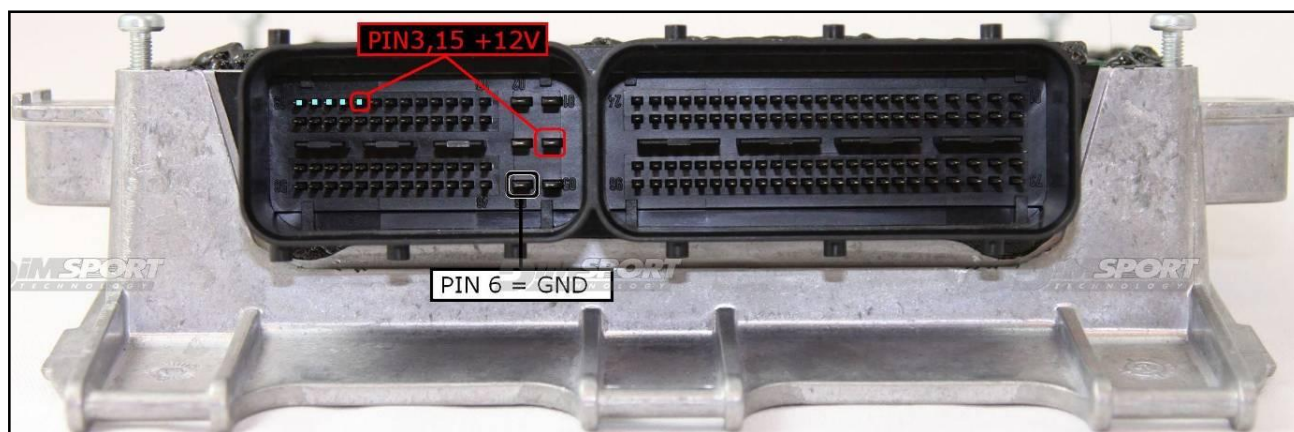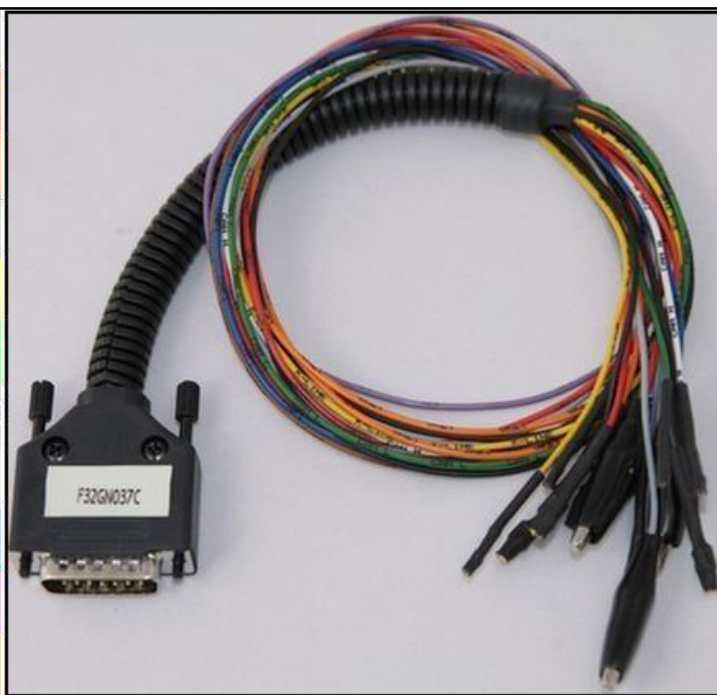

LOOSE WIRES BDM CONNECTION

Connect the wire F34NTF51 as shown here below :

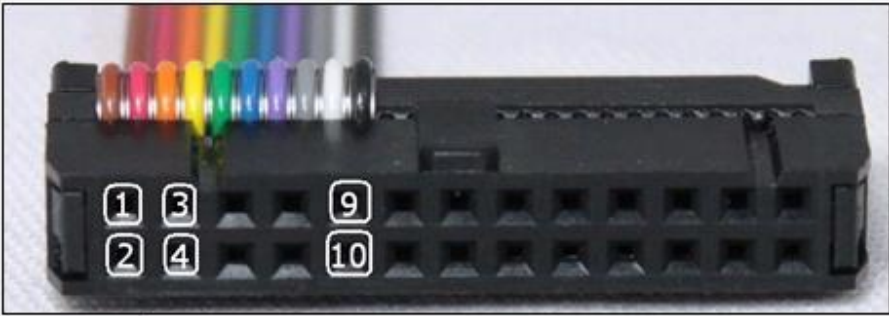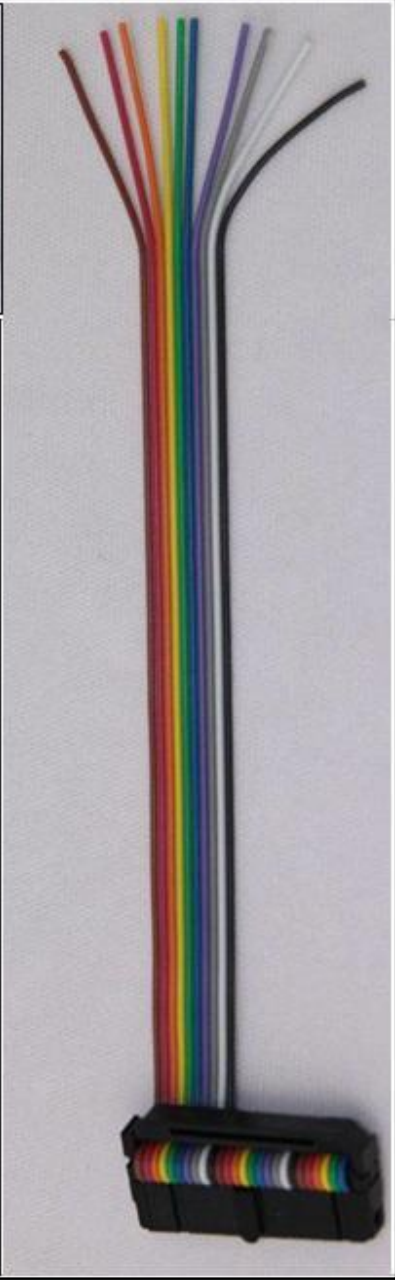		
Pin	Colore Colour	
1	Marrone Brown	
2	Non usato Not used	
3	Non usato Not used	
4	Non usato Not used	
5	Verde Green	
6	Non usato Not used	
7	Viola Violet	
8	Grigio Grey	
9	Non usato Not used	
10	Non usato Not used	

