



On this ECU it is possible ONLY the DIRECT CONNECTION

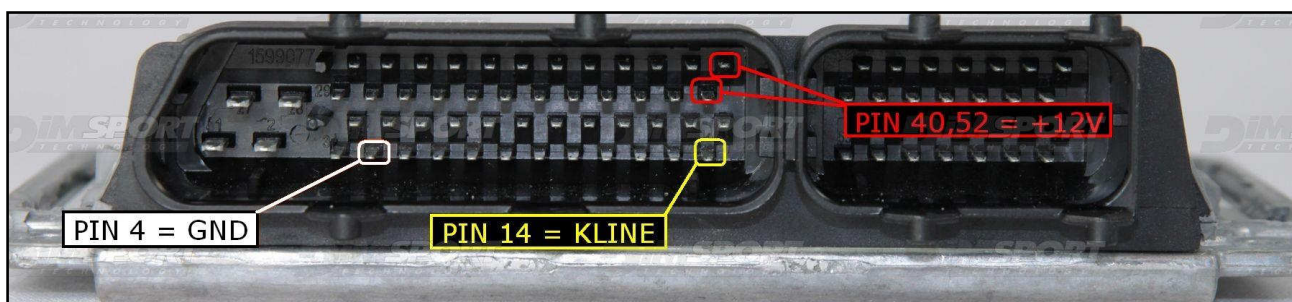

DIRECT CONNECTION

In order to communicate with the BOOT mode it is necessary to link the two pads shown here below. Remove the LINK before connecting back the ECU on the vehicle.

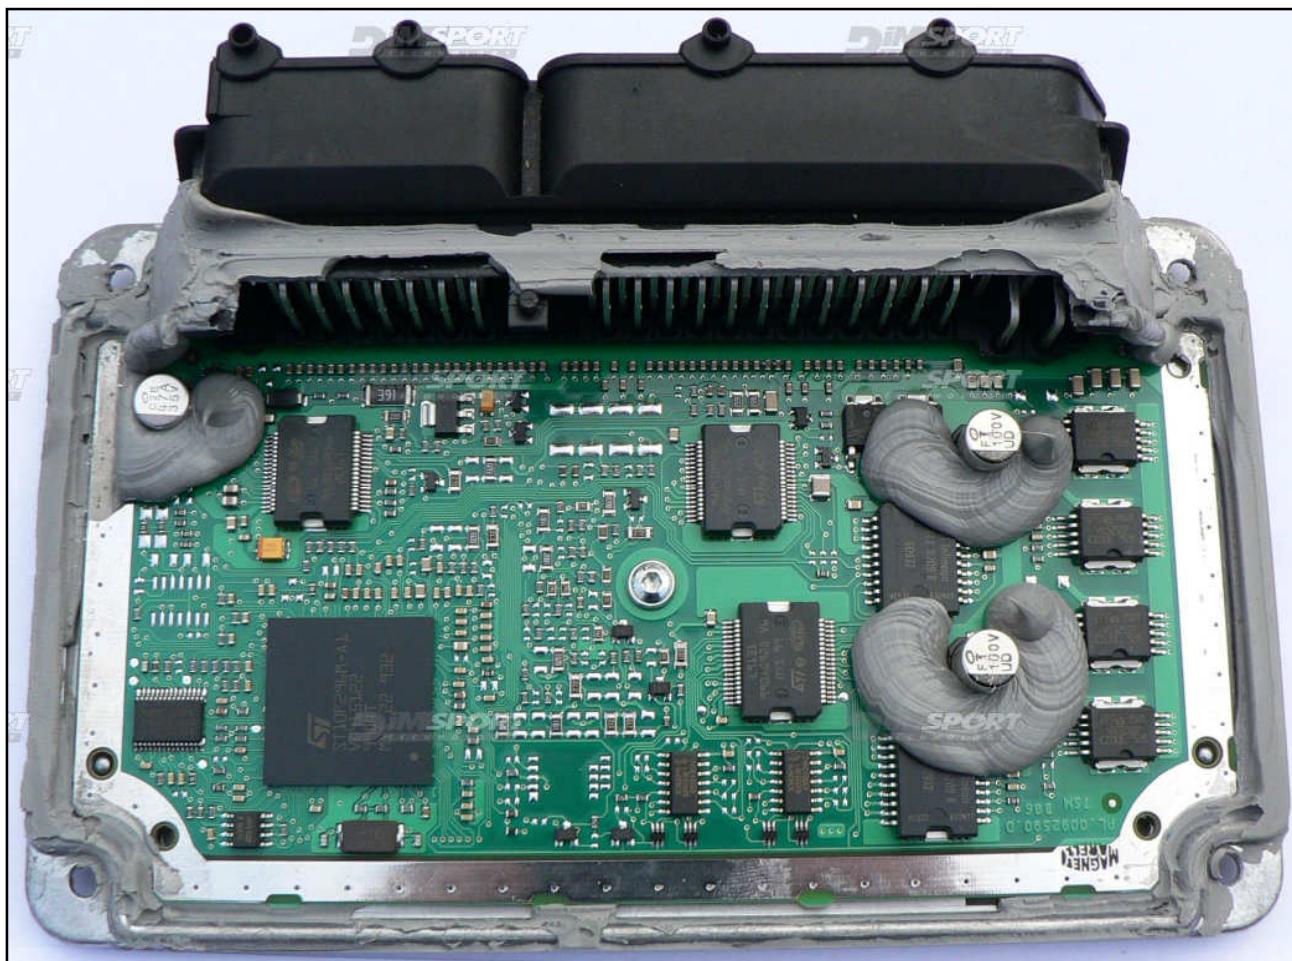