



On this ECU it is possible only the DIRECT CONNECTION
TYPE 01 : ECU 5SF HW2xx

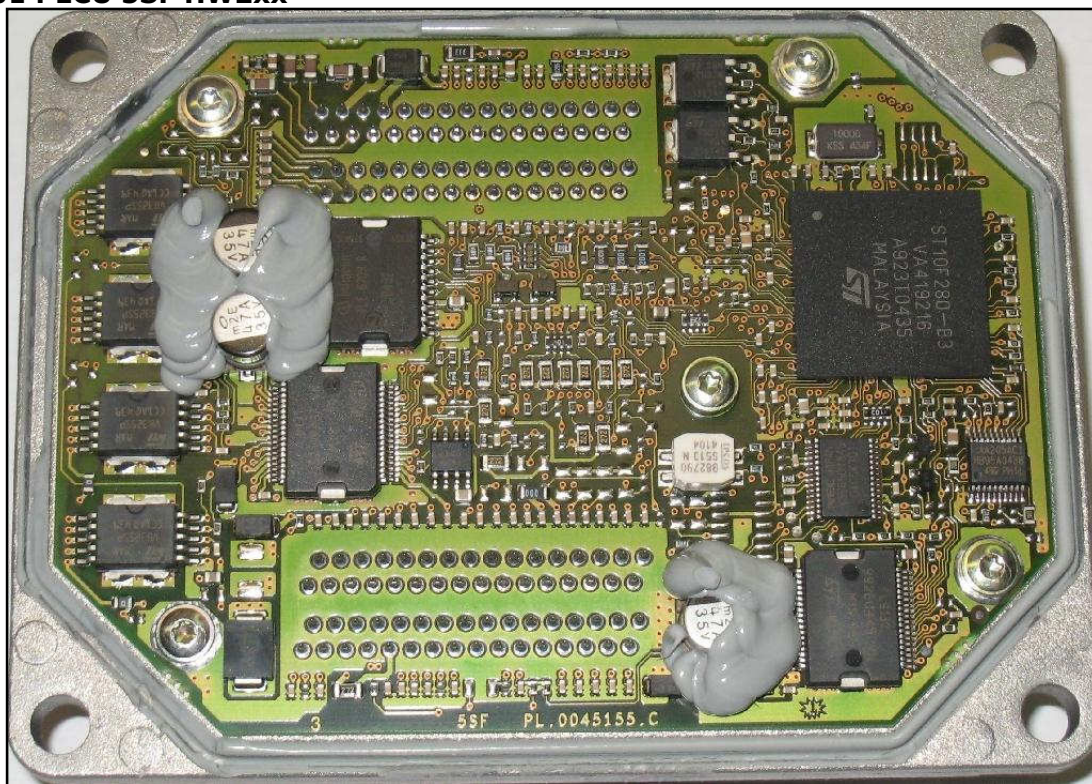


CONNECTIONS

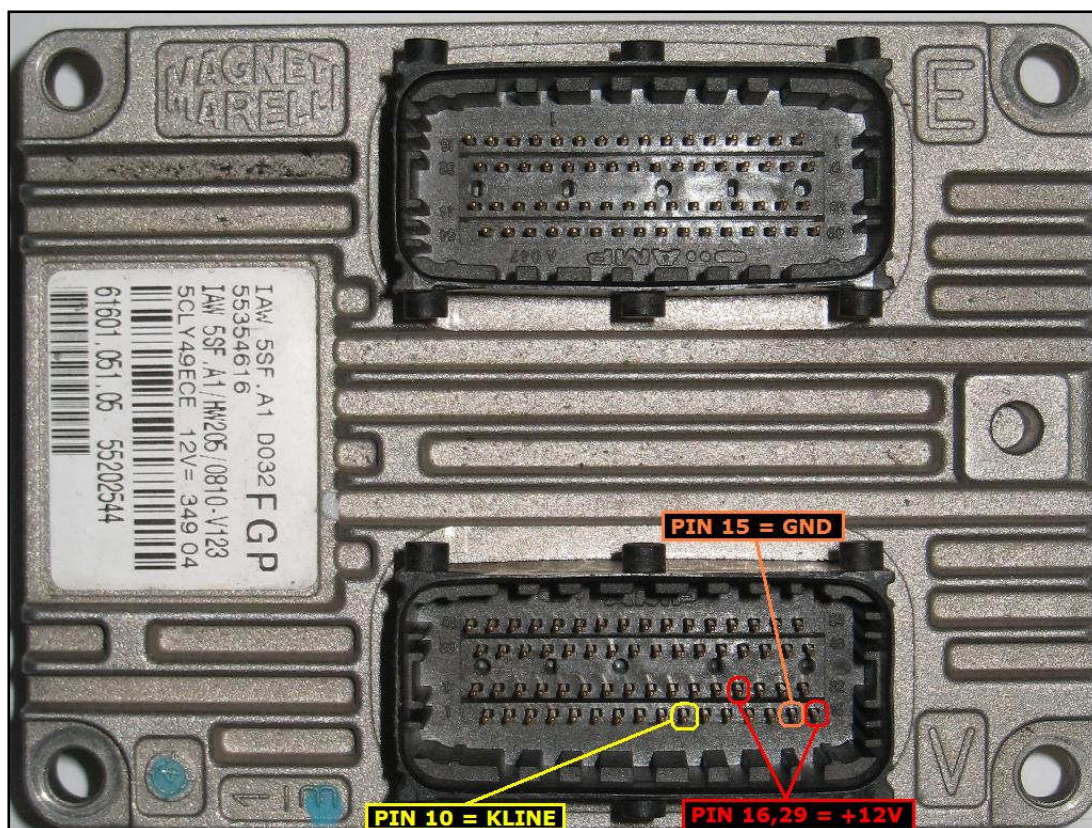


DIRECT CONNECTION

To communicate in **BOOT** mode it is necessary to connect the 2 lay-by pins **LINK 1**.
Remove the connection before to set back the ECU in the vehicle.

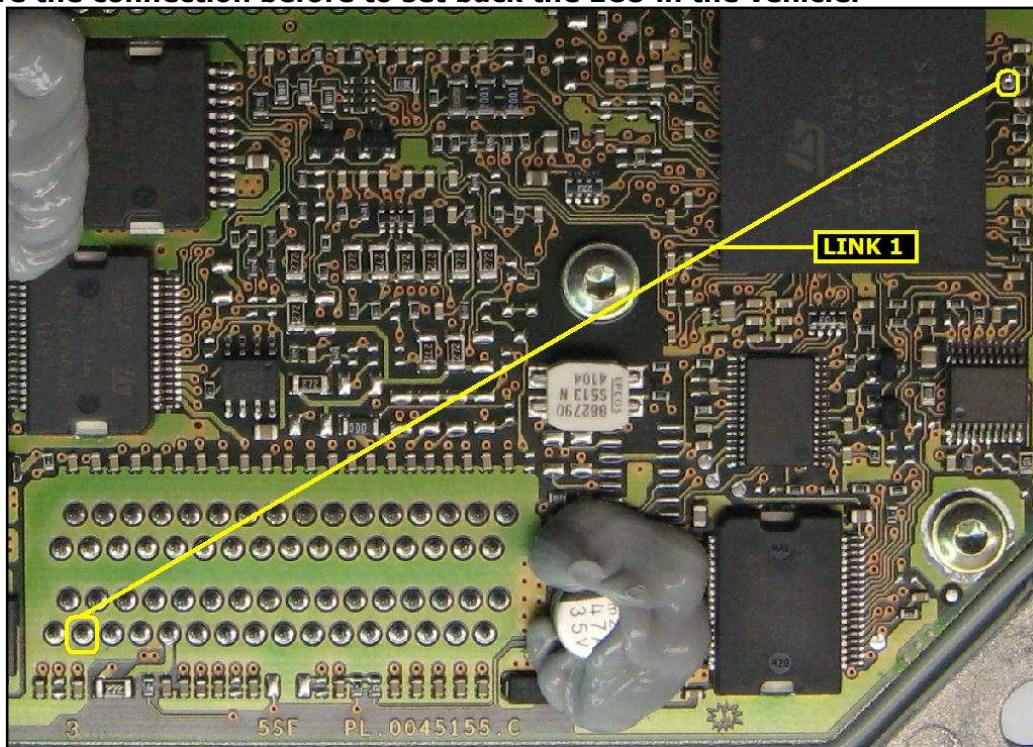

TYPE 02 : ECU 5SF HW3xx – ECU 5SF HW4xx

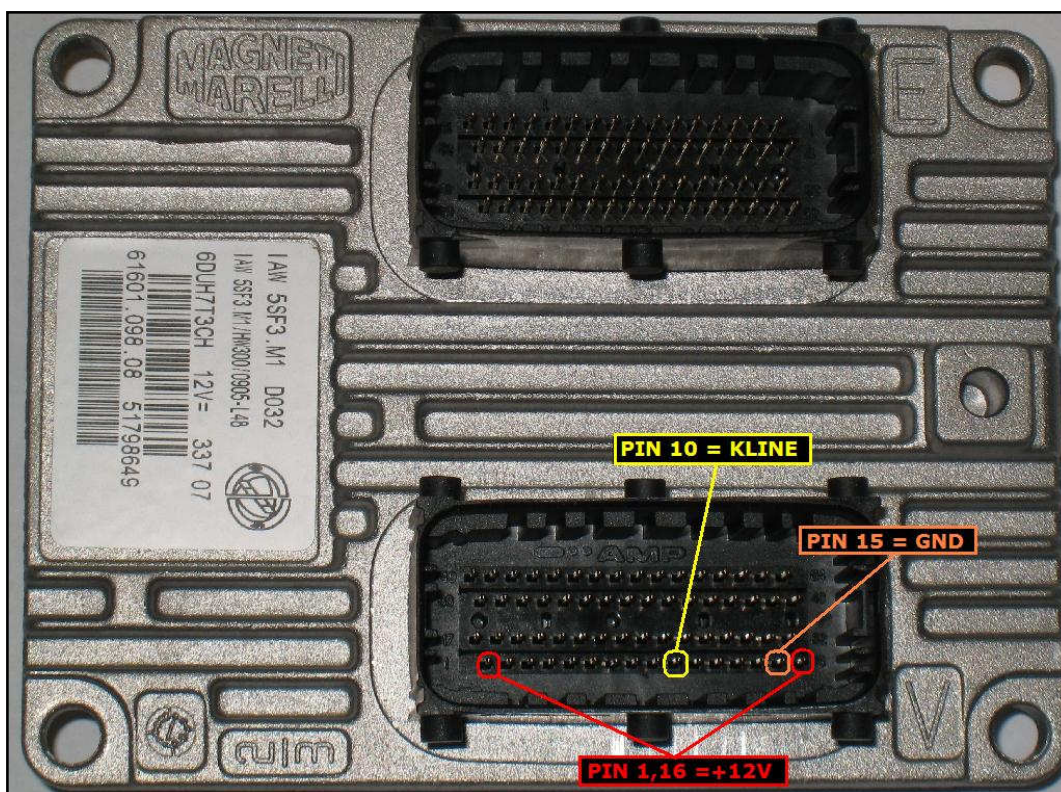

DIRECT CONNECTION

To communicate in BOOT mode it is necessary to connect the 2 lay-by pins LINK 1.

It is also necessary make shortcircuit on the two ly-by pins of LINK 2

Remove the connections before to set back the ECU in the vehicle.

