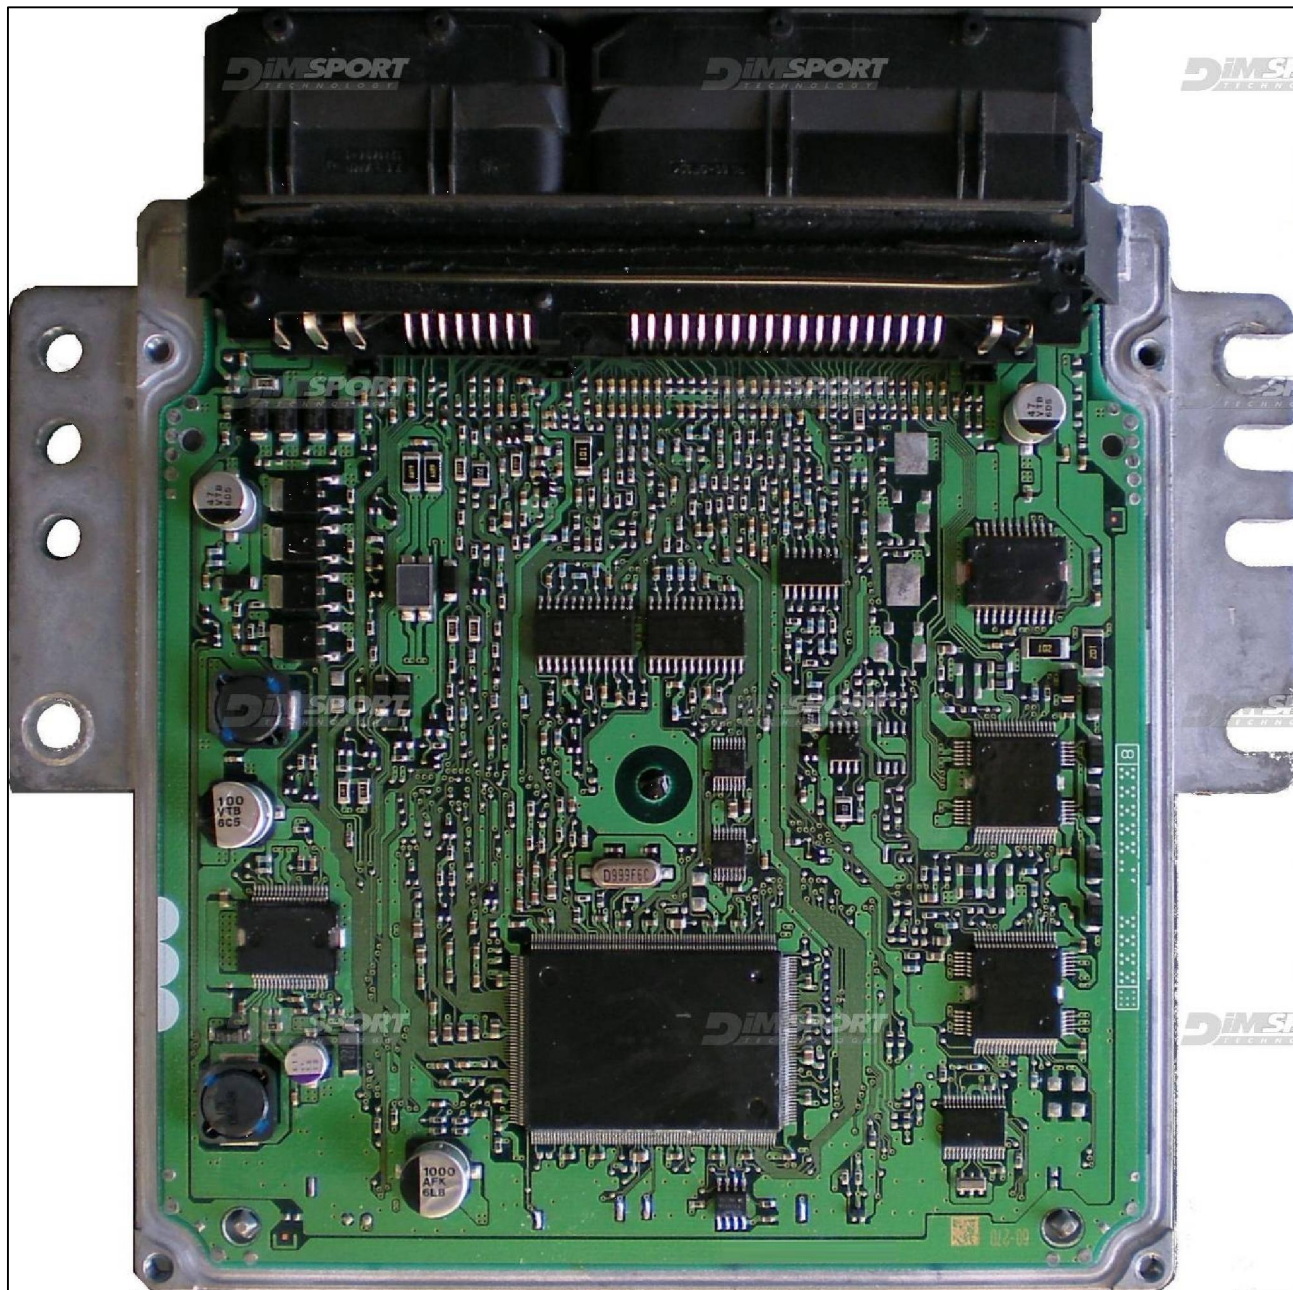


PLUGIN 298:NEW TRASDATA

The lay-by pins are placed in the lower part of the ECU. Micro SH7055.

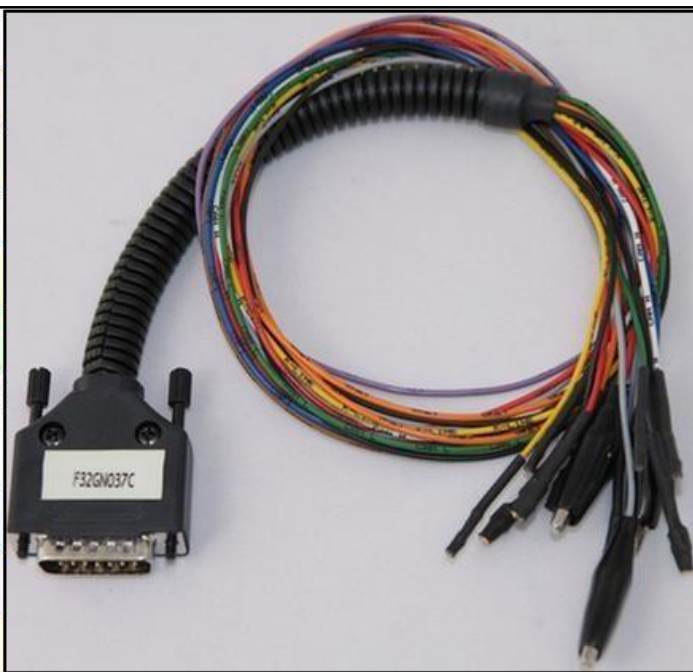
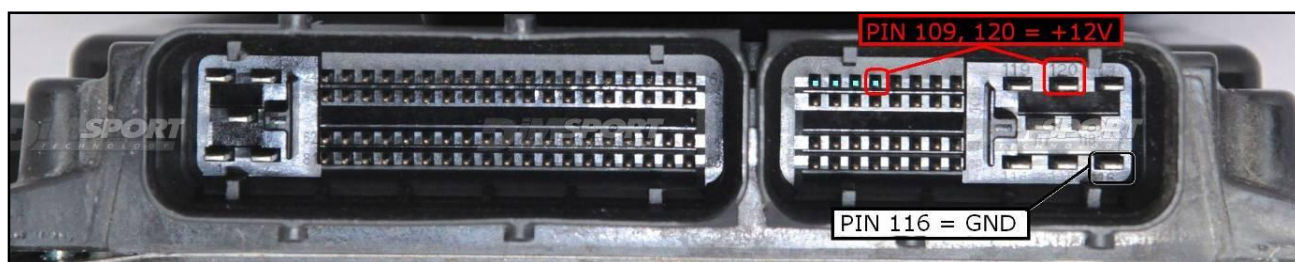


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLO/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

**ECU CONNECTOR**

DIRECT CONNECTION – ECU READING & WRITING:

For both operations READING&WRITING procedures use the FLAT cable F34NTF51

			
Pin	Colore Colour		
1	Marrone Brown		
2	Non usato Not used		
3	Non usato Not used		
4	Non usato Not used		
5	Non usato Not used		
6	Blu Blue		
7	Viola Violet		
8	Grigio Grey		
9	Non usato Not used		
10	Nero Black		

