
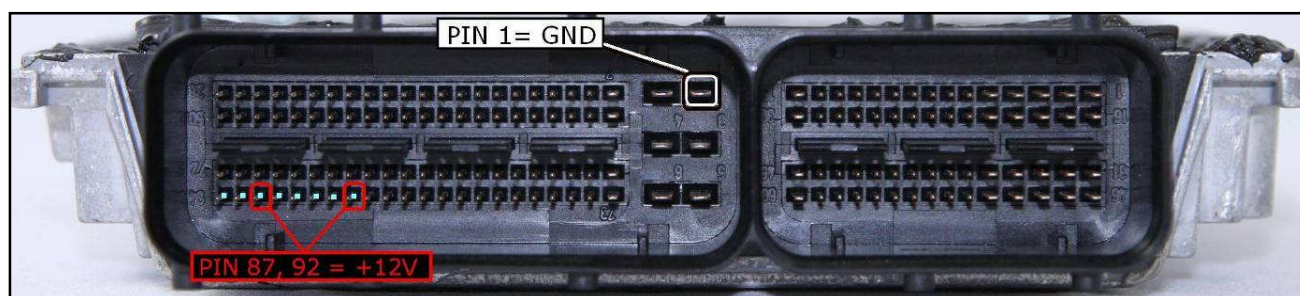


The soldering pads are located in the middle of the ECU.

It is possible ONLY the DIRECT CONNECTION with the universal adapter F34TD003.

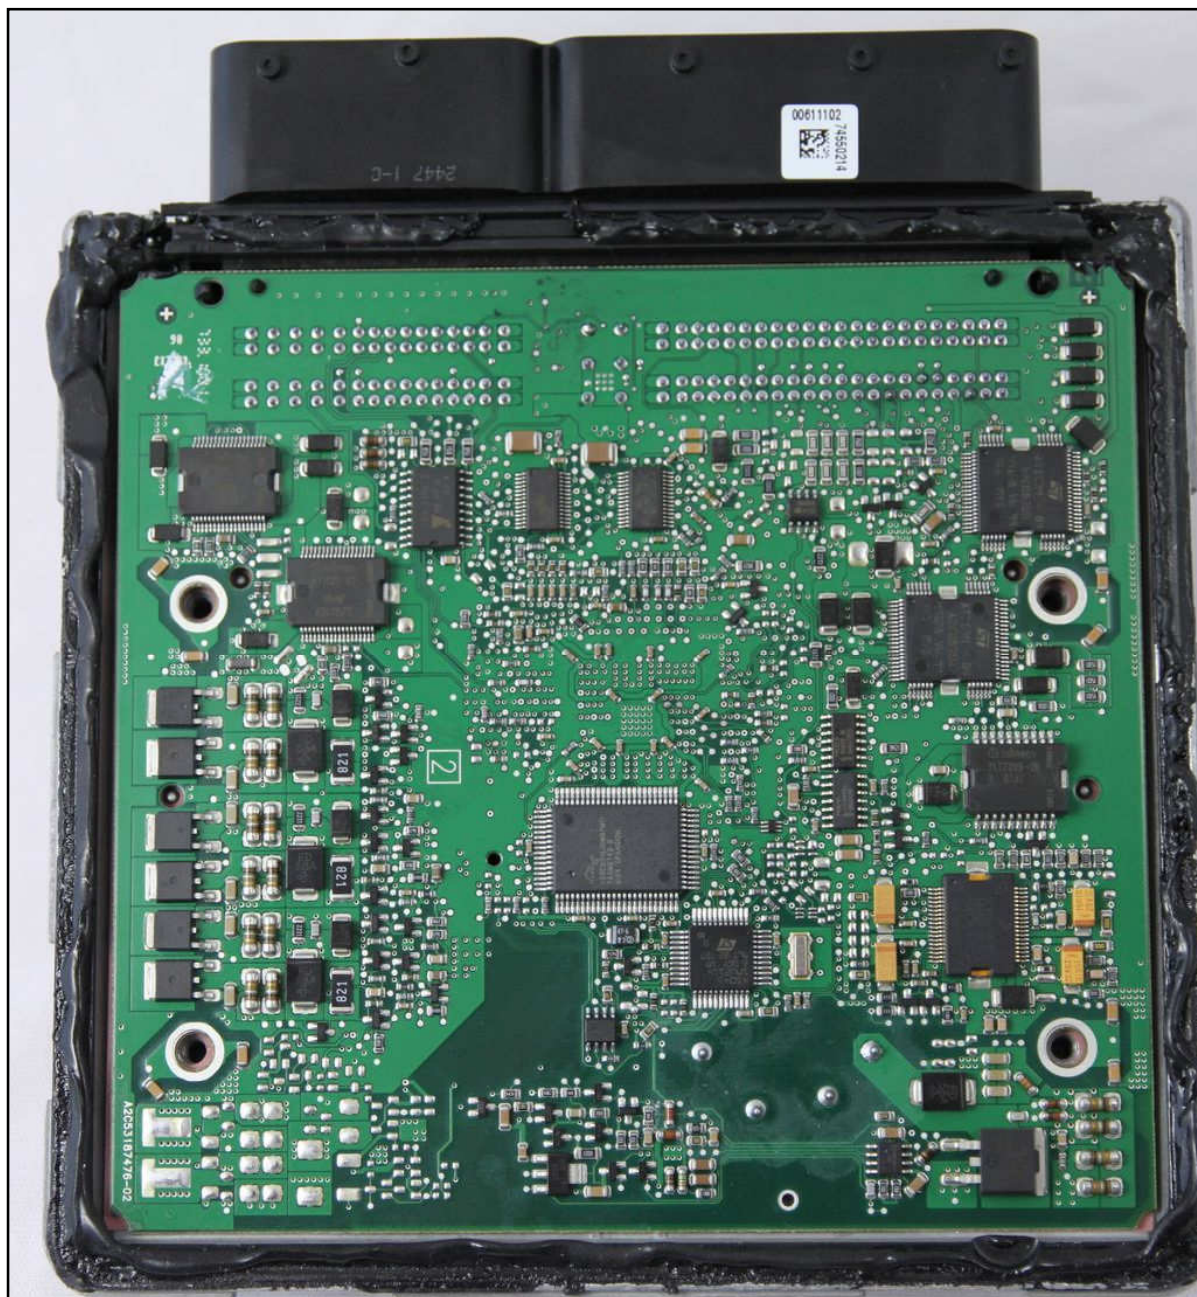

DIRECT CONNECTION with SIEMENS F34TD003