

PLUGIN 533 :NEW TRASDATA

DIRECT CONNECTION READING/WRITING ECU:

In order to connect to the ECU use the CABLE F34NTA13.

Make sure that the POWER led (red) on NEW TRASDATA is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
MARRONE BROWN	BOOT	
BLU BLUE	CNF	
NERO BLACK	GIALLO YELLOW	
GRIGIO GREY	VERDE GREEN	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
NERO BLACK	MASSA GND	

ECU CONNECTOR