



PLUGIN 389,862 :NEW TRASDATA

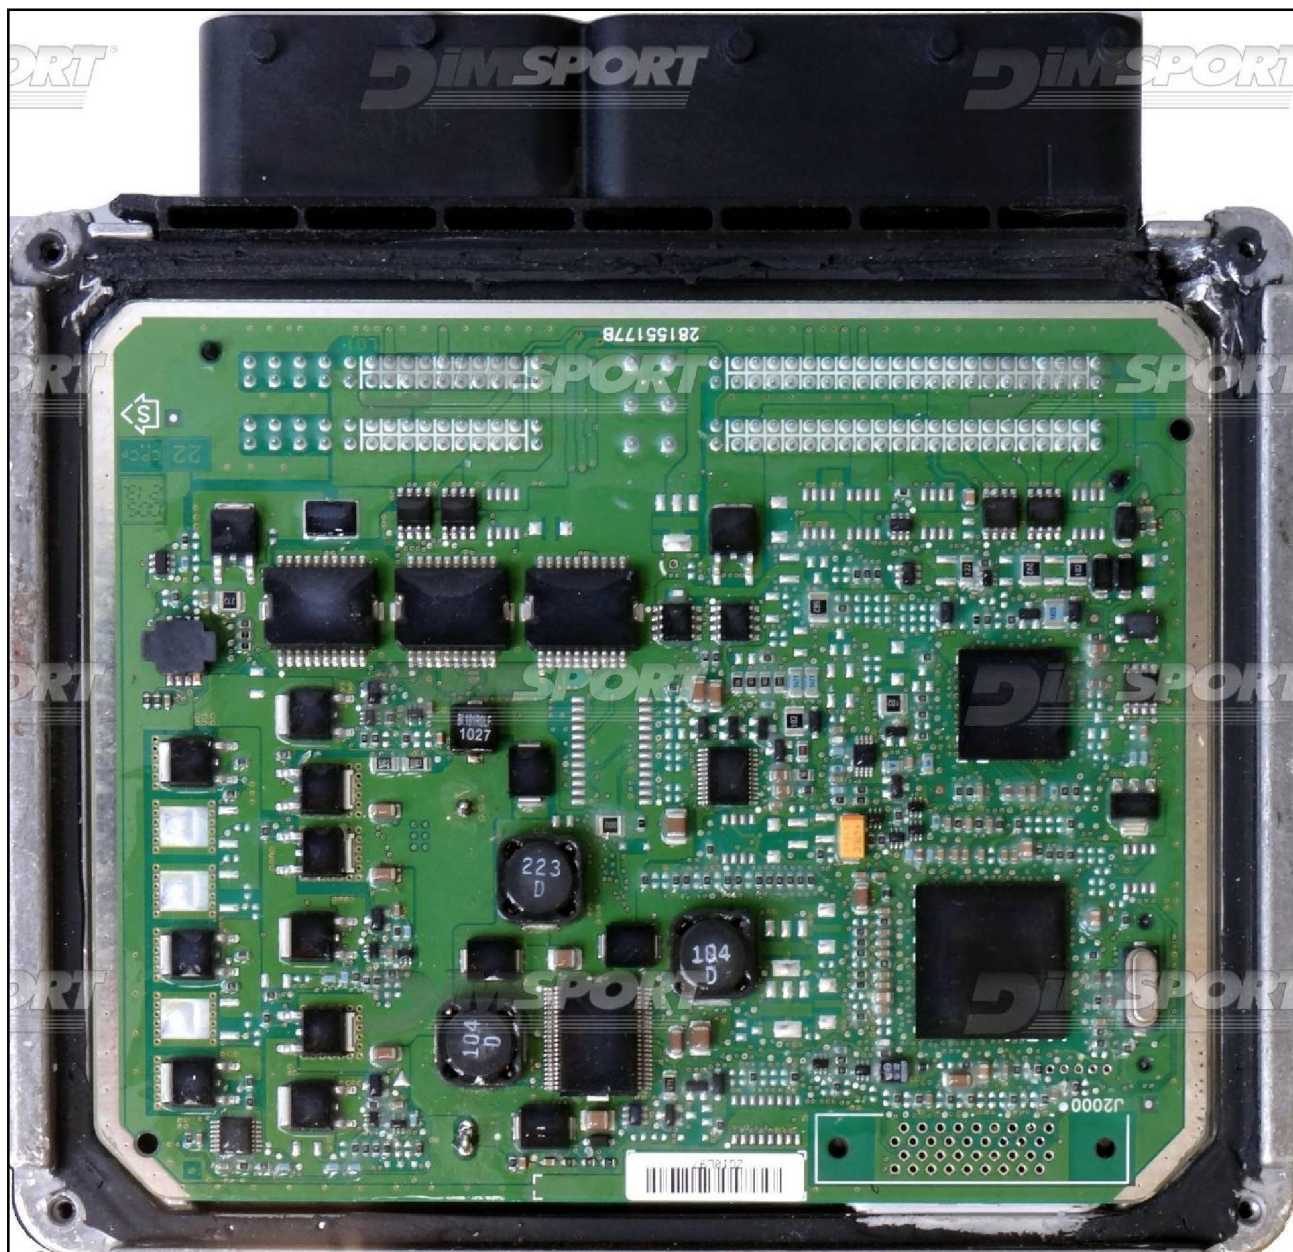




In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

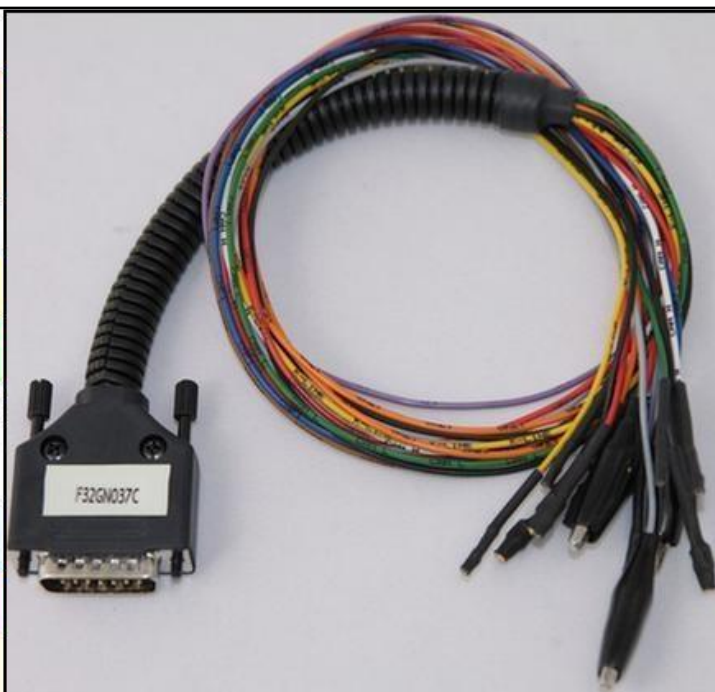

ECU CONNECTOR

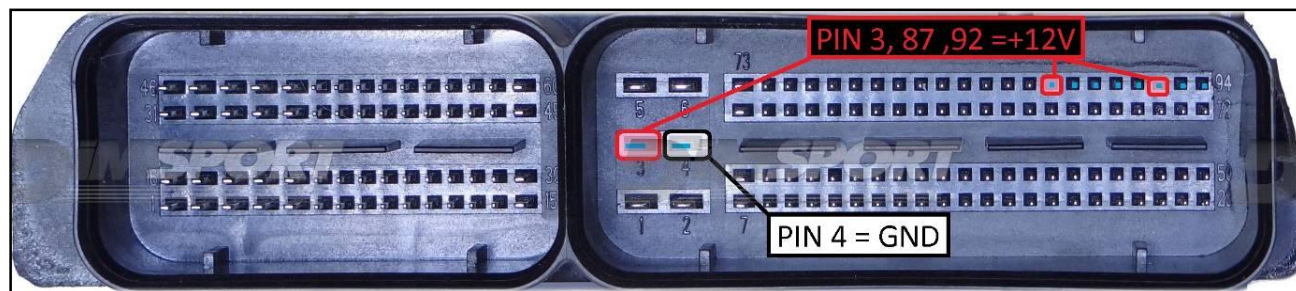


To the power feeding pins 3,87,92 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.

WARNING:

in order to work it is necessary to remove both ECU layers and perform the 6 bridges (LINK) on the lower side of the ECU. Then close it with all the screws, place it back into the vehicle and verify that the vehicle runs fine without any warning lights.

The 6 bridges (LINK) can be definitively left on the ECU without removing them.

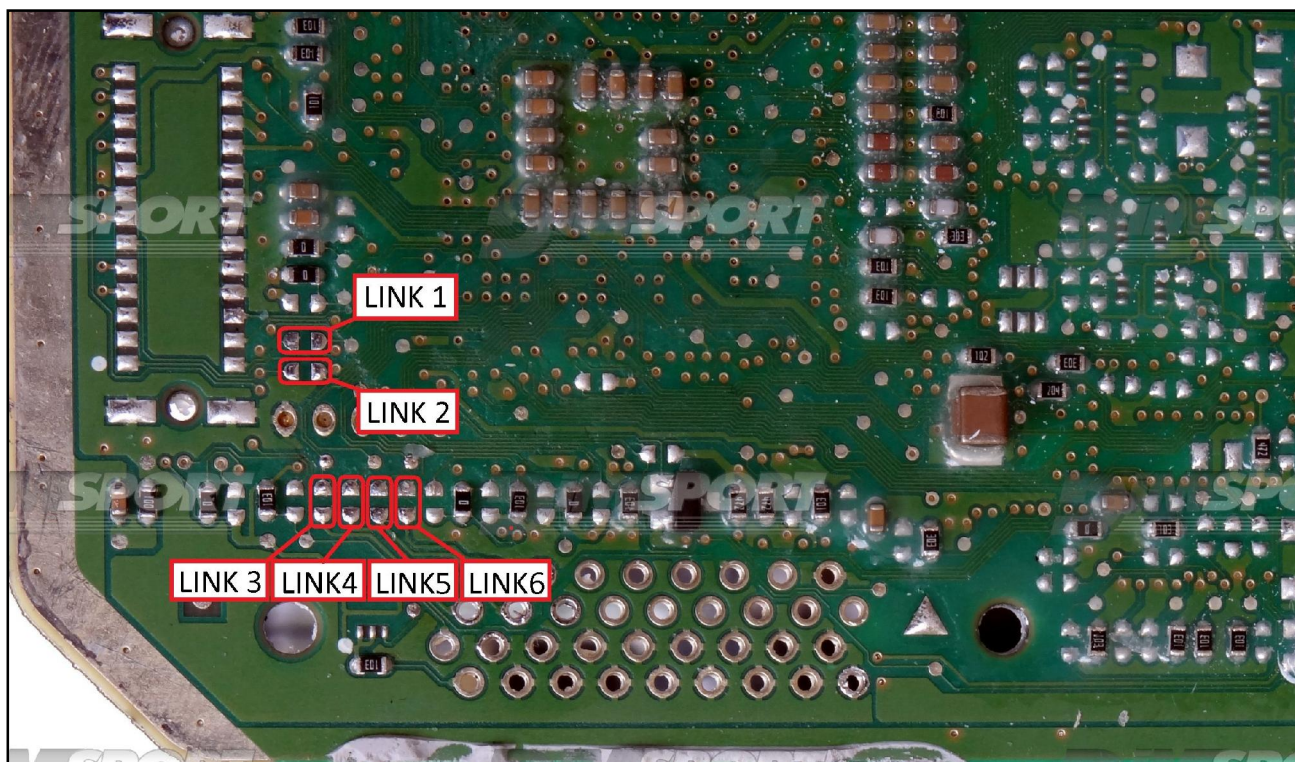


DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53



Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Non usato Not used
17	Non usato Not used
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

Connect the wires 18,19,20,21,22,23,24,25 avoiding any short circuit among the pads.

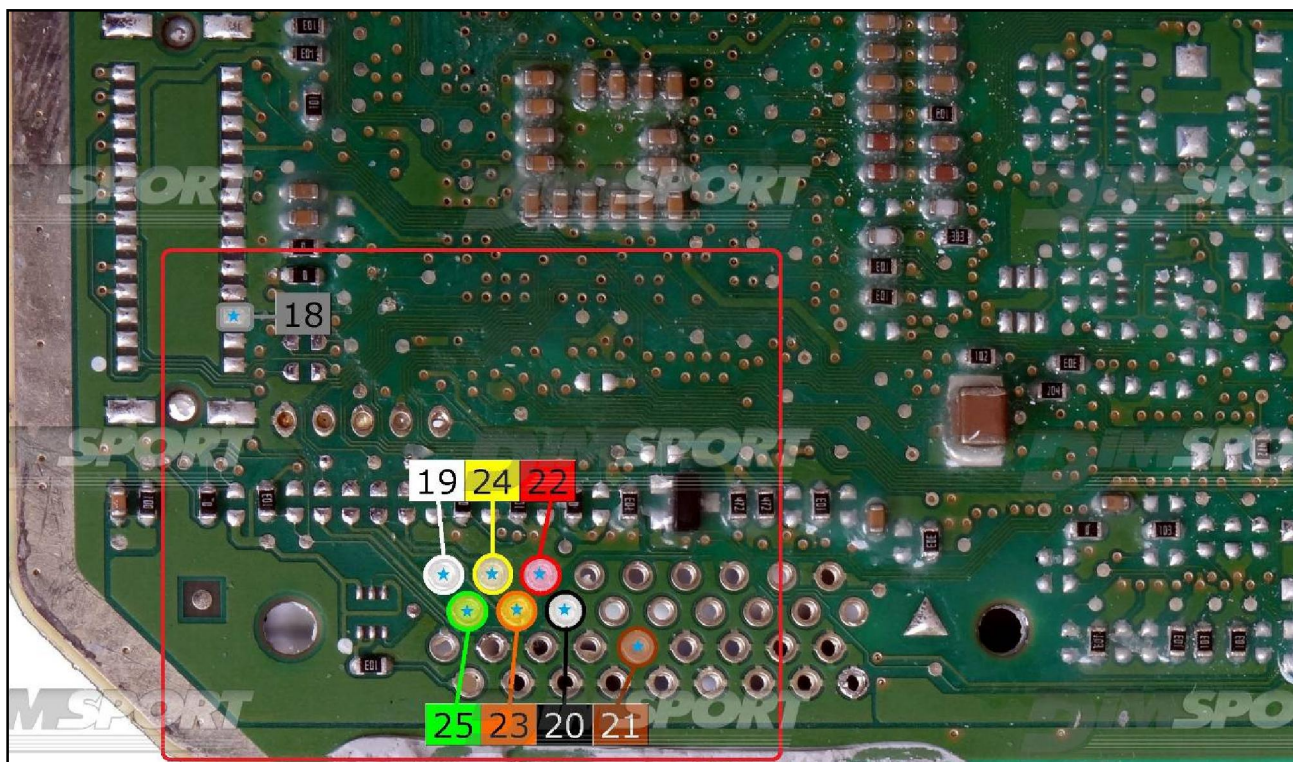

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

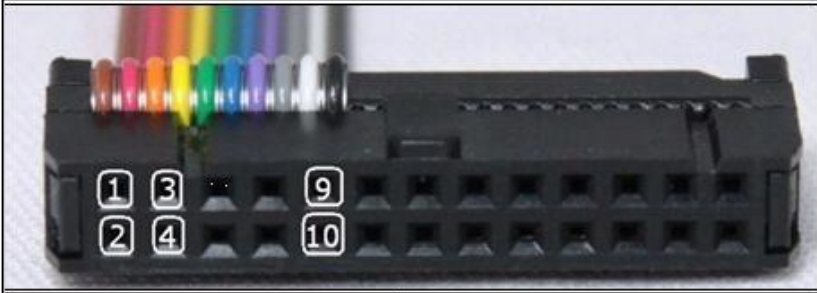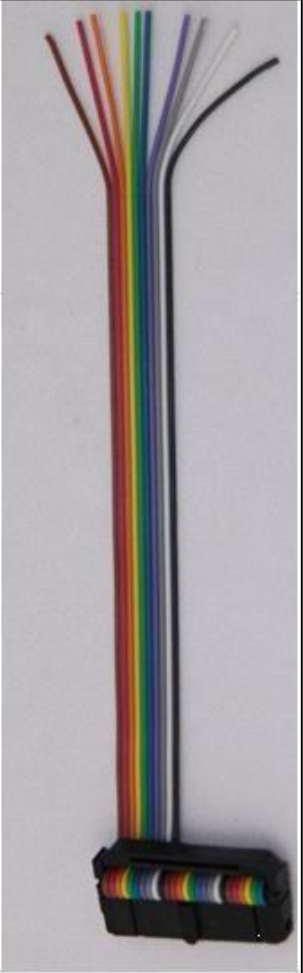			
Pin		Colore	Colour
1		Non usato	Not used
2		Non usato	Not used
3		Non usato	Not used
4		Non usato	Not used
5		Verde	Green
6		Blu	Blue
7		Viola	Violet
8		Grigio	Grey
9		Non usato	Not used
10		Non usato	Not used

Connect the wires 5,6,7,8 avoiding any short circuit among the pads.

