


The lay-by pins are placed in the lower part of the ECU.

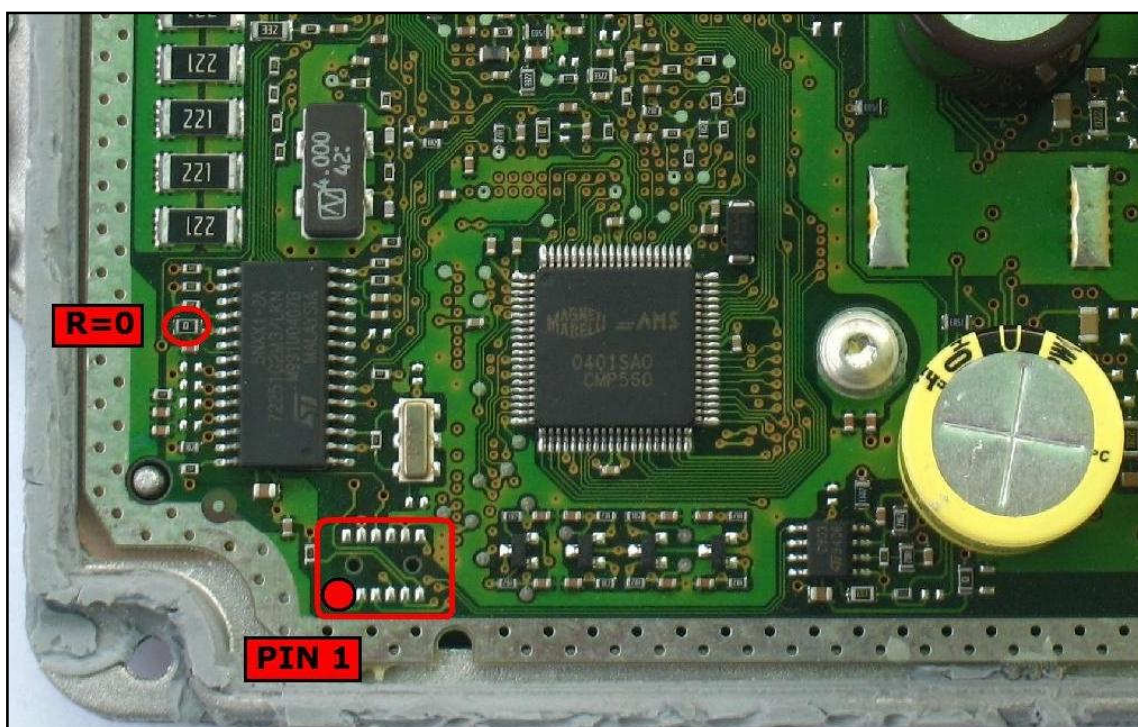


To enable reading/writing procedure it is necessary to remove the resistance 0 pointed in the picture. At the end of the writing procedure it is not necessary to solder it back.




DIRECT CONNECTION with MARELLI ADAPTOR

Plug the ending side of the cable in the ECU connector, plug it into the corresponding pin 24,25,26,27,28/45,46,47,48,49,50.(this cable has not a correct side so it doesn't matter if it is upside down).

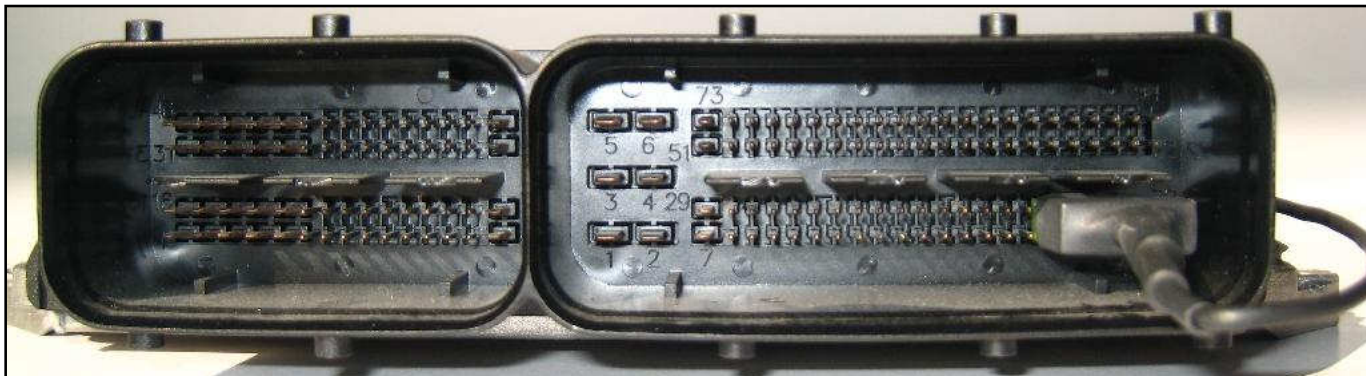


Connect the adapter F34FL002 as in the picture.

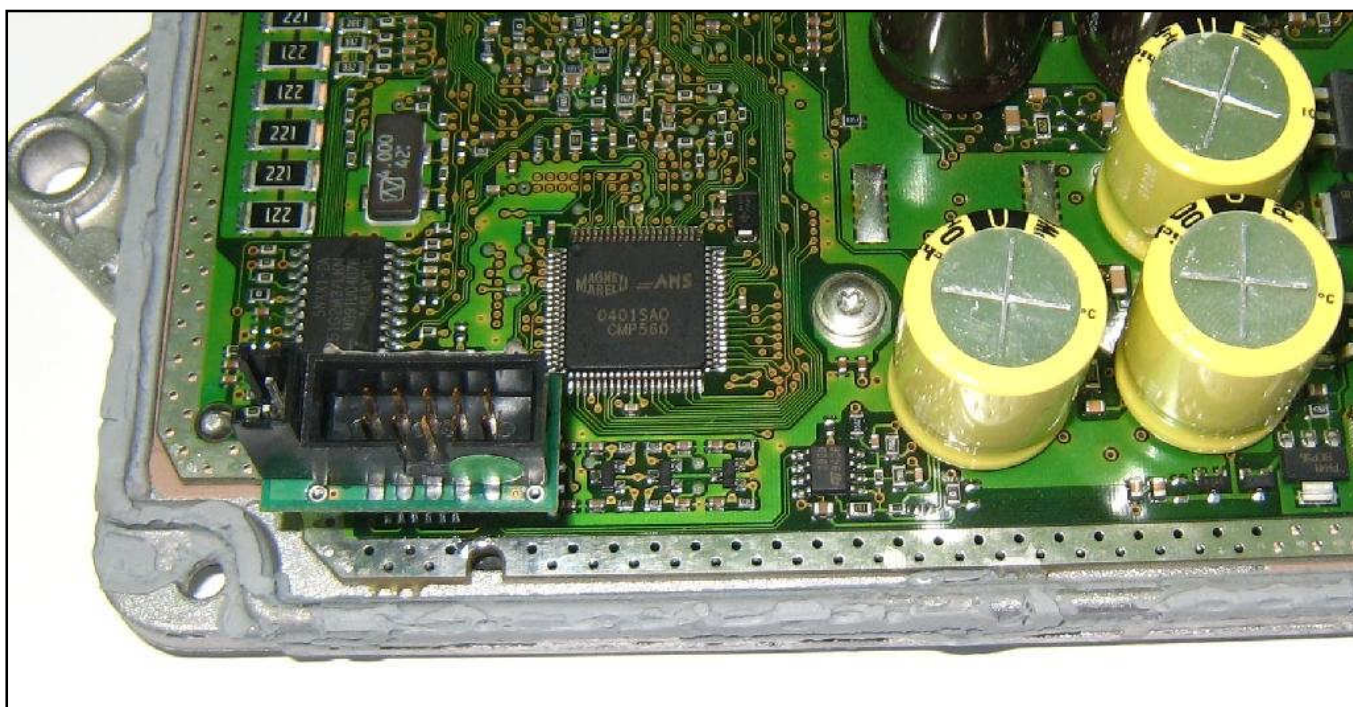


DIRECT CONNECTION with SIEMENS ADAPTOR

It is possible to use the SIEMENS adaptor connecting as shown in the picture:

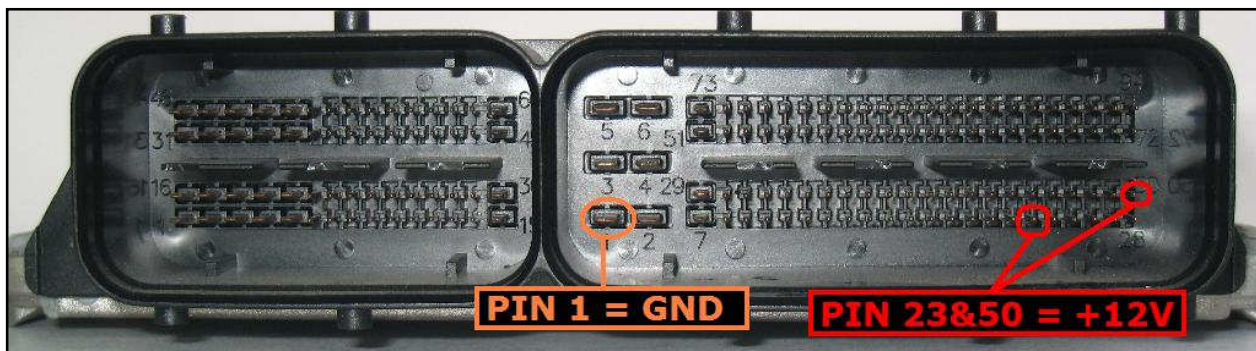

Leave the first 2 lay-by pins free lining up the flat connector towards the capacitors. Connect the adapter F34FL006

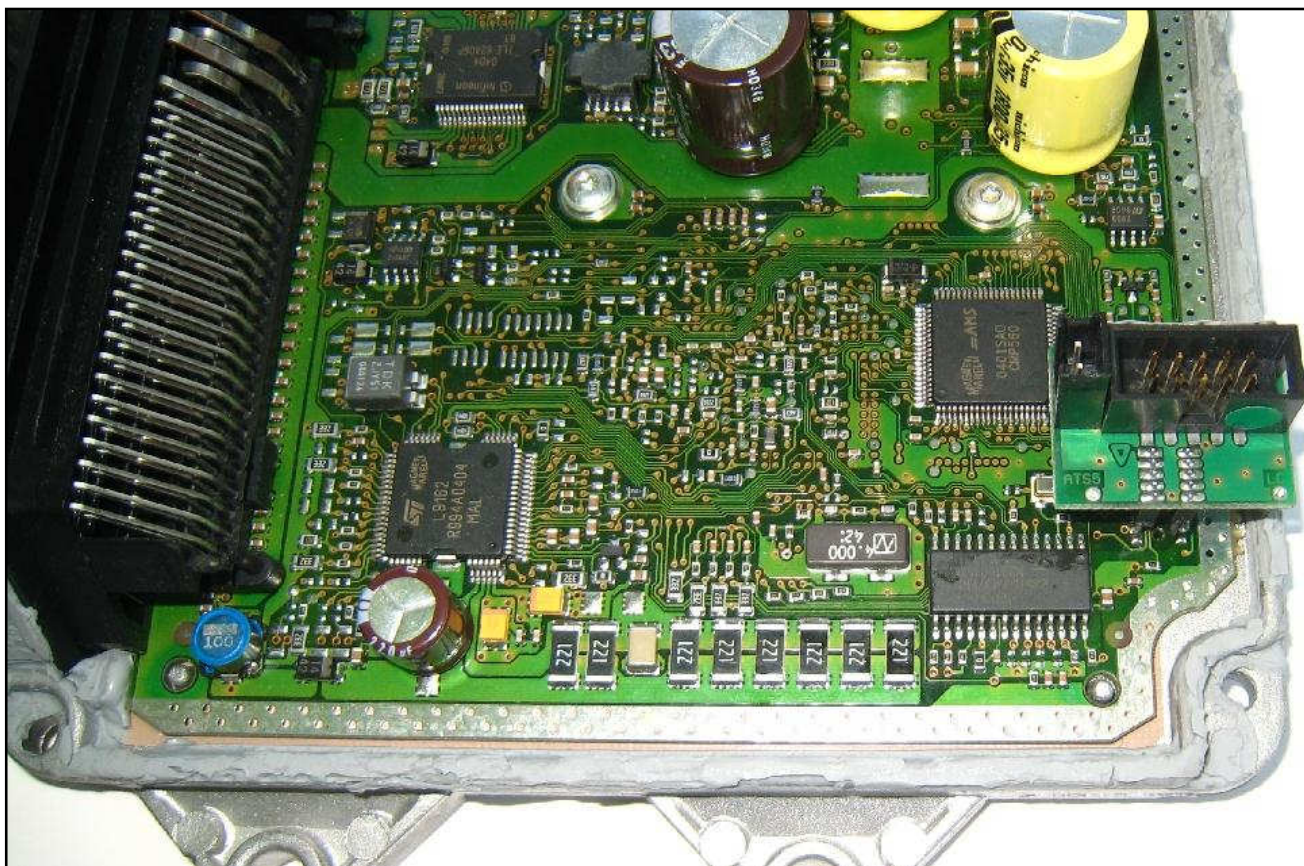

DIMA CONNECTION

Use the base ADAPTER ECU + F34DM005 (MARELLI) as shown in the pictures

