



On this ECU it is possible only the DIRECT CONNECTION

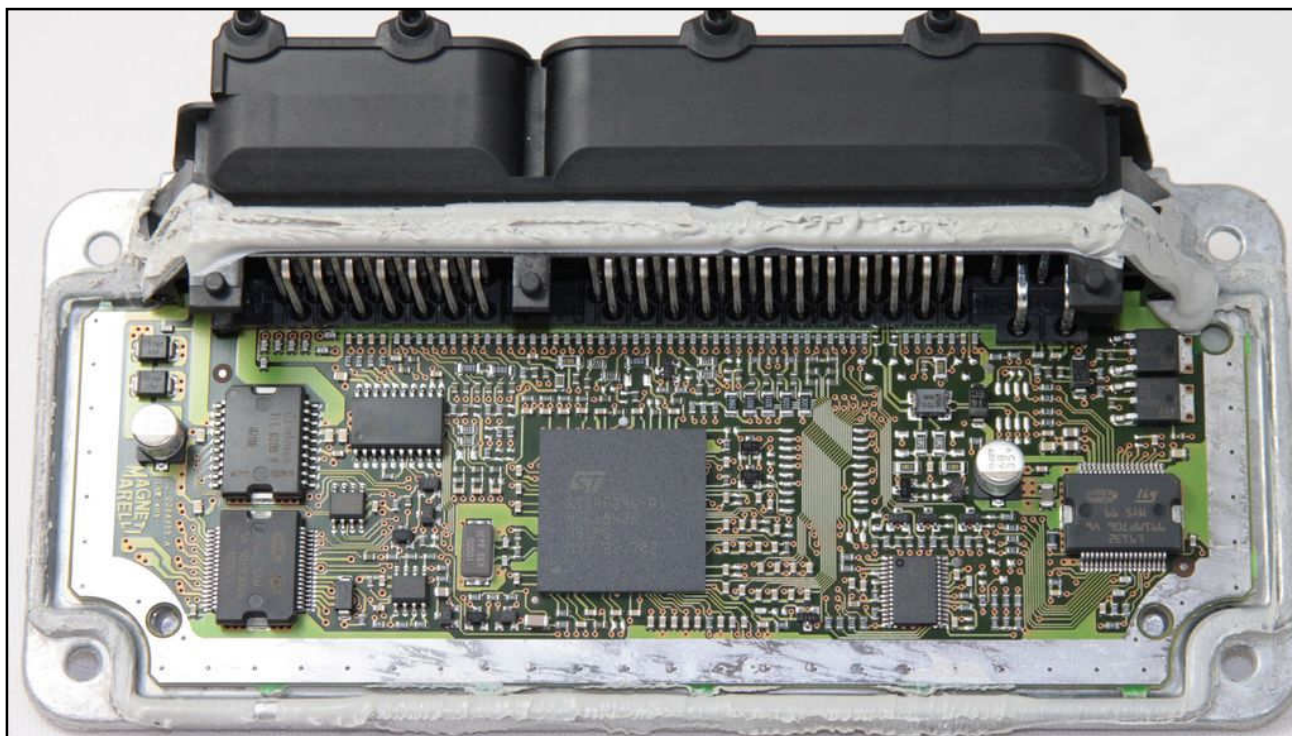

ECU CONNECTEUR

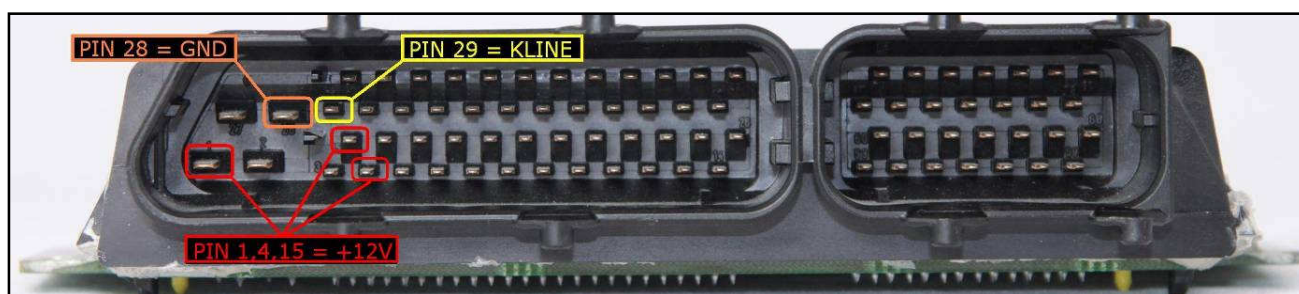

DIRECT CONNECTION

Connect the lay-by pins as shown in the picture here below

