

NEW TRASDATA PLUGIN 805 BOSCH_EDC17CP50_TC1797_IROM_HONDA_GPT


GPT CONNECTION

To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT.

GPT connection with loose wires


Connect the F32GN037 cable to the **ANALOG PORT**

Connect the F34NTF53 cable to the **DIGITAL PORT**, ONLY the wire 23 (ORANGE) and wire 24 (YELLOW) will be used as shown in the following picture

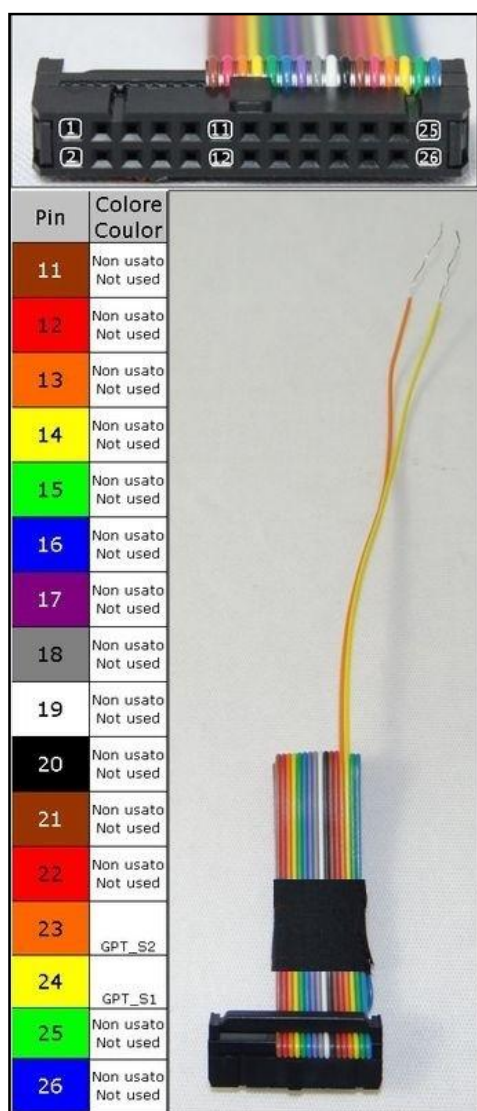

EDC17CP50 HONDA




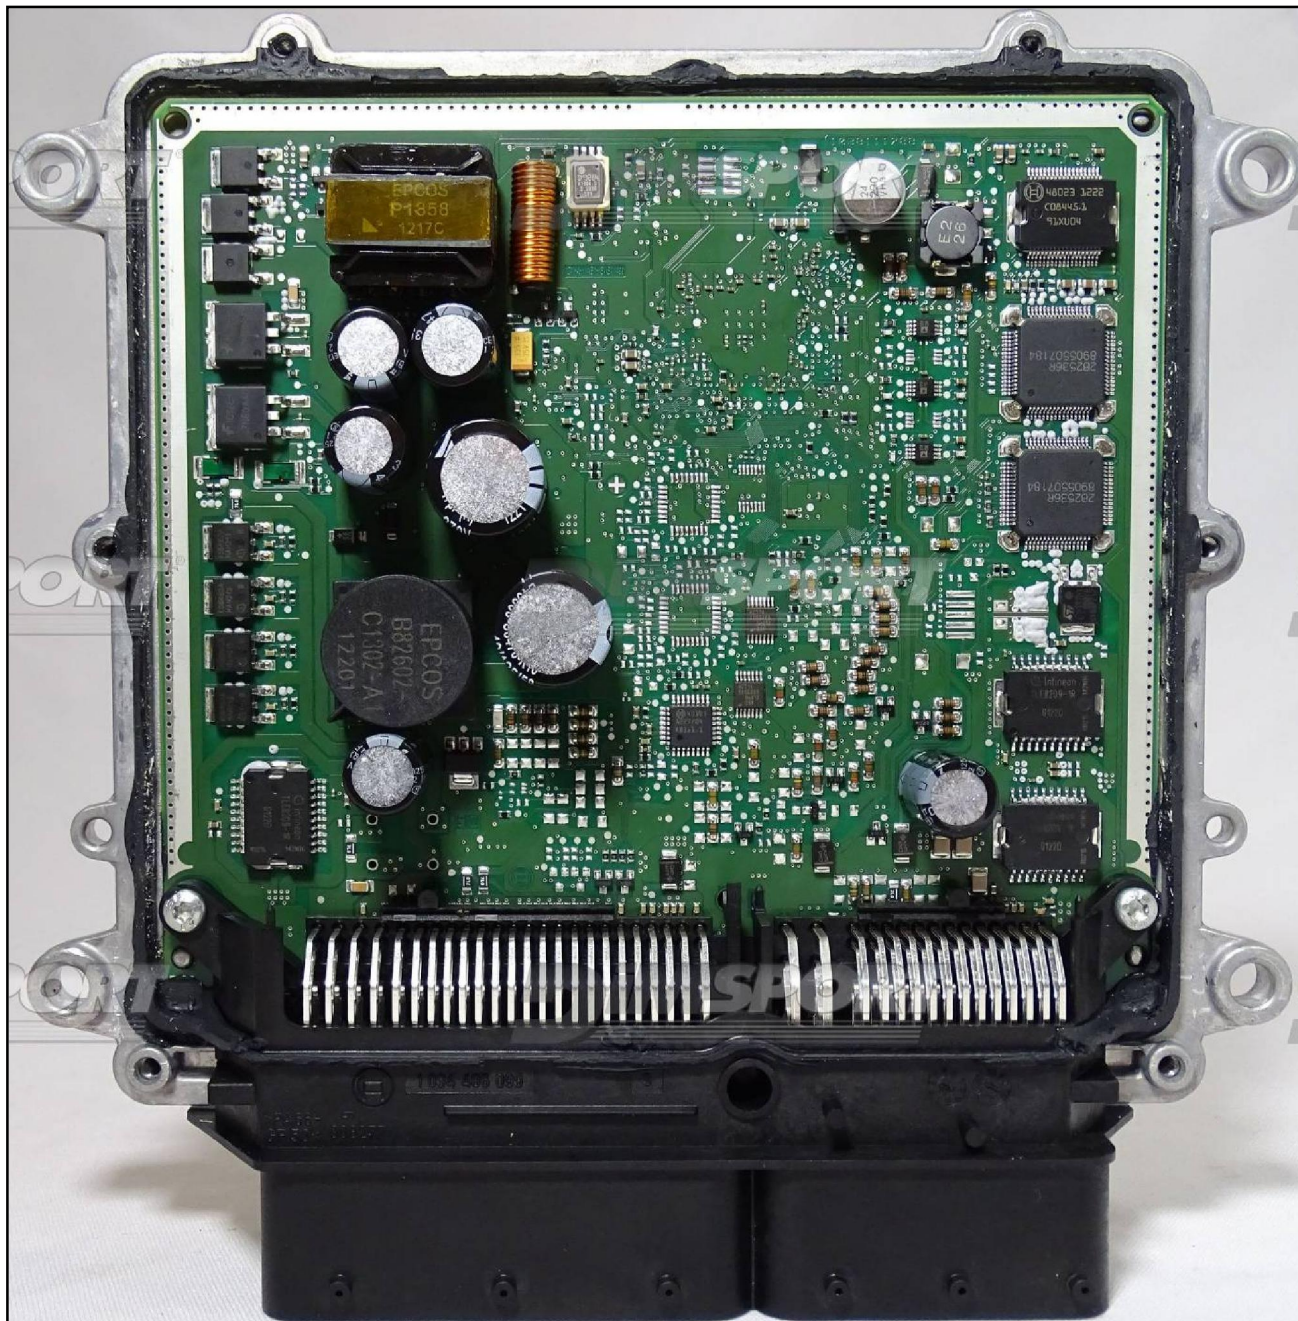


ECU CONNECTOR

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

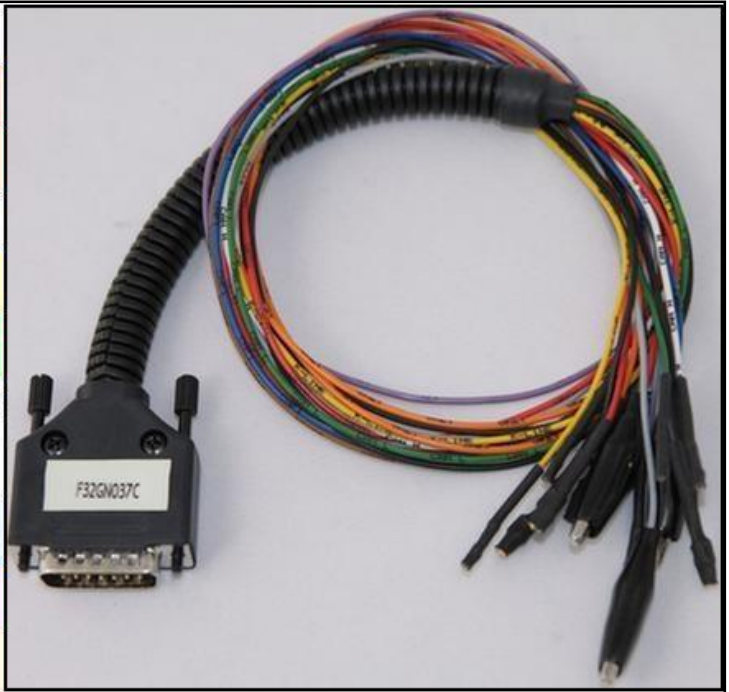

LOOSE WIRES CONNECTION

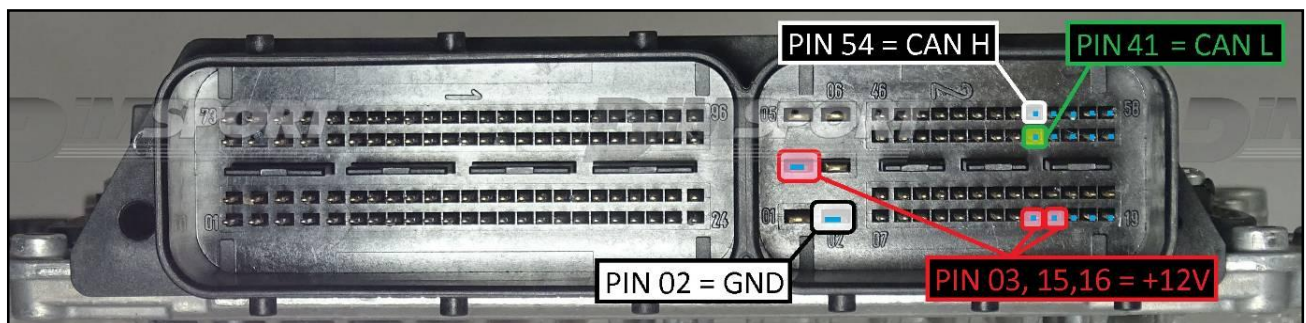


To the power feeding pins 3,15,16 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.

DIRECT BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT

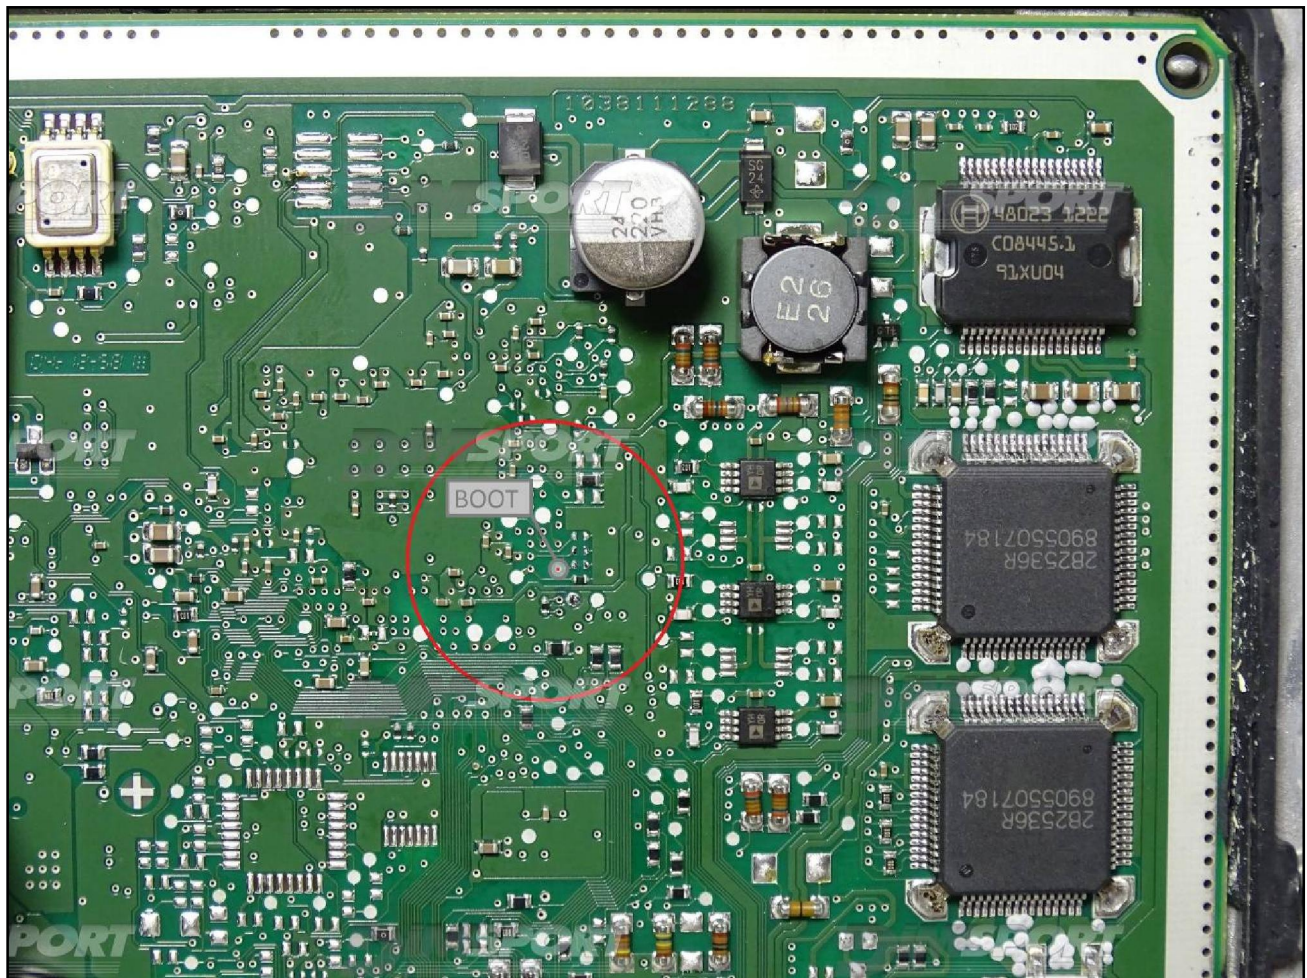


GPT CONNECTION

WARNING: after the first identification and PSW reading, due to some ECU properties, the ECU could NOT enter in BOOT mode and gives a communication error.
In this case unplug all the connections to the ECU and before connecting again wait 5 minutes without powering the ECU.

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the GPT_S1 & GPT_S2 pins to the specific wires of the F34NTF53 flat cable as shown in the following picture.

PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION
23	GPT_S2
24	GPT_S1

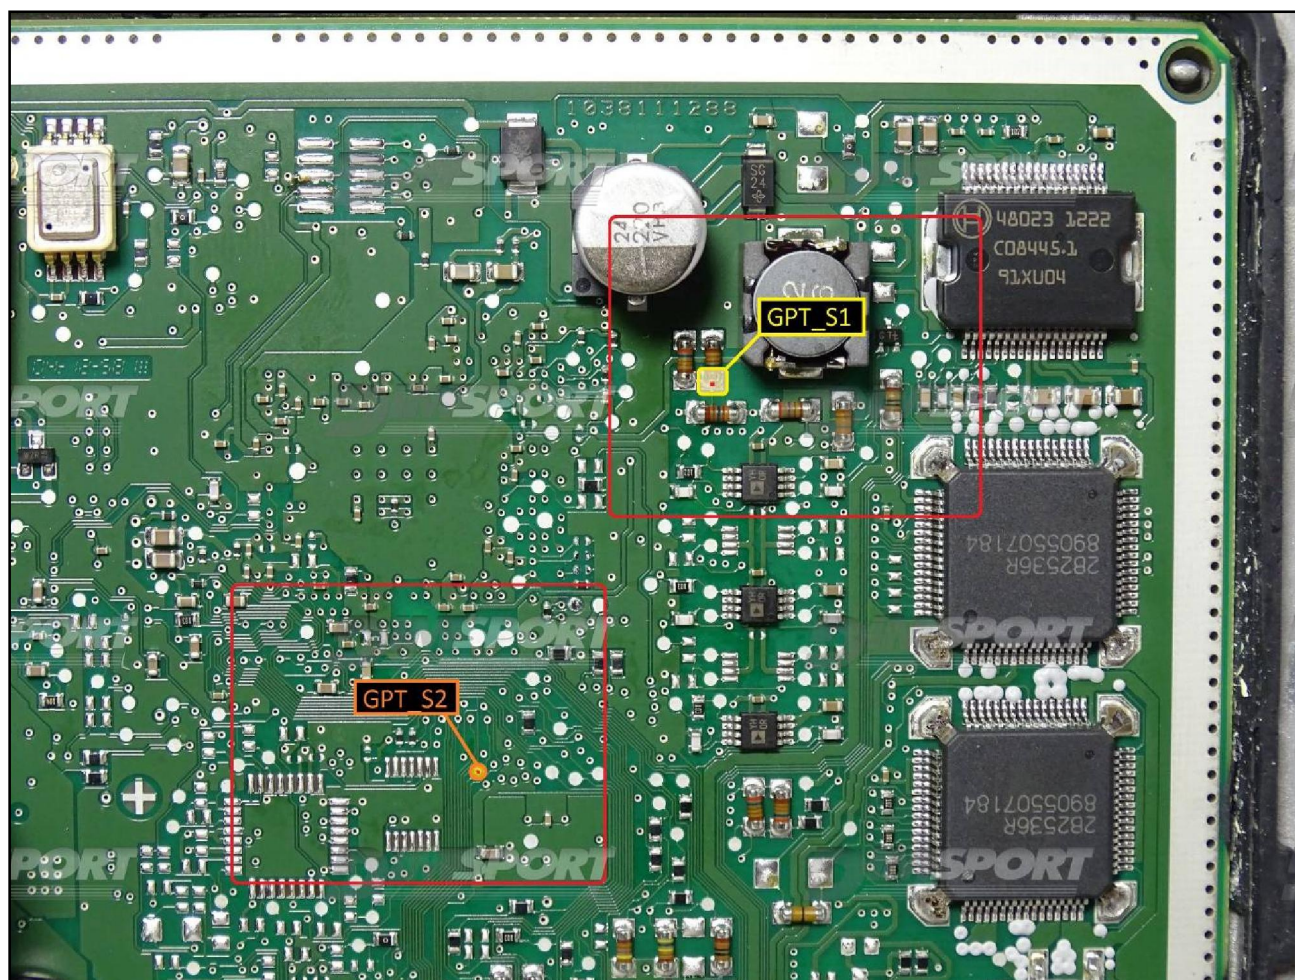

BNP CONNECTION