

FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout e utilizzare il driver:

TOOL PASSWORD SPECIAL *ALL*


(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (SEARCH PASSWORD)

Connect the following pinout and use the driver:

TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))

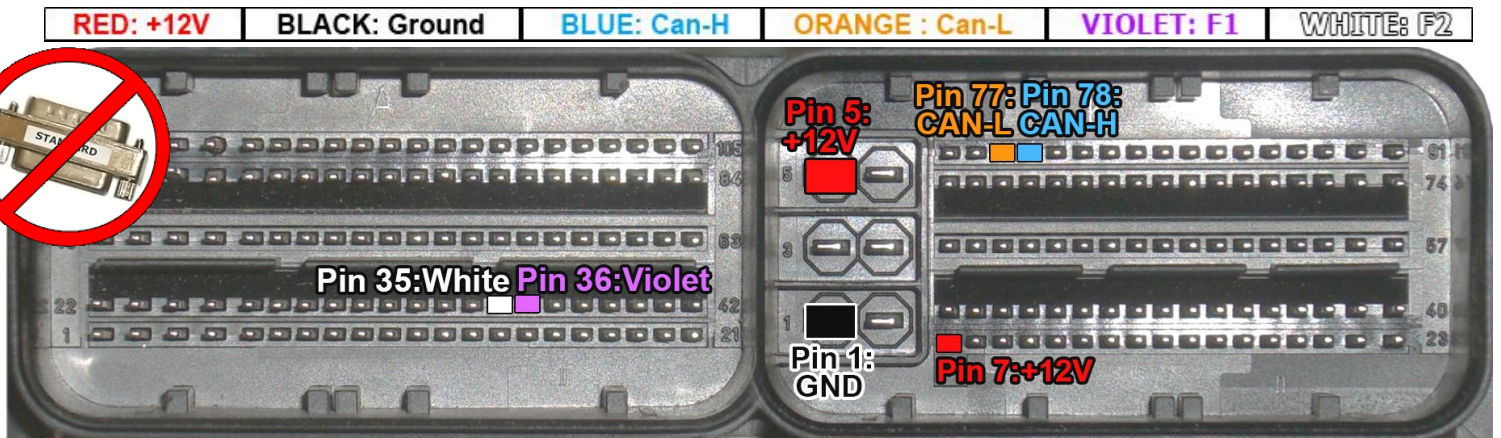

A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina. Quindi, porre la centralina in Boot Mode come descritto alla successiva Fase 2.

Now, once you have found the password, you can read and write the ECU. So, set in Boot Mode the ECU as described in next Step 2.

FASE 2: (LETTURA/SCRITTURA IN BOOT MODE)


Porre la centralina in Boot Mode, quindi connettere il seguente pinout rimuovendo i fili bianco e viola, mettendo il filo verde sul pin 7 e spostando la linea CAN. Saldare il filo grigio nel punto di Boot indicato nella figura a pagina seguente. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1793

STEP 2: (READ/WRITE IN BOOT MODE)


Set in Boot Mode the ECU, so connect the following pinout removing the white and violet wires, changing the pin 7 the green wire and moving the CAN line, and solder the gray wire in the boot pin shown in the figure on next page. Use the driver:

BOOT MODE TRICORE SAK TC1793

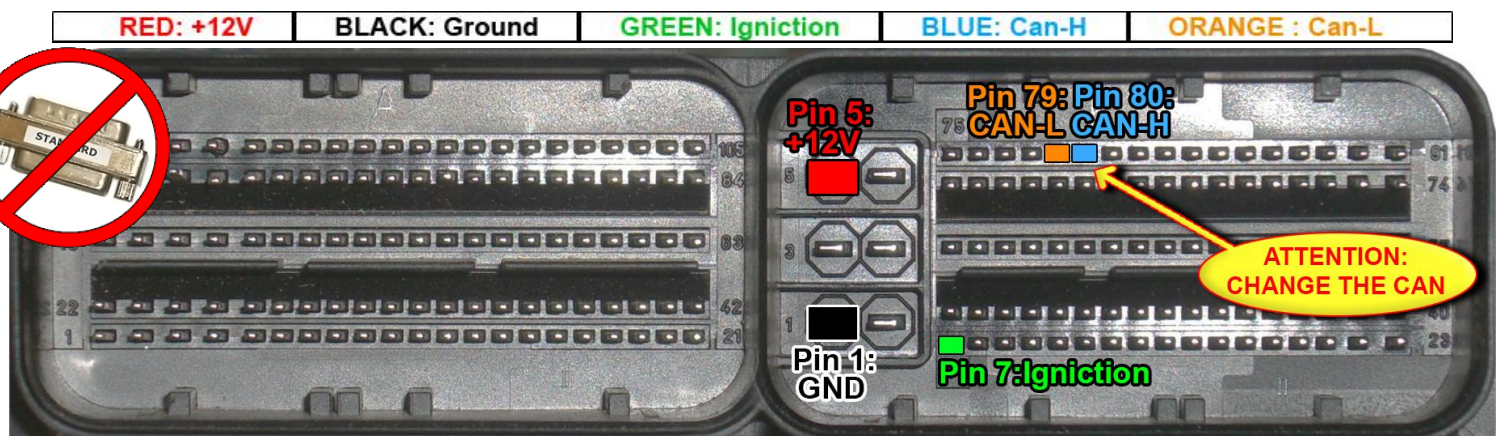

A pagina seguente il pin di boot..

On next page the boot pin..

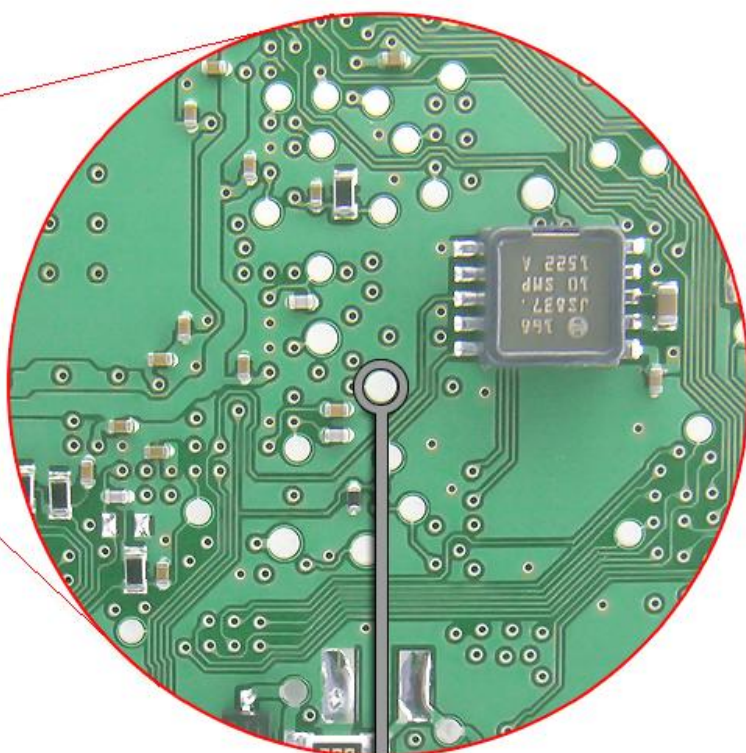

Gray wire of the Tricore cable