

Bosch ME9

Kit da utilizzare per connessione con adattatore BDM:


- Cavetto per alimentazione bosch rosso/nero
- Adattatore Bosch
- Cavetto flat grigio
- Connettori dip/sip

Kit to be used for connection with BDM adapter:

- Red and black cable for Bosch power supply
- Bosch adapter
- Grey flat cable
- Connectors dip/sip


Tutte le Bosch ME9 dispongono di una porta BDM come la seguente. Su queste centraline sia l'alimentazione che i segnali di comunicazione sono presenti in questa porta di connessione. Tenere in considerazione le 12 piste evidenziate escludendo le 2 a sinistra:

All Bosch ME9 have a BDM port like the following. On these control units both the power supply and the communication signals are present in this connection port. Consider the 12 tracks highlighted excluding the 2 on the left:

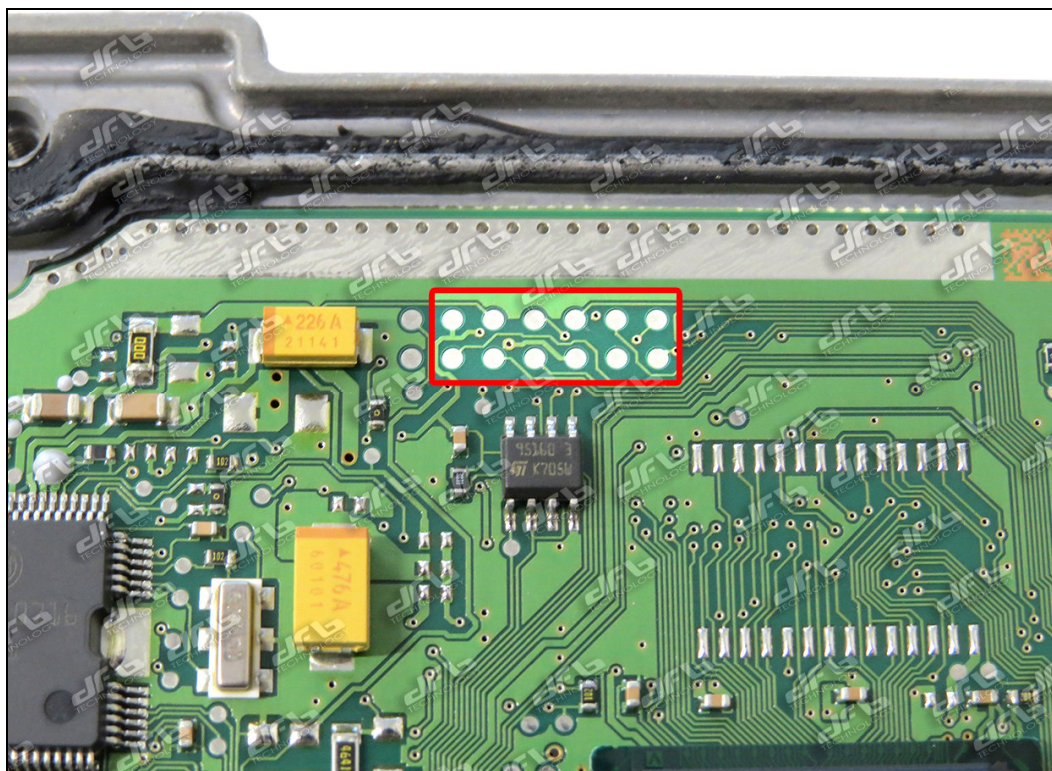


Saldare i connettori dip/sip sulla scheda ed inserire l'adattatore Bdm BOSCH come in foto:

Solder the dip/sip connectors on the pcb and insert BOSCH adapter as in photo:

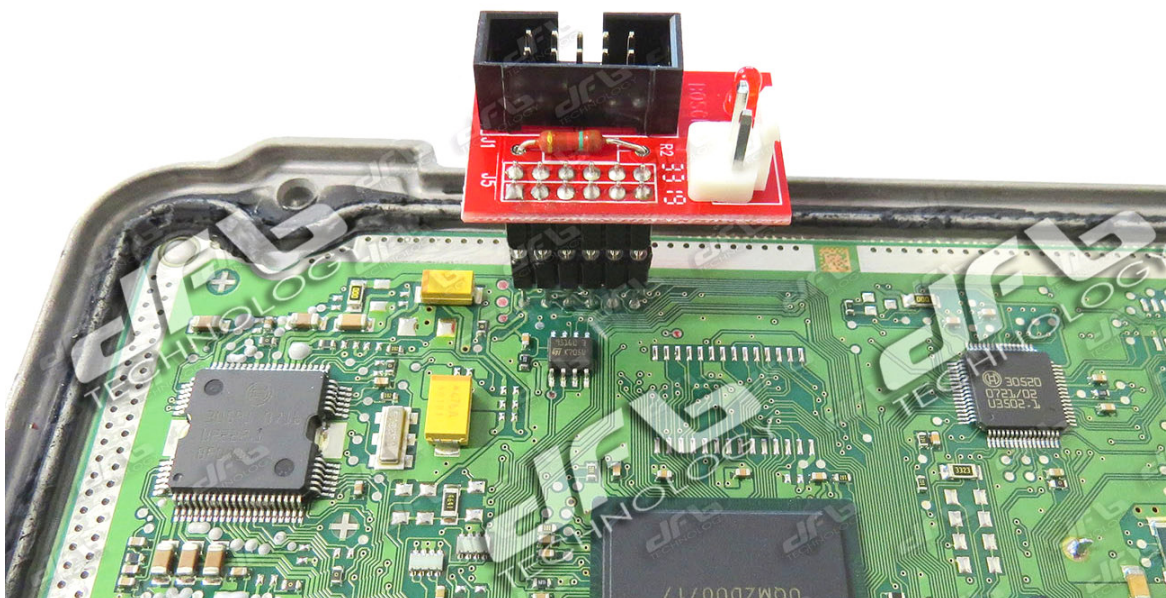

Connettere lo strumento alla centralina con il flat grigio ed alimentare tool e centralina.
Il led rosso si accende quando l'interruttore è su posizione ON.
Qui sotto un esempio di connessione:

Connect the tool to the control unit with the grey flat cable and give power to the tool and to the Ecu.
The red LED turns on when the switch is in the ON position.
Below is a connection example:

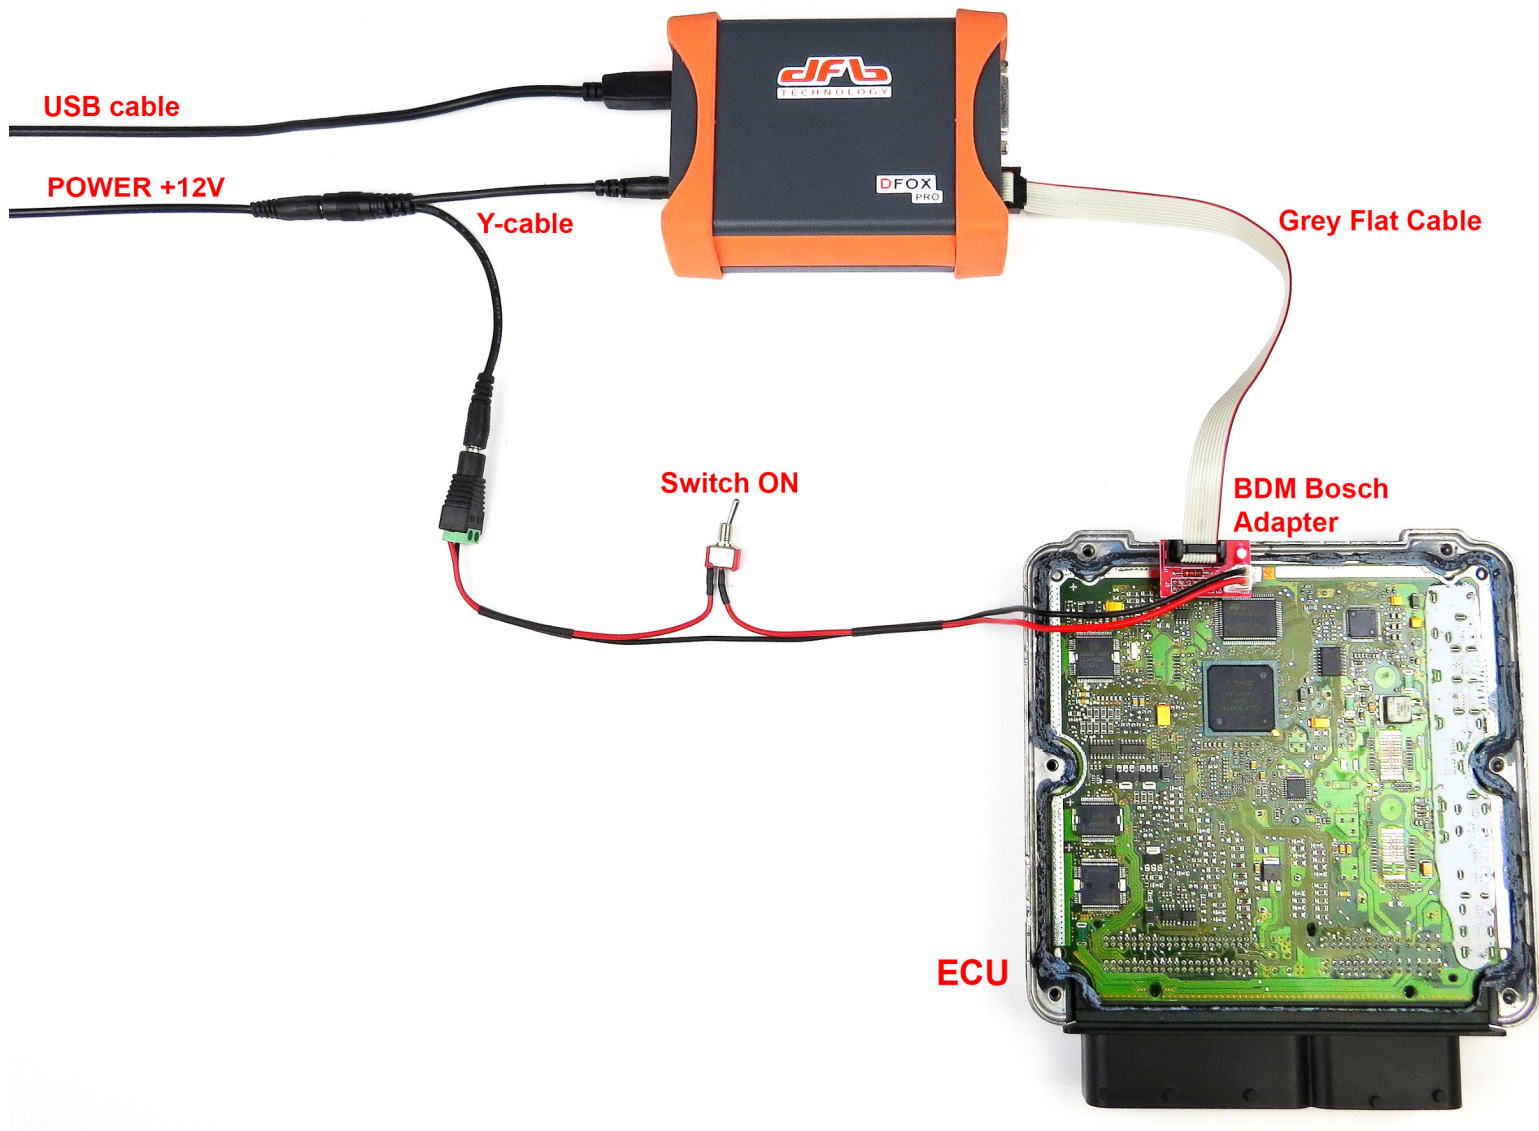

Per leggere e scrivere utilizzare il seguente driver:
→ BDM / JTAG MODE
→ BDM MPC
→ MPC 55x/56x

To read and write use the following driver:
→ BDM/ JTAG MODE
→ BDM MPC
→ MPC55x/56x

In alternativa ci si può connettere con cavo flat JTAG:


- Cavo multifunzione
- Cavo flat arcobaleno

Alternatively, you can connect with a JTAG flat cable:

- Multifunction cable
- Color flat cable

Tutte le Bosch ME9 dispongono di una porta BDM come la seguente. Saldare il flat arcobaleno nel seguente modo:

All Bosch ME9 have a BDM port like the following.
Solder the rainbow flat as follows:

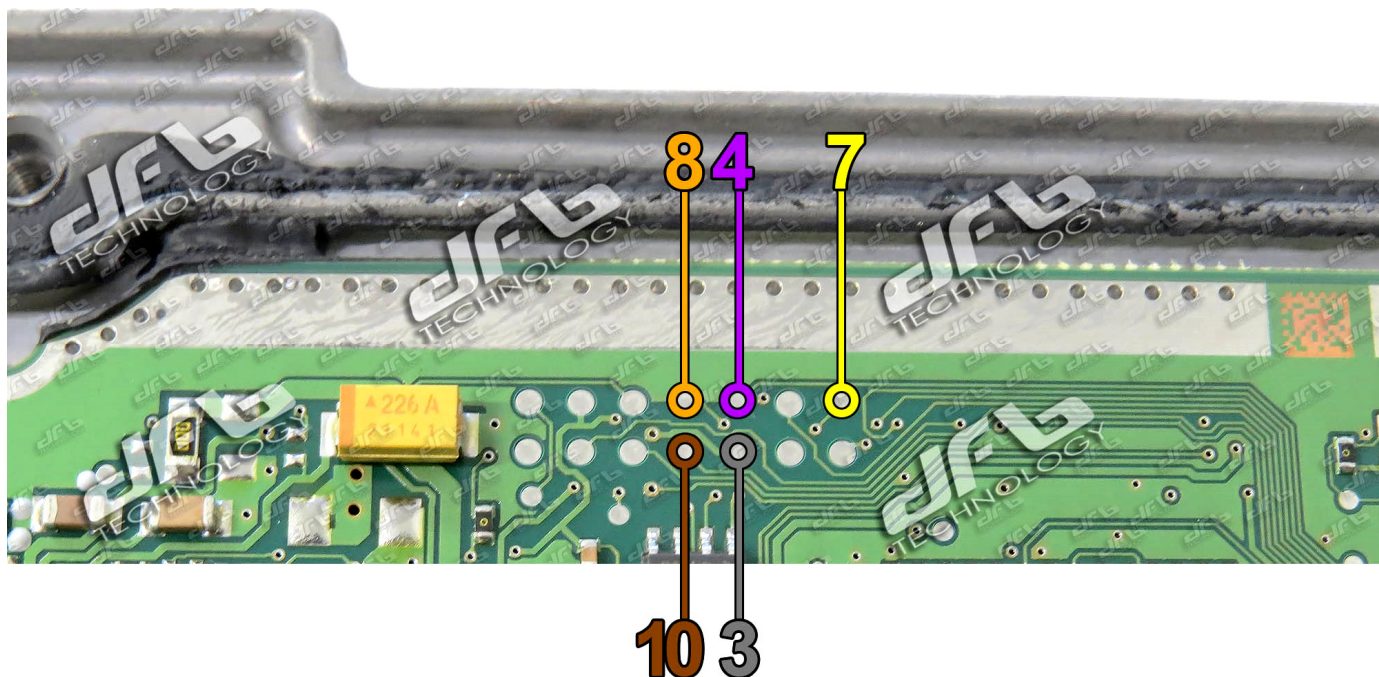

In questo caso alimentare la centralina tramite pinout.

Qui sotto un esempio di connessione:

In this case give power to the control unit via pinout.

Below is a connection example:



Per leggere e scrivere utilizzare il seguente driver:

- BDM / JTAG MODE
- BDM MPC
- MPC 55x/56x

To read and write use the following driver:

- BDM/ JTAG MODE
- BDM MPC
- MPC55x/56x