


In case the ECU is not recognised..

STEP 1: SET

Set the Ecu in Bootmode like in the photo and give the power on.

FASE 1: SET


Mettere la Ecu in Bootmode come in foto e alimentarla.

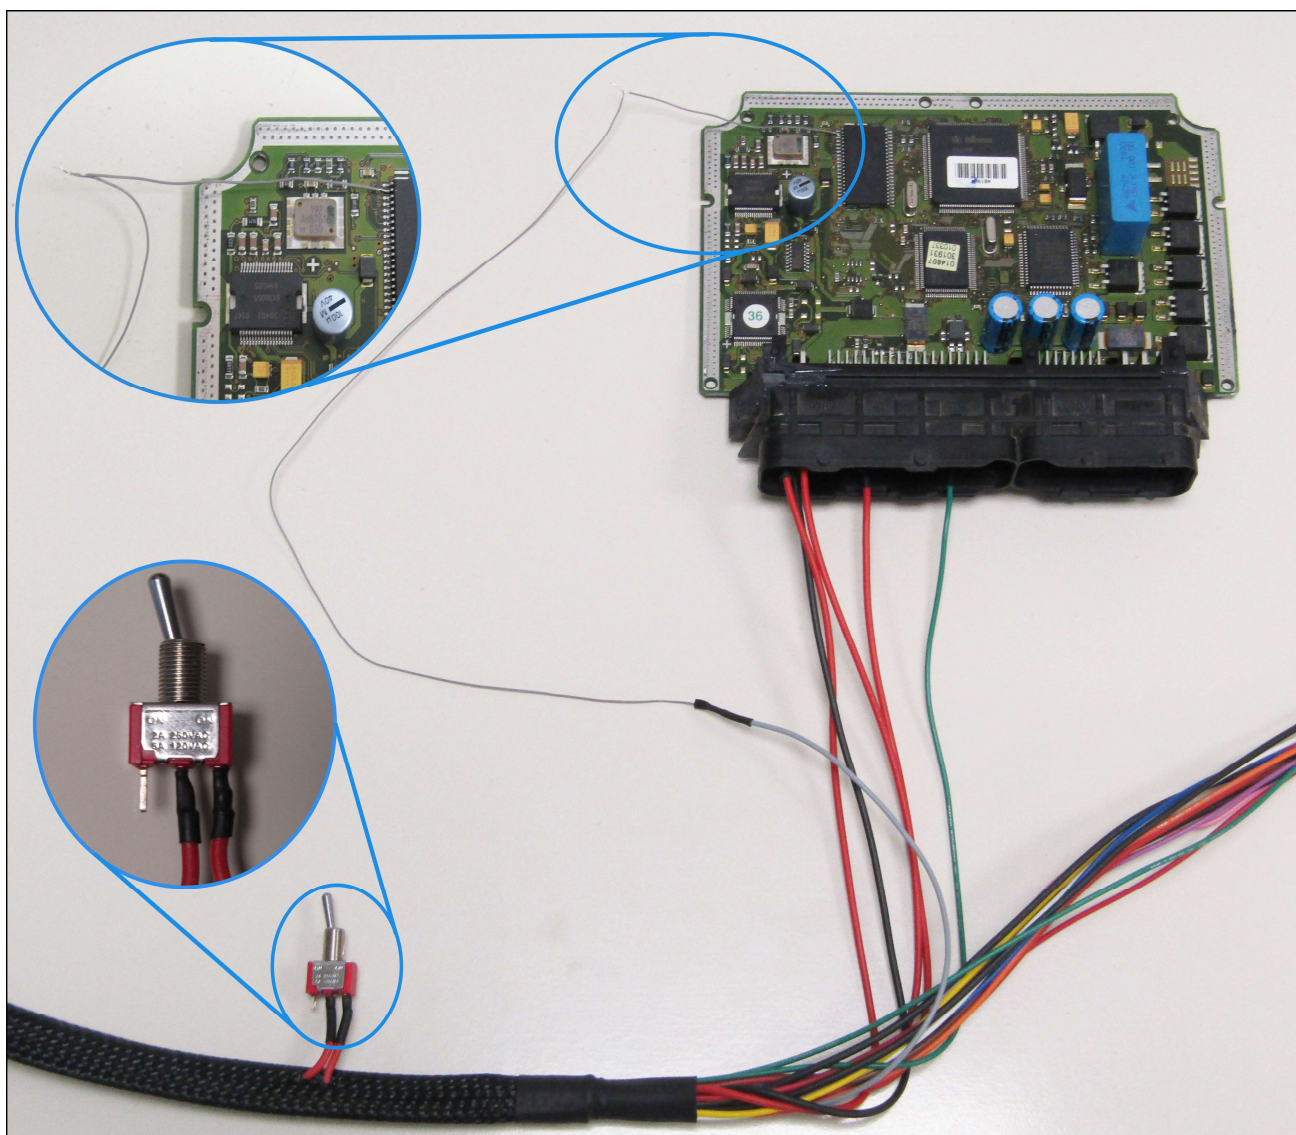

next page...

prossima pagina...

(EN) Remove the gray wire when the ecu is powered up.
(IT) Rimuovere il cavo grigio quando la ecu è alimentata.

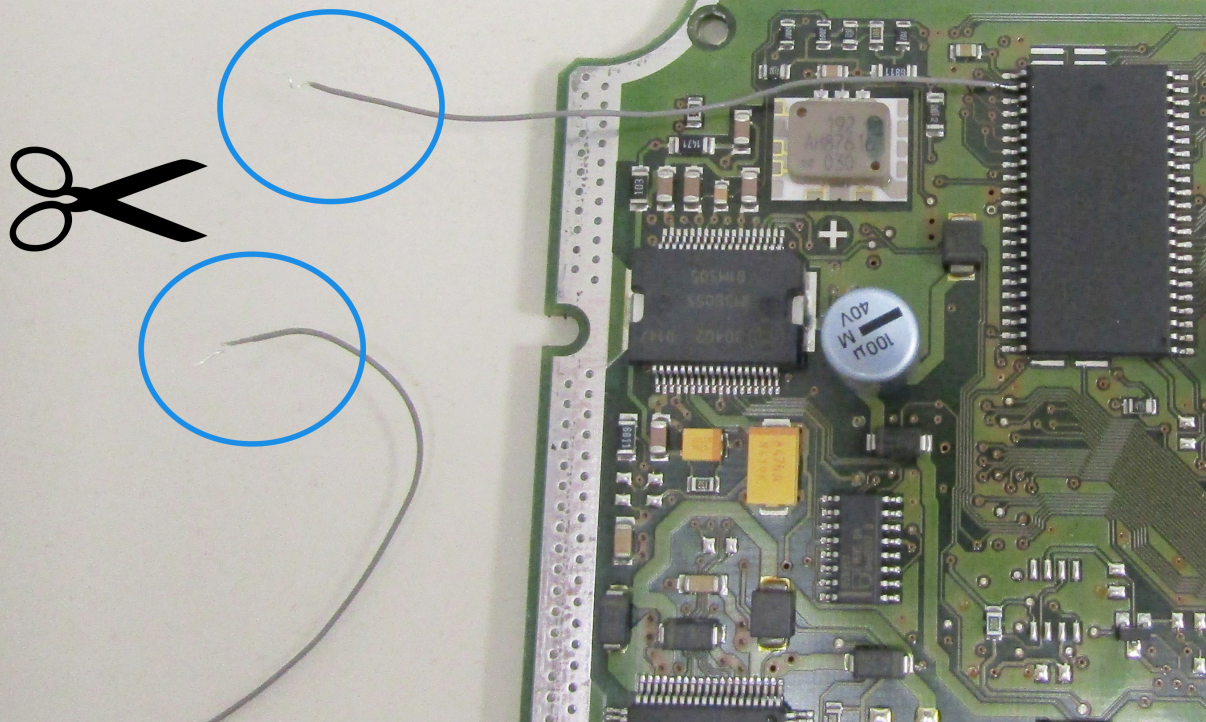

STEP 2: GO

After removing the boot wire it is possible to make the ecu data, read and write.

(Caution) perform this operation every time you turn off the ecu.

FASE 2: VIA LIBERA

Dopo aver rimosso il filo di boot è possibile fare i dati ecu, leggere e scrivere.

(Attenzione) eseguire questa operazione ogni volta che si spegne la ecu.