ECU Vag EDC17 CP04 - TC1796 Internal Flash

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)	STEP 1: (READ/WRITE IN BOOTMODE)
Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver: **BOOT MODE TRICORE SAK TC1796**	Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure. Use the driver: **BOOT MODE TRICORE SAK TC1796**

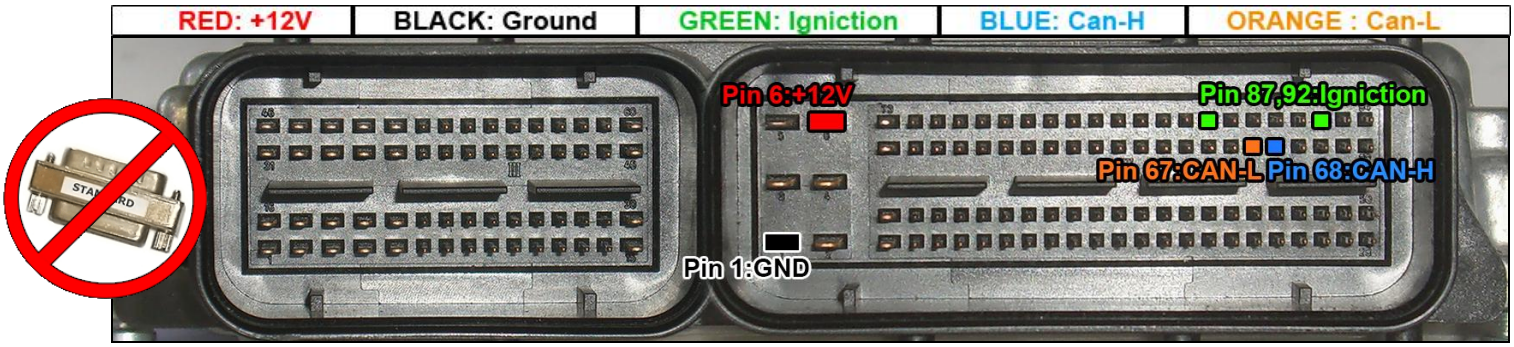

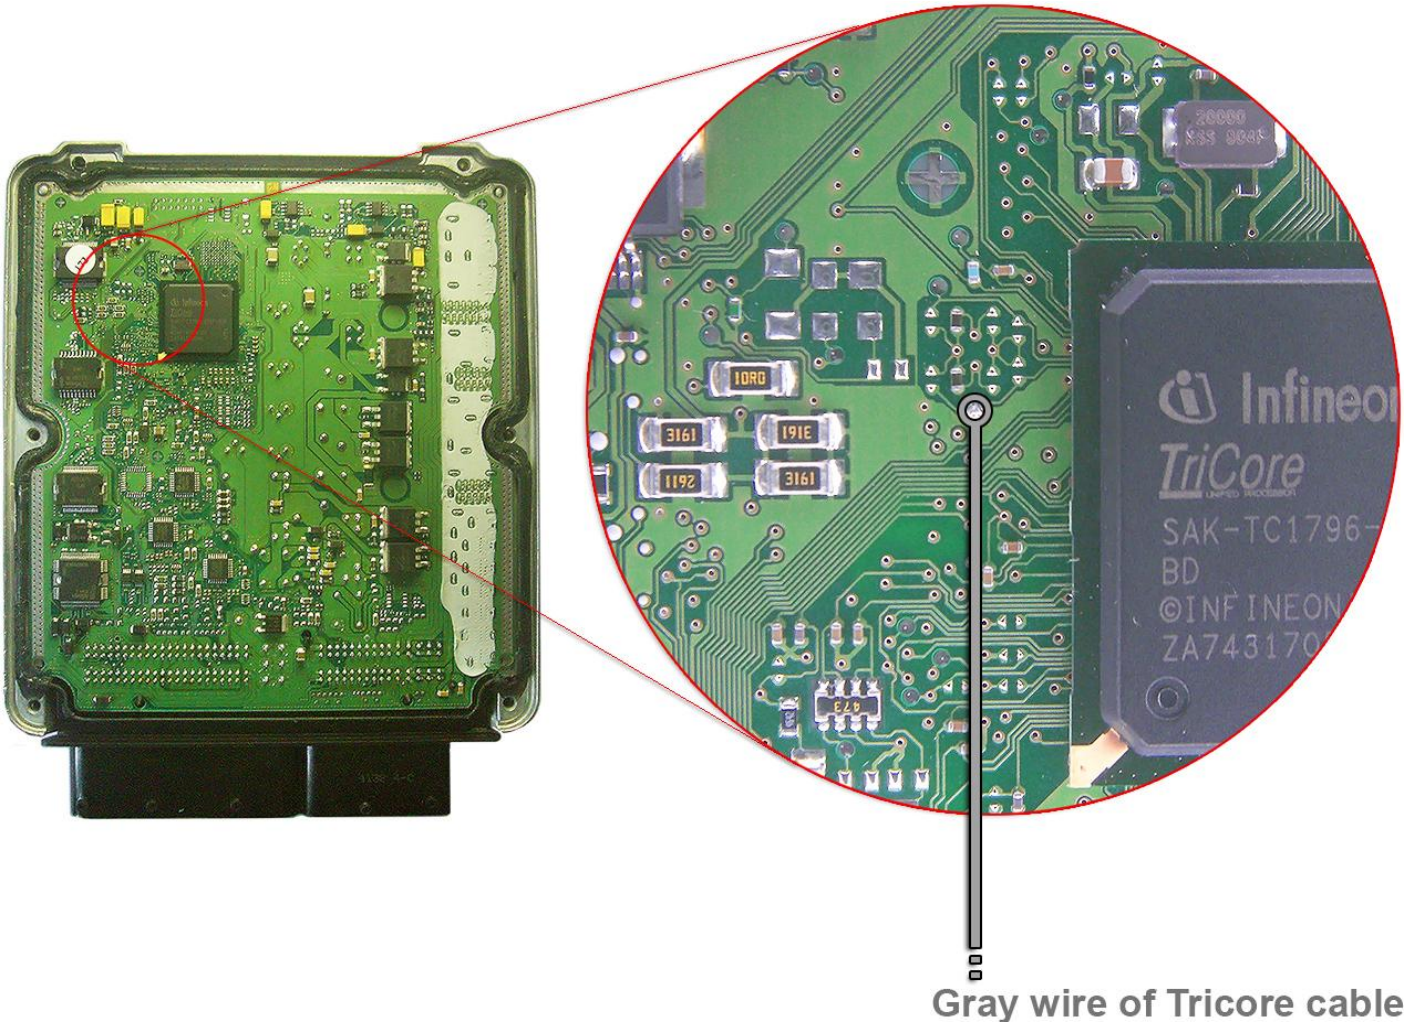

Se a inizio lettura esce il messaggio di errore :	When you start reading if appair the error message:
"ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD" seguire le istruzioni a pagina successiva alla fase 2..	**"ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD"** follow the instructions on next page to step 2…

FASE 2: (RICERCA PASSWORD)	STEP 2: (SEARCH PASSWORD)
Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire sul pinout i fili verdi con dei fili rossi del cavo Tricore come in figura seguente, e utilizzare il driver: **OBD TOOL PASSWORD TPROT V08 VAG**	Unsolder the gray wire to disable the Boot Mode, change on the pinout the green wires with red wires and use the driver: **OBD TOOL PASSWORD TPROT V08 VAG**

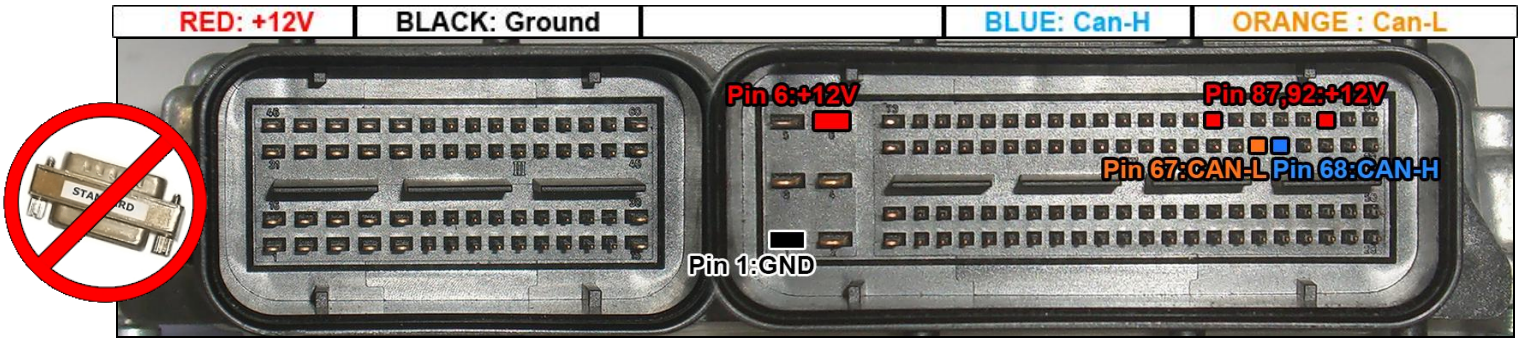

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.	Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1.