PLUGIN 165

ECU CONNECTOR

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU.
Do NOT use this connection for the DIMA.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	CAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

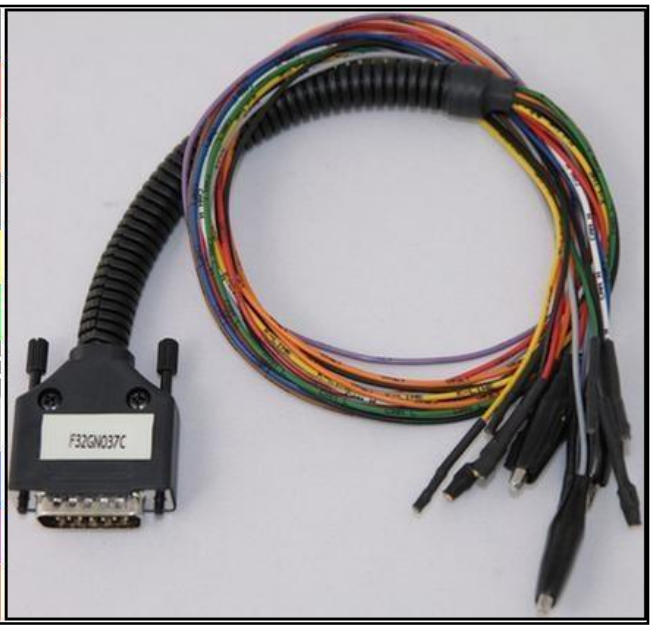

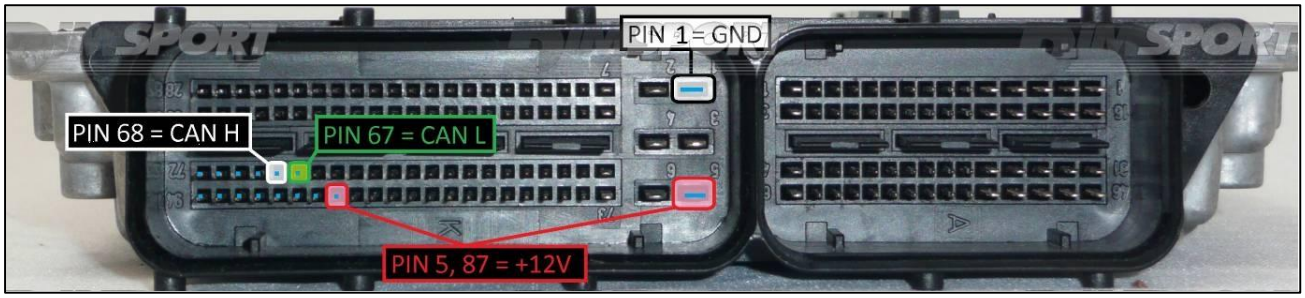

BOOT DIRECT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below :

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	GRIGIO GREY	POL4 BOOT

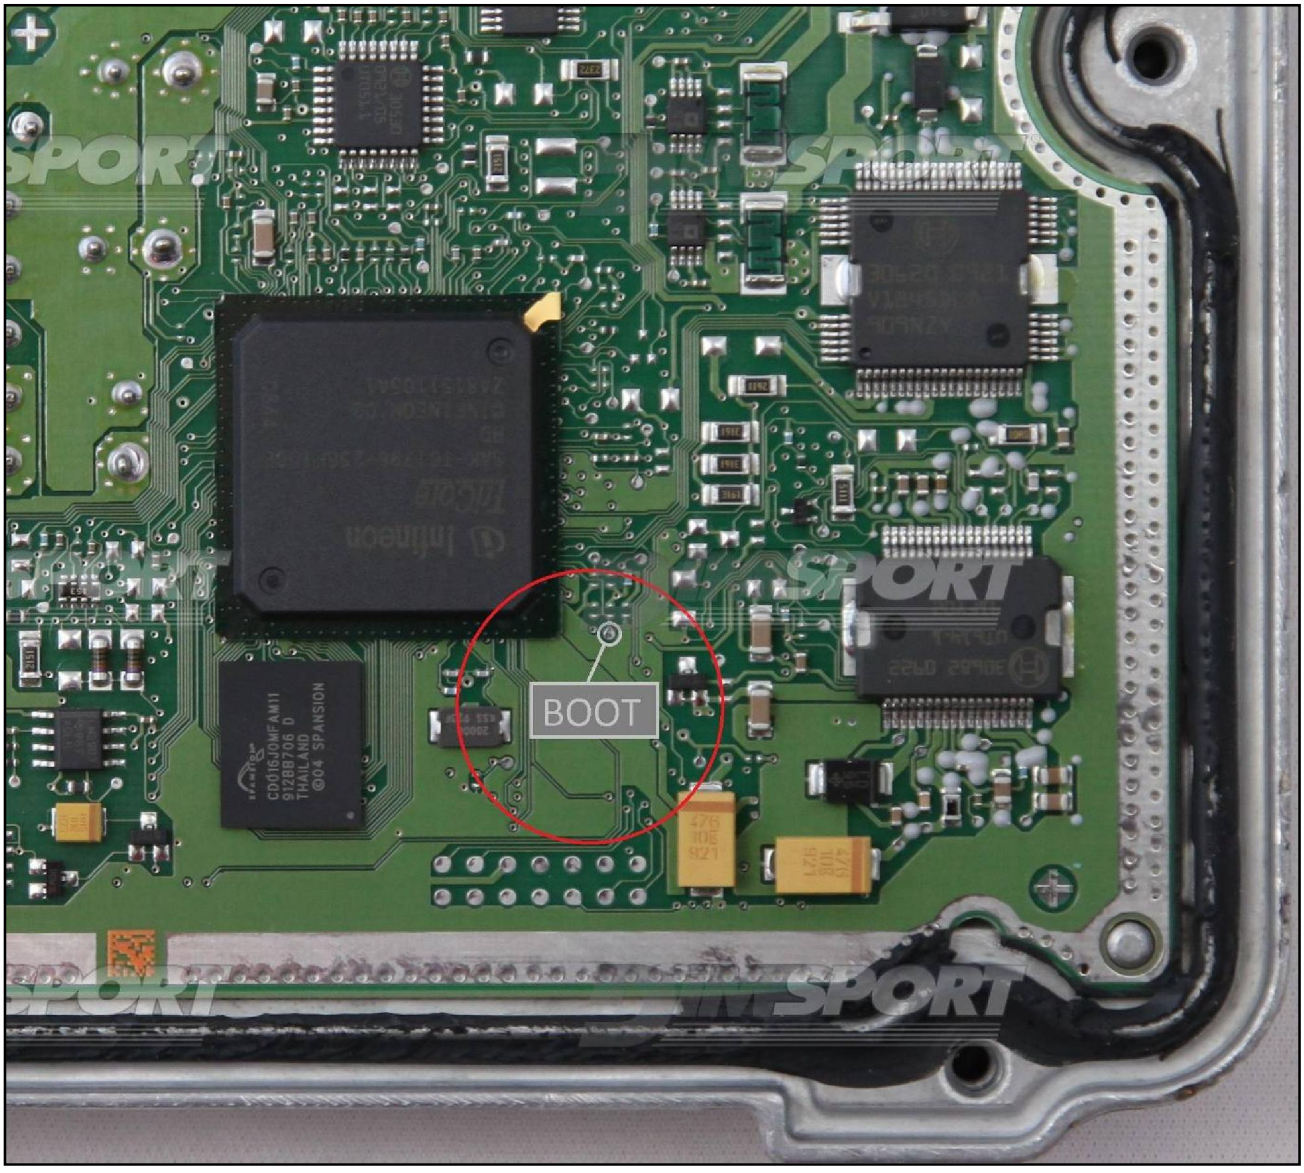

DIMA CONNECTION

Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.

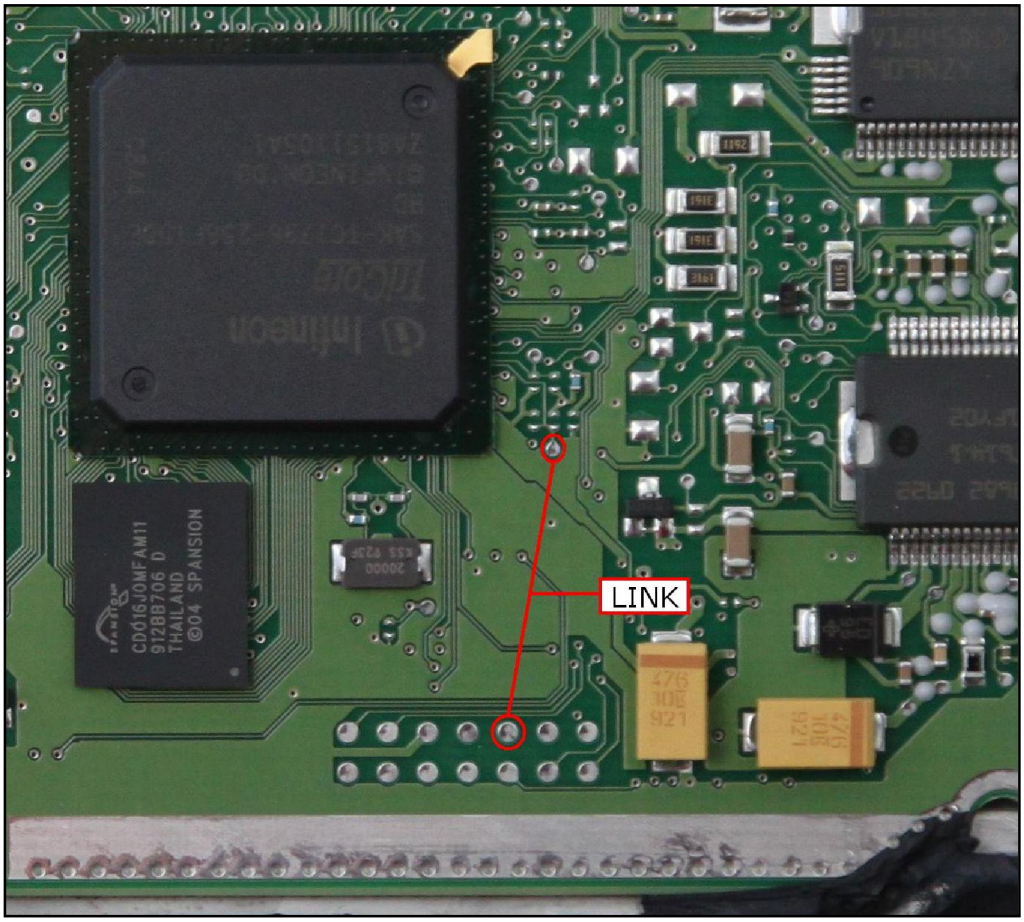

A different solution is to connect the BOOT wire directly to the orange BOOT clamp on the DIMA adapter F34DM011. Check that the yellow BOOT jumper is set in ON position.
Connect the DIMA flat cable to the New Trasdata.
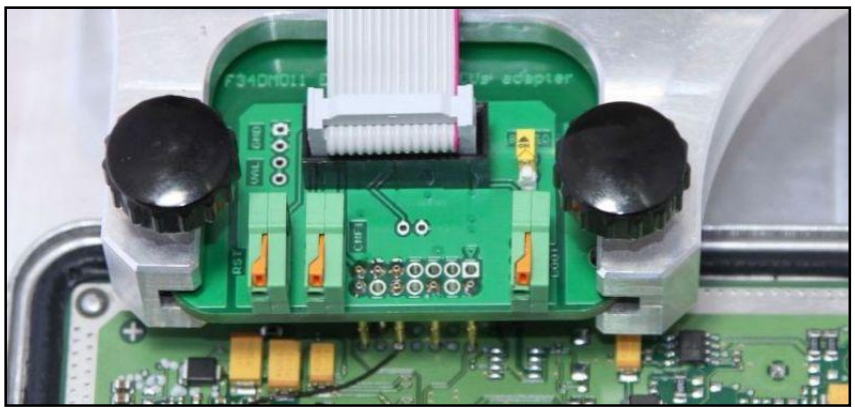
The following picture of the DIMA adapter F34DM011 connection is merely indicative.